

User Manual



ECB600
version 1.0

Dual-Band, Long Range
Wireless N Indoor Access Point/Client Bridge

Table of Contents

1	Introduction	5
1.1	Features and Benefits	6
1.2	Package Contents	7
1.3	System Requirements.....	7
1.4	Applications	8
2	Before you Begin	10
2.1	Considerations for Wireless Installation	10
2.2	Computer Settings (in Windows XP/Windows 7).....	11
2.3	Computer Settings in Apple Mac OS X.....	14
2.4	Hardware Installation.....	15
3	Configuring Your ECB600	18
3.1	Default Settings	18
3.2	Web Configuration.....	19
4	Building a Wireless Network	21
4.1	Access Point Mode	21
4.2	Client Bridge Mode	22
4.3	WDS AP / WDS Station Mode.....	23
4.4	WDS Bridge Mode.....	24
4.5	Repeater mode	25
5	Status	26
5.1	Save/Reload	26
5.2	Main.....	27
5.3	2.4G/5G Wireless Client List.....	30
5.4	2.4G/5G Connection Status.....	31

5.5	2.4G/5G WDS Link List	32
5.6	System Log	33
6	System	34
6.1	Operation Mode.....	34
6.2	IP Settings.....	36
6.3	Spanning Tree Setting.....	38
6.4	Band Steering	40
7	2.4G/5G Wireless.....	41
7.1	Wireless Network	41
7.2	Wireless Security	47
7.3	Site Survey	51
7.4	Wireless MAC Filtering.....	55
7.5	Wireless Advanced Settings.....	57
7.6	WPS (Wi-Fi Protected Setup).....	60
7.7	WDS Link Settings.....	62
8	Management.....	64
8.1	Administration.....	64
8.2	Management VLAN Settings	65
8.3	Wireless Traffic Shaping	74
8.4	SNMP Settings	76
8.5	Backup/Restore.....	78
8.6	Firmware Upgrade.....	79
8.7	Time Settings.....	80
8.8	Schedule.....	81
8.9	CLI Setting	83
8.10	Log.....	84
8.11	Diagnostics.....	85

8.12 Device Discovery 87

8.13 LED Control 88

8.14 Logout..... 89

8.15 Reset..... 90

Appendix A – FCC Interference Statement 91

Appendix B – IC Interference Statement 92

Appendix C – CE Interference Statement..... 94

Revision History

Version	Date	Notes
1.0	2013/03/20	First Release

1 Introduction

The **ECB600** is a high-powered, long-range dual-band concurrent wireless 802.11a/b/g/n access point with six major functional modes. It is designed to operate in numerous environments from large homes, small and medium-sized businesses, multiple-floor offices, hotels and other venues to larger enterprise deployments. Its high-powered, long-range characteristics make it a cost-effective alternative to ordinary access points that don't have the range and reach to connect to a growing number of wireless users who wish to connect to a large home or business network.

The ECB600 supports IEEE 802.11b/g/n standards in the 2.4GHz frequency band while at the same time supporting IEEE 802.11a/n standards in the less congested 5GHz frequency band ideal for streaming or transferring other large files.

The ECB600 delivers up to 6x faster wireless speeds and 7x extended coverage than legacy 802.11a/b/g wireless devices. Even though the ECB600 has been designed and engineered for traffic heavy and demanding business environments it is also quite at home in larger house scenarios because it efficiently extends the wireless range of an existing home router, especially in very architecturally-challenging structures to provide whole home connectivity.

To protect sensitive data during wireless transmissions, the ECB600 offers different encryption settings for wireless transmissions including industry-standard WPA and WPA2 encryption. The ECB600 also includes MAC address filtering to allow network administrators to offer network access only to known computers and other devices based on their MAC addresses.

1.1 Features and Benefits

Features	Benefits
High Speed Data Rate Up to 300 Mbps for each band (2.4GHz / 5GHz)	Capable of handling heavy data payloads such as HD multimedia streaming.
10/100/1000 Gigabit Ethernet	Supports up to 1000Mbps wired networking speed.
IEEE 802.11n Compliant and Backwards Compatible with 802.11 a/b/g devices	Fully compatible with IEEE 802.11 a/b/g/n devices.
Multiple Operation Modes	Allowing users to select any one of the following modes: Access Point, Client Bridge, WDS AP, WDS Bridge, WDS Station and Repeater depending on their specific networking deployment need.
Support Multiple SSIDs in AP mode (up to 8 in each frequency band)	Allows clients to access different networks through a single access point and assign different policies and functions for each SSID through the built-in software.
WPA/WPA2/IEEE 802.1x Support	Supports industry-standard wireless encryption.
MAC Address Filtering in AP Mode	For more secure network connections with known users and devices.
User Isolation Support (AP mode)	Offers an additional layer of protection within the network by isolating specific client users.
Power-over-Ethernet (IEEE802.3at/af)	Allows installers to deploy the ECB600 in locations via a PoE connection (Ethernet cable) where a power outlet may not be available.
Save User Settings	Enables network administrators to save their device settings so firmware upgrades do not permanently delete previous device settings.
SNMP Remote Configuration Management	Allows remote connection to configure or manage the ECB600 easily.
QoS (WMM) support	Prioritizes bandwidth-intensive and sensitive data traffic.

IPv6 Address support	ECB600 supports IPv6, you can use IPv6 address in ECB600.
Band Steering	When Band Steering is activated dual-band client devices are associated to the ECB600 access point on the 5 GHz frequency band.

1.2 Package Contents

The ECB600 package contains the following items (Resellers and dealers require that all items must be in package to issue a refund):

- ECB600 Access Point/Client Bridge
- 12V/2A 100V~240V Power Adapter
- RJ-45 Ethernet LAN Cable
- 2.4 GHz Detachable Antenna x 2
- 5 GHz Detachable Antenna x 2
- Wall Mount Screw Kit
- CD with User's Manual
- Quick Installation Guide

1.3 System Requirements

The following are the Minimum System Requirements in order to configure the device.

- Computer with an Ethernet interface or wireless network capability
- Windows OS (XP, Vista, 7), Mac OS X, or Linux-based operating systems
- Web-Browsing Application (i.e.: Internet Explorer, Firefox, Safari, or other similar browser application)

1.4 Applications

Wireless LAN (WLAN) products are easy to install and highly efficient. The following list describes the benefits of deploying a wireless access point:

a) **Difficult-to-Wire Environments**

There are many situations where wires cannot be installed, deployed easily or cannot be hidden from view. Many older buildings sites, or areas within a building may make the installation of an Ethernet-based LAN impossible, impractical or expensive.

b) **Temporary Workgroups**

A deployed wireless access point or several access points, gives businesses the flexibility to create temporary workgroups/networks in more open areas within a building – auditoriums, amphitheater classrooms, ballrooms, arenas, exhibition centers, and temporary offices.

c) **The Ability to Access Real-Time Information**

Doctors/Nurses, Point-of-Sale Employees, and/or Warehouse Workers can access real-time information on their network via the access point while dealing with patients, serving customers, and/or processing information.

d) **Frequently Changing Environments**

Setting up an access point, like the ECB600, to provide access to a company network or its Internet connection is quick and easy which also makes it ideal for establishing network access in temporary venues like exhibits, special events, or show rooms.

e) **Small Office and Home Office (SOHO) Networks**

A wireless access point, like the ECB600, is ideal for SOHO users who need a cost-effective way to expand their existing network to provide more access for more devices, easy and quick installation of a small network.

f) **Wireless Extensions to Existing Ethernet-based Networks**

Wireless access points, like the ECB600, enable network administrators, installers and end-users to extend the range and reach of an existing Ethernet-based network.

g) Training/Educational Facilities

Training sites at corporations and universities deploy wireless access points to provide connectivity their networks and the Internet connection for their employees and students.

2 Before you Begin

This section will guide you through the installation process. Placement of the EnGenius ECB600 is essential to maximize the access point's performance. Avoid placing the ECB600 in an enclosed space such as a closet, cabinet, or stairwell.

2.1 Considerations for Wireless Installation

Generally, the exact operating distance of a wireless device, like the ECB600, cannot be pre-determined due to a number of unknown variables or obstacles in the environment in which the device will be deployed. These could be the number, thickness, and location of walls, ceilings, elevator shafts, stairwells, or other objects that the device's wireless signals must pass through. Here are some key guidelines to allow the ECB600 to have optimal wireless range.

- Keep the number of walls and/or ceilings between the ECB600 and other network devices to a minimum. Each wall and/or ceiling can reduce the signal strength, resulting in lower signal strength.
- Building materials make a difference. A solid metal door and/or aluminum studs may have a significant negative effect on the signal strength of the ECB600. Locate your wireless devices carefully so the signal can pass through drywall and/or open doorways. Materials such as glass, steel, metal, concrete, water (example: fish tanks), mirrors, file cabinets and/or brick can also diminish wireless signal strength.
- Interference from other electrical devices and/or appliances that generate RF noise can also diminish the ECB600's signal strength. The most common types of devices are microwaves or cordless phones.


2.2 Computer Settings (in Windows XP/Windows 7)

In order to use the ECB600, you must first configure the TCP/IPv4 connection of your Windows OS computer system.

- Click **Start** button and open **Control Panel**.



Windows XP

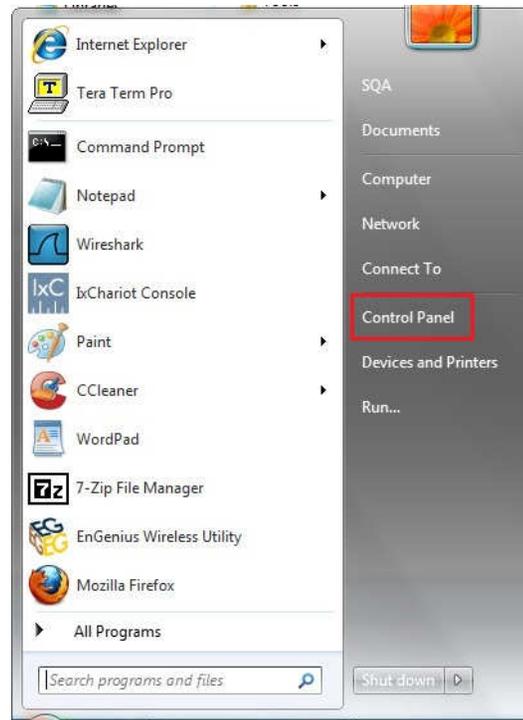


Windows 7


- In **Windows XP**, click **Network Connections**




- In **Windows 7**, click **View Network Status and Tasks** in the **Network and Internet** section, then select **Change adapter settings**

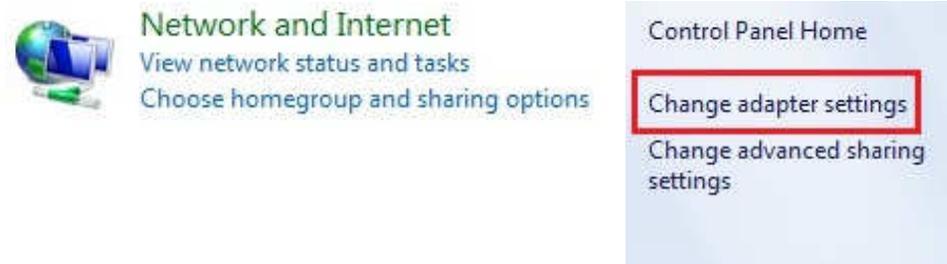

- Right click on **Local Area Connection** and select **Properties**

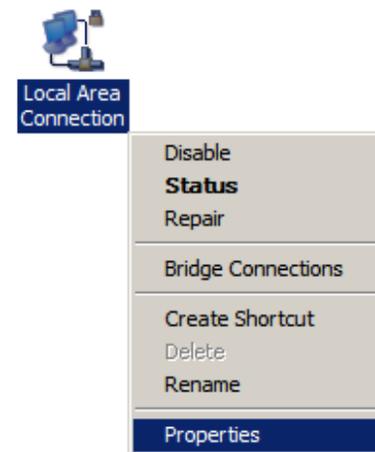

- Select "**Internet Protocol Version 4 (TCP/IPv4)**" and then select **Properties**

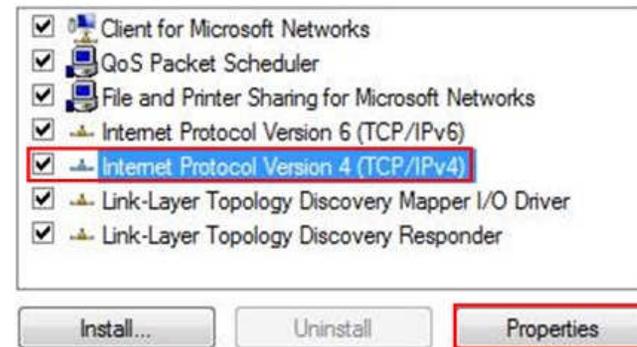


- Select **Use the following IP address** and enter an IP address that is different from the ECB600 and subnet mask then click **OK**.

Note: Ensure that the IP address and subnet mask are on the same subnet as the device.

For example: ECB600 IP address: 192.168.1.1

PC IP address: 192.168.1.2 – 192.168.1.255

PC subnet mask: 255.255.255.0

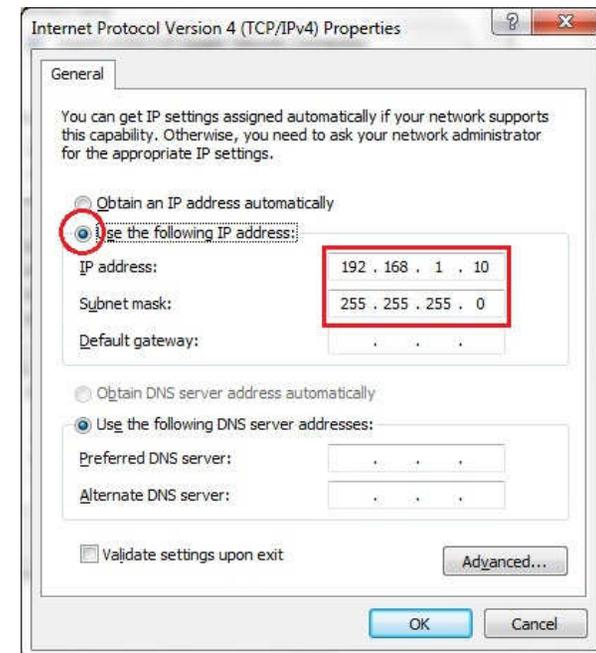

2.3 Computer Settings in Apple Mac OS X

- Go to **System Preferences** (can be opened in the **Applications** folder or selecting it in the Apple Menu)
- Select **Network** in the **Internet & Network** section
- Highlight **Ethernet**
- In **Configure IPv4**, select **Manually**
- Enter an IP address that is different from the ECB600 and subnet mask then press **OK**


Note: Ensure that the IP address and subnet mask are on the same subnet as the device.

For example: ECB600 IP address: 192.168.1.1

PC IP address: 192.168.1.2 – 192.168.1.255

PC subnet mask: 255.255.255.0


- Click **Apply** when done.

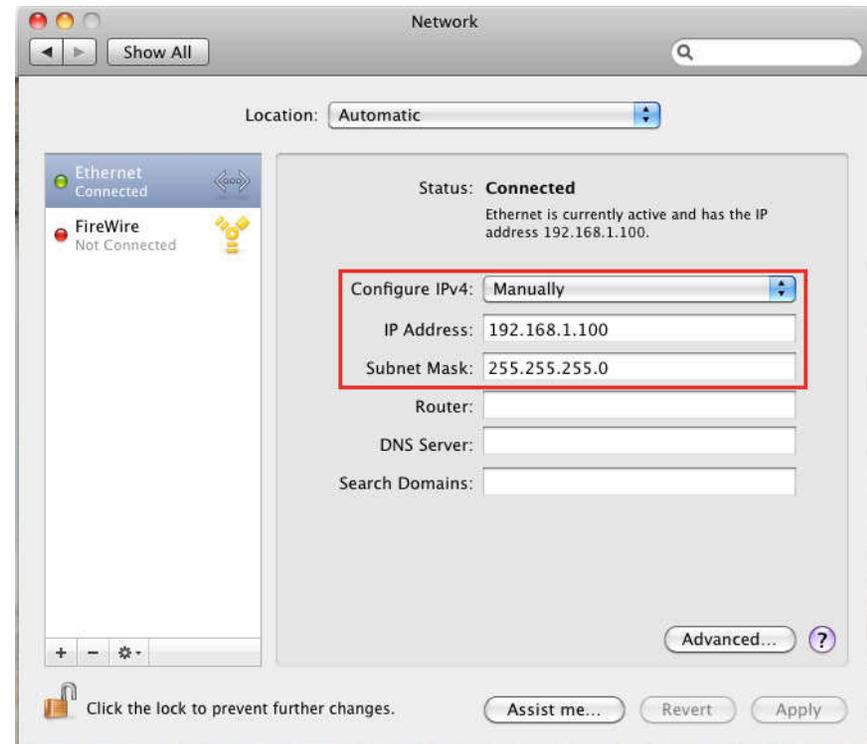


2.4 Hardware Installation

1. Ensure that the computer in use has an available Ethernet (RJ-45) Port. For more information, verify with your computer's user manual.
2. Connect one end of the Category 5e Ethernet cable into the RJ-45 port of the ECB600 and the other end to the RJ-45 port of the computer. Ensure that the cable is securely connected to both the ECB600 and the computer.
3. Connect the Power Adapter DC connector to the DC-IN port of the ECB600 and the Power Adapter to an available electrical outlet. Once both connections are secure, verify the following:
 - a) Ensure that the **POWER** light is on (it will be orange).
 - b) Ensure that the **2.4GHz/5GHz WLAN** light is on (they will be blue).
 - c) Ensure that the **LAN (Computer/ECB600 Connection)** light is on (it will be blue).
 - d) Once all lights are on, proceed to set up the ECB600 using the computer.

This diagram depicts the hardware configuration.

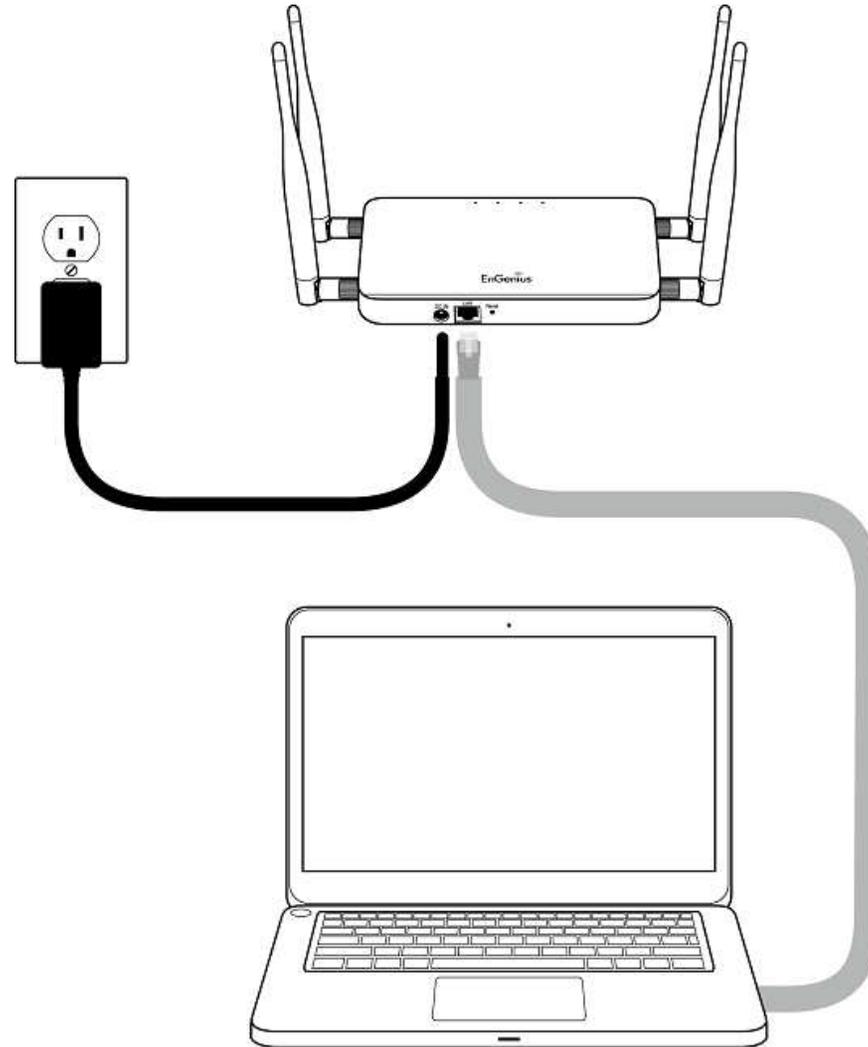

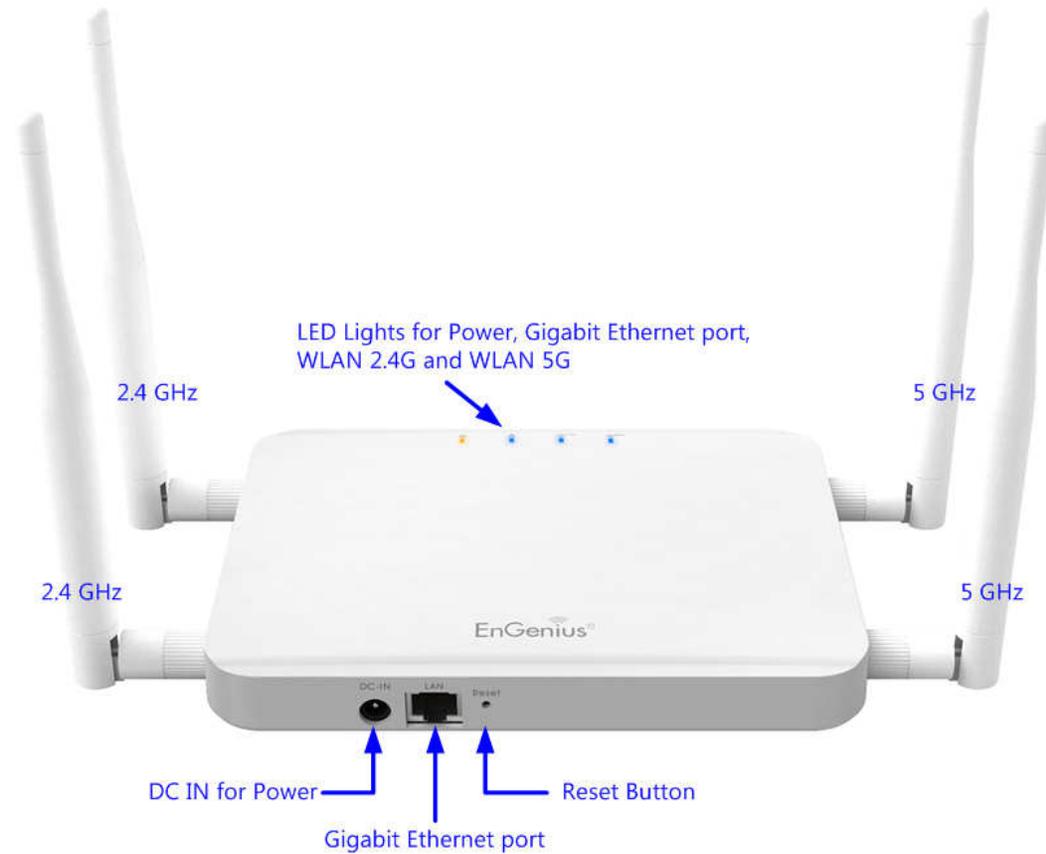

Front Panel	
LED Lights	LED lights for Power, Gigabit Ethernet port, WLAN 2.4G and WLAN 5G.
Rear Panel	
Power	DC IN for Power.
Gigabit Ethernet Port	Gigabit Ethernet port for RJ-45 cable.
Reset Button	One click for reset the device. Press over 10 seconds for reset to factory default.

3 Configuring Your ECB600

This section will show you how to configure the device using the web-based configuration interface.

3.1 Default Settings

Please use your Ethernet port or wireless network adapter to connect the ECB600.


Default Settings

IP Address	192.168.1.1
Username / Password	admin / admin
Operation Mode	AP / AP

3.2 Web Configuration

- Open a web browser (Internet Explorer/Firefox/Safari) and enter the IP Address **http://192.168.1.1**

Note: If you have changed the default LAN IP Address of the Access Point, ensure you enter the correct IP Address.

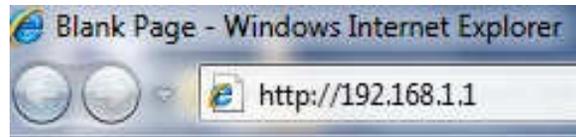

- The default username and password are **admin**. Once you have entered the correct username and password, click the **Login** button to open the web-base configuration page.

A screenshot of the EnGenius login page. The page has a light gray background with a rounded rectangular border. At the top center, the text "EnGenius" is displayed. Below it, there are two input fields: "Username:" with the text "admin" entered, and "Password:" with five black dots. At the bottom, there are two buttons: "Login" and "Reset".

- If successful, you will be logging in and see the ECB600 User Menu.

EnGenius® | Wireless Access Point/Client Bridge

API/AP

Home
Reset

Status

- Save/Reload:0
- Main
- 2.4G Wireless Client List
- 5G Wireless Client List
- System Log

System

- Operation Mode
- IP Settings
- Spanning Tree Settings

2.4G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

5G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

Management

- Administration
- Management VLAN
- Wireless Traffic Shaping
- SNMP Settings
- Backup/Restore Settings
- Firmware Upgrade
- Time Settings
- Schedule
- CLI Settings
- Log
- Diagnostics
- Device Discovery

Main

System Information

Device Name	ECB600
Ethernet MAC Address	00:02:6F:88:55:20
2.4G Wireless MAC Address (SSID/MAC)	1 00:02:6F:88:55:20
	2 02:02:6F:88:55:20
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
5G Wireless MAC Address (SSID/MAC)	1 00:02:6F:88:55:21
	2 N/A
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
Country	N/A
Current Time	Wed Jan 16 05:58:59 UTC 2013
Firmware Version	1.2.9
Management VLAN ID	Untagged

LAN Settings

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Primary DNS	0.0.0.0
Secondary DNS	0.0.0.0
DHCP Client	Disabled
Spanning Tree Protocol	Disabled
IPv6 IP Address	None
IPv6 Link-Local Address	FE80::202:6FFF:FE88:5520
IPv6 Default Gateway	
IPv6 Primary DNS	
IPv6 Secondary DNS	
RX(Packets)	259.19 KB (1994 PKts.)

4 Building a Wireless Network

The ECB600 has the ability to operate in various modes. This chapter describes the operating modes of the ECB600.

4.1 Access Point Mode

In Access Point Mode, ECB600 behaves like a central connection for stations or clients that support IEEE 802.11a/b/g/n networks. The stations and clients must be configured to use the same SSID (Service Set Identifier) and security password to associate with the ECB600. The ECB600 supports up to eight SSIDs at the same time for secure access.




4.2 Client Bridge Mode

In Client Bridge Mode, the ECB600 essentially acts as a wireless adapter that connects to an access point to allow a system wireless access to the network. This mode requires you to connect the Ethernet port on your PC to the ECB600 LAN port. If you use the client bridge operating mode, use the ECB600 Site Survey feature to scan for Access Points within range. When you find an Access Point, configure the ECB600 to use the same SSID and Security Password as the Access Point to associate with it.



4.3 WDS AP / WDS Station Mode


The ECB600 also supports WDS AP mode. This operating mode allows wireless connections to the ECB600 using WDS technology. In this mode, configure the MAC addresses in both Access Points to enlarge the wireless area by enabling WDS Link settings. WDS supports four AP MAC addresses.

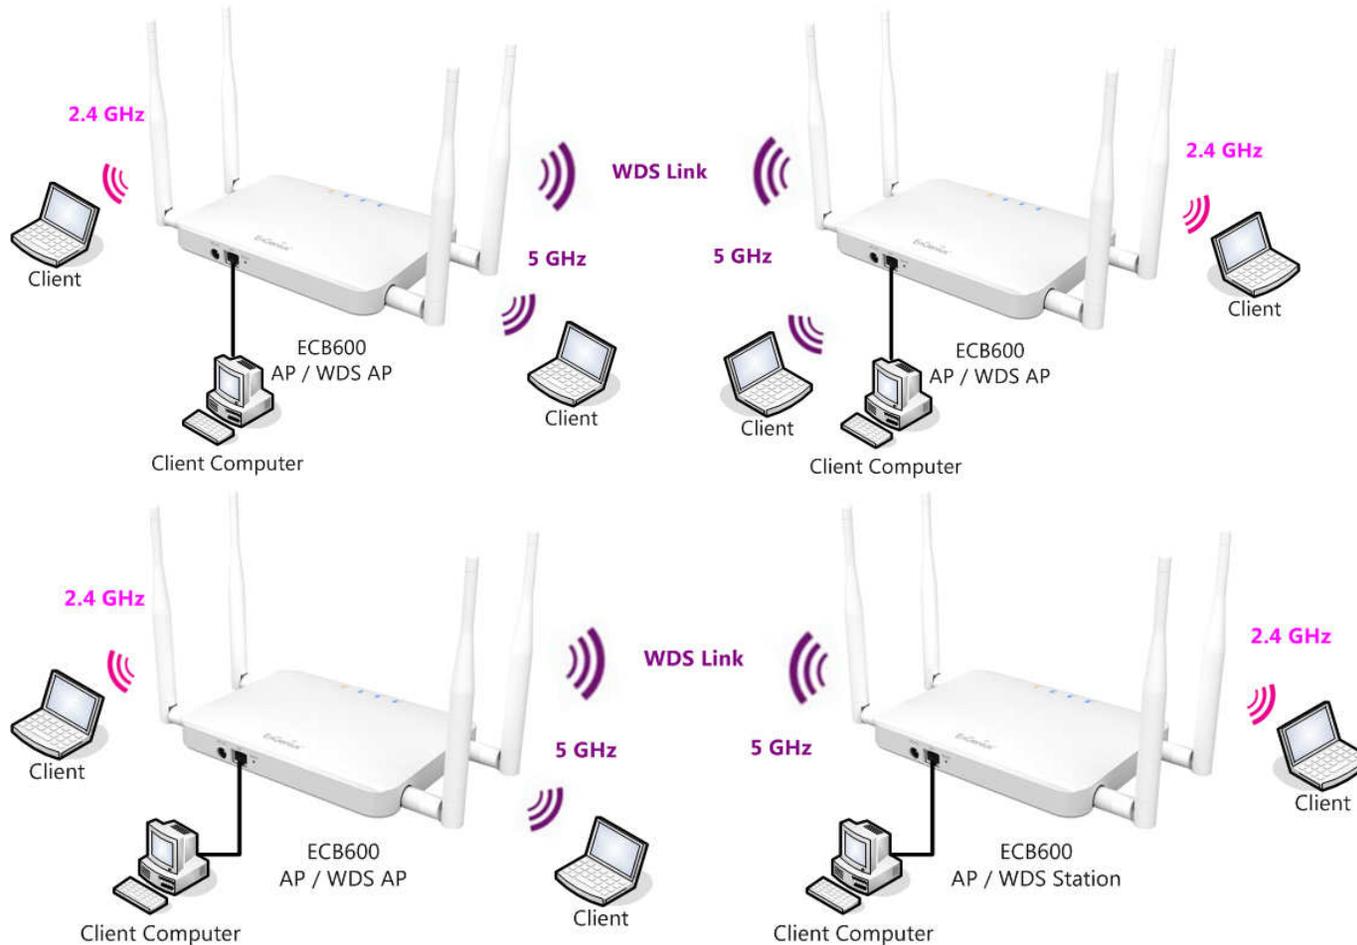

Note: WDS Station Mode does not support Access Point feature.

4.4 WDS Bridge Mode

In WDS Bridge Mode, the ECB600 can wirelessly connect different LANs by configuring the MAC address and security settings of each ECB600 device. Use this mode when two wired LANs located a small distance apart want to communicate with each other. The best solution is to use the ECB600 to wirelessly connect two wired LANs, as shown in the following figure. WDS Bridge Mode can establish four WDS links, creating a star-like network.

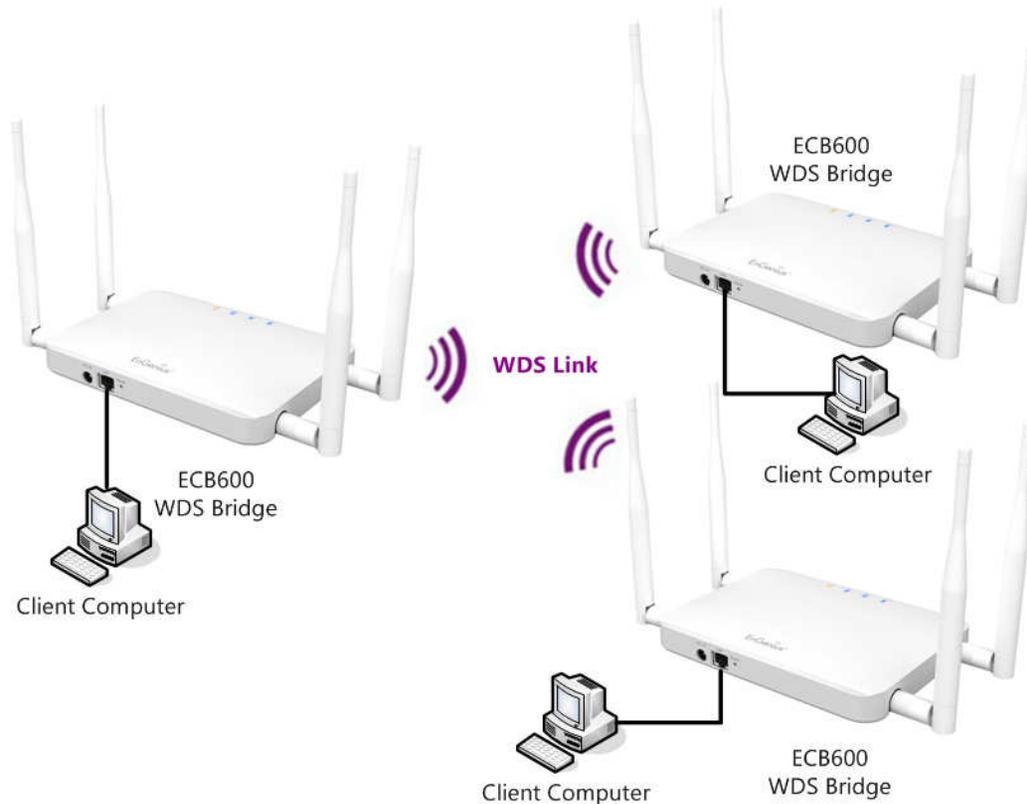

Note: WDS Bridge Mode does not act as an Access Point. Access Points linked by WDS are using the same frequency channel. More Access Points connected together may lower throughput. This configuration can be susceptible to generate endless network loops in your network, so it is recommended to enable the Spanning Tree setting (see 6.3 Spanning Tree Setting, below) to prevent this from happening.

4.5 Repeater mode

The Repeater mode is used to regenerate or replicate signals from a wireless router or other access point/station that is unable to reach certain areas in a building. When this mode is activated in the ECB600, the ECB600 receives the wireless signal from an existing router or AP and relays it to other devices within its range so they can join the network.



5 Status

The **Status** section contains the following options: **Main**, **2.4G/5G Wireless Client List**, **2.4G/5G Connection Status**, **2.4G/5G WDS Link List** and **System Log**.

The following sections describe these options.

5.1 Save/Reload

This page lets you save and apply the settings shown under **Unsaved changes list**, or cancel the unsaved changes and revert them to the previous settings that were in effect.

Save/Reload

[Home](#)[Reset](#)

Unsaved changes list

```
wireless.cfg03378f.ssid=EnGenius
wireless.cfg03378f.encryption=psk2 aes
wireless.cfg03378f.key=12345678
wireless.cfg03378f.bssid=00:02:6F:10:10:14
wireless.cfg03378f.WDScompatibleMTEK=0
wireless.cfg03378f.PreferBSSIDEnable=0
wireless.wifi0.channel=1
```

[Save & Apply](#)[Revert](#)

5.2 Main

Clicking the **Main** link under the **Status** menu or clicking **Home** at the top-right of the ECB600 Page shows the status information about the current operating mode.

- The **System Information** section shows general system information such as Device Name, MAC Address, Current Time, Firmware Version, and Management VLAN ID (**Note:** VLAN ID is only applicable in Access Point / WDS AP mode).

System Information

Device Name	ECB600
Ethernet MAC Address	00:02:6F:53:25:FE
2.4G Wireless MAC Address (SSID/MAC)	1 00:02:6F:53:25:FE
	2 N/A
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
5G Wireless MAC Address (SSID/MAC)	1 00:02:6F:53:25:FF
	2 N/A
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
Country	N/A
Current Time	Wed Nov 28 02:42:31 UTC 2012
Firmware Version	1.2.5
Management VLAN ID	Untagged

- The **LAN Settings** section shows the Local Area Network settings such as the LAN IP Address, Subnet Mask, DNS Address.

LAN Settings

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Primary DNS	0.0.0.0
Secondary DNS	0.0.0.0
DHCP Client	Disabled
Spanning Tree Protocol	Disabled
IPv6 IP Address	None
IPv6 Link-Local Address	FE80::202:6FFF:FE53:25FE
IPv6 Default Gateway	
IPv6 Primary DNS	
IPv6 Secondary DNS	
RX(Packets)	80.9775 KB (712 PKts.)
TX(Packets)	468.795 KB (693 PKts.)

- The **Current 2.4G/5G Wireless Settings** section shows wireless information such as Operating Mode, Frequency, Channel, Distance, RX and TX. Since the ECB600 supports multiple-SSIDs, information about each SSID, the ESSID and security settings, are displayed (**Note:** Profile Settings is only applicable in Access Point / WDS AP mode).

Current 2.4G Wireless Settings

Operation Mode	Access Point
Wireless Mode	802.11 B/G/N Mixed
Channel Bandwidth	20-40 MHz
Frequency/Channel	2.437 GHz (Channel 6)
Profile Settings (SSID/Security/VID/802.1Q)	1 EnGenius5325FE-2.4G/None/1/OFF
	2 N/A
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
Distance	1 Km
RX(Packets)	0 B (0 PKts.)
TX(Packets)	1.74121 KB (9 PKts.)

Current 5G Wireless Settings

Operation Mode	Access Point
Wireless Mode	802.11 A/N Mixed
Channel Bandwidth	20-40 MHz
Frequency/Channel	5.26 GHz (Channel 52)
Profile Settings (SSID/Security/VID/802.1Q)	1 EnGenius5325FF-5G/None/51/OFF
	2 N/A
	3 N/A
	4 N/A
	5 N/A
	6 N/A
	7 N/A
	8 N/A
Distance	1 Km
RX(Packets)	0 B (0 PKts.)
TX(Packets)	30.7793 KB (103 PKts.)

5.3 2.4G/5G Wireless Client List

Clicking the **2.4G/5G Wireless Client List** link under the **Status** menu displays the list of clients associated to the ECB600's 2.4GHz/5GHz, along with the MAC address, TX, RX and signal strength for each client. Clicking **Kick** in the Kick and Ban column removes this client. Clicking **Refresh** updates the client list.

Note: Only applicable in Access Point, WDS AP, and Repeater mode.

2.4G / Client List

[Home](#)
[Reset](#)

SSID:#	MAC Address	TX(Bytes)	RX(Bytes)	RSSI(dBm)	Kick and Ban
SSID1:#1	5c:b5:24:27:b7:0d	3Kb	4Kb	-55	Kick

[Refresh](#)

5G / Client List

[Home](#)
[Reset](#)

SSID:#	MAC Address	TX(Bytes)	RX(Bytes)	RSSI(dBm)	Kick and Ban
SSID51:#1	00:02:6f:03:29:16	6Kb	58Kb	-50	Kick

[Refresh](#)

5.4 2.4G/5G Connection Status

Click on the **2.4G/5G Connection Status** link under the **Status** menu. This page displays the current status of the Network, including Network Type, SSID, BSSID, Connection Status, Wireless Mode, Current Channel, Security, Data Rate, Noise Level, and Signal Strength.

Note: Only applicable in Client Bridge, WDS Station and Repeater mode.

2.4G / Connection Status

[Home](#)
[Reset](#)

Network Type	Repeater
SSID	EnGenius
BSSID	00:02:6F:C7:EB:70
Connection Status	Associated
Wireless Mode	IEEE 802.11b/g/n Mixed
Current Channel	2.412 GHz(Channel 1)
Security	WPA2-PSK AES
Tx Data Rates(Mbps)	300 Mbps
Current noise level	-95 dBm
Signal strength	-52 dBm

5G / Connection Status

[Home](#)
[Reset](#)

Network Type	Repeater
SSID	EnGenius
BSSID	00:02:6F:C7:EB:74
Connection Status	Associated
Wireless Mode	IEEE 802.11n/a Mixed
Current Channel	5.745 GHz(Channel 149)
Security	WPA2-PSK AES
Tx Data Rates(Mbps)	300 Mbps
Current noise level	-95 dBm
Signal strength	-34 dBm

5.5 2.4G/5G WDS Link List

Click on the **2.4G/5G WDS Link List** link under the **Status** menu. This page displays the current status of the WDS link, including WDS Link ID, MAC Address, Link Status and RSSI.

Note: Only applicable in WDS AP and WDS Bridge mode.

2.4G / WDS Link List

[Home](#)[Reset](#)

WDS Link ID	MAC Address	Link Status	RSSI (dBm)
1	00:02:6f:ca:e6:be	UP	-96

[Refresh](#)

5G / WDS Link List

[Home](#)[Reset](#)

WDS Link ID	MAC Address	Link Status	RSSI (dBm)
1	00:02:6f:11:22:33	DOWN	--

[Refresh](#)

5.6 System Log

The ECB600 automatically logs (records) events of possible interest in its internal memory. To view the logged information, click the **System Log** link under the **Status** menu. If there is not enough internal memory to log all events, older events are deleted from the log. When powered down or rebooted, the log will be cleared.

System Log

[Home](#)
[Reset](#)

Show log type: All

```

Nov 28 03:20:01 ECB600 user.notice root: starting ntpd
Nov 28 03:20:01 ECB600 cron.info crond[2112]: crond: USER root pid 1125 cmd . /etc/hotplug.d/iface/2
Nov 28 03:15:02 ECB600 user.notice root: starting ntpd
Nov 28 03:15:02 ECB600 cron.info crond[2112]: crond: USER root pid 1110 cmd . /etc/hotplug.d/iface/2
Nov 28 03:10:02 ECB600 user.notice root: starting ntpd
Nov 28 03:10:01 ECB600 cron.info crond[2112]: crond: USER root pid 1095 cmd . /etc/hotplug.d/iface/2
Nov 28 03:05:01 ECB600 user.notice root: starting ntpd
Nov 28 03:05:01 ECB600 cron.info crond[2112]: crond: USER root pid 1080 cmd . /etc/hotplug.d/iface/2
Nov 28 03:00:01 ECB600 user.notice root: starting ntpd
Nov 28 03:00:01 ECB600 cron.info crond[2112]: crond: USER root pid 1065 cmd . /etc/hotplug.d/iface/2
Nov 28 02:55:01 ECB600 user.notice root: starting ntpd
Nov 28 02:55:01 ECB600 cron.info crond[2112]: crond: USER root pid 1050 cmd . /etc/hotplug.d/iface/2
Nov 28 02:50:01 ECB600 user.notice root: starting ntpd
Nov 28 02:50:01 ECB600 cron.info crond[2112]: crond: USER root pid 3106 cmd . /etc/hotplug.d/iface/2
Nov 28 02:45:01 ECB600 user.notice root: starting ntpd
Nov 28 02:45:01 ECB600 cron.info crond[2112]: crond: USER root pid 3091 cmd . /etc/hotplug.d/iface/2
Nov 28 02:40:01 ECB600 user.notice root: starting ntpd
Nov 28 02:40:01 ECB600 cron.info crond[2112]: crond: USER root pid 2152 cmd . /etc/hotplug.d/iface/2
Nov 28 02:35:01 ECB600 user.notice root: starting ntpd
Nov 28 02:35:01 ECB600 cron.info crond[2112]: crond: USER root pid 2137 cmd . /etc/hotplug.d/iface/2
Nov 28 02:32:55 ECB600 user.warn kernel: End of DFS wait period
Nov 28 02:32:48 ECB600 user.notice root: starting ntpd

```

[Refresh](#)
[Clear](#)

System Log	
Refresh	Update the log.
Clear	Clear the log.

6 System

6.1 Operation Mode

The ECB600 supports six operating modes: Access Point, Client Bridge, WDS AP, WDS Bridge, WDS Station and Repeater.

System Properties

[Home](#)
[Reset](#)

System Properties

Device Name	ECB600 (1 to 32 characters)
Country/Region	Please Select a Country Code ▾
Operation Mode	<p>2.4G Wireless Configuration</p> <p><input checked="" type="radio"/> Access Point</p> <p><input type="radio"/> Client Bridge</p> <p><input type="radio"/> WDS</p> <p><input type="radio"/> Repeater</p> <p>5G Wireless Configuration</p> <p><input checked="" type="radio"/> Access Point</p> <p><input type="radio"/> Client Bridge</p> <p><input type="radio"/> WDS</p> <p><input type="radio"/> Repeater</p>

[Accept](#)
[Cancel](#)

System Properties	
Device Name	Enter a name for the device. The name you type appears in SNMP management. This name is not the SSID and is not broadcast to other devices.
Country/Region	Select a Country/Region to conform to local regulations.
Operation Mode	Use the radio button to select an operating mode.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

Since ECB600 is a dual band device, you can use operating modes which marked with ● concurrently.

2.4GHz 5GHz	Access Point	Client Bridge	WDS AP	WDS Bridge	WDS Station	Repeater
Access Point	●	●	●	●	●	●
Client Bridge	●	X	●	X	X	X
WDS AP	●	●	●	●	●	●
WDS Bridge	●	X	●	X	X	X
WDS Station	●	X	●	X	X	X
Repeater	●	X	●	X	X	X

6.2 IP Settings

This page allows you to modify the device's IP settings.

IP Settings

[Home](#)
[Reset](#)

System Information

IP Network Setting	<input type="radio"/> Obtain an IP address automatically (DHCP) <input checked="" type="radio"/> Specify an IP address
IP Address	192 . 168 . 1 . 1
IP Subnet Mask	255 . 255 . 255 . 0
Default Gateway	192 . 168 . 1 . 1
Primary DNS	0 . 0 . 0 . 0
Secondary DNS	0 . 0 . 0 . 0
Use Link-Local Address	<input checked="" type="checkbox"/>
IPv6 IP Address	<input type="text"/>
IPv6 Subnet Prefix Length	<input type="text"/>
IPv6 Default Gateway	<input type="text"/>
IPv6 Primary DNS	<input type="text"/>
IPv6 Secondary DNS	<input type="text"/>

[Accept](#)
[Cancel](#)

IP Settings

IP Network Setting

Select whether the device IP address will use the static IP address specified in the IP Address

	field or be obtained automatically when the device connects to a DHCP server.
IP Address	The IP Address of this device.
IP Subnet Mask	The IP Subnet Mask of this device.
Default Gateway	The Default Gateway of this device. Leave it blank if you are unsure of this setting.
Primary / Secondary DNS	The primary / secondary DNS address for this device.
Use Link-Local Address	Check this if you want to use Link-Local Address.
IPv6 IP Address	The IPv6 IP Address of this device.
IPv6 Subnet Prefix Length	The IPv6 Subnet Prefix Length of this device.
IPv6 Default Gateway	The IPv6 Default Gateway of this device. Leave it blank if you are unsure of this setting.
IPv6 Primary / Secondary DNS	The primary / secondary DNS address for this device.

6.3 Spanning Tree Setting

This page allows you to modify the Spanning Tree settings. Enabling Spanning Tree protocol will prevent network loops in your LAN network.

Spanning Tree Settings

[Home](#)
[Reset](#)

Spanning Tree Status	<input checked="" type="radio"/> On <input type="radio"/> Off
Bridge Hello Time	<input type="text" value="2"/> seconds (1-10)
Bridge Max Age	<input type="text" value="20"/> seconds (6-40)
Bridge Forward Delay	<input type="text" value="4"/> seconds (4-30)
Priority	<input type="text" value="32768"/> (0-65535)

Spanning Tree	
Spanning Tree Status	Enable or disable the Spanning Tree function.
Bridge Hello Time	Specify Bridge Hello Time, in seconds. This value determines how often the device sends handshake packets to communicate information about the topology throughout the entire Bridged Local Area Network.
Bridge Max Age	Specify Bridge Max Age, in seconds. If another bridge in the spanning tree does not send a hello packet for a long period of time, it is assumed to be dead.
Bridge Forward Delay	Specify Bridge Forward Delay, in seconds. Forwarding delay time is the time spent in each of the Listening and Learning states before the Forwarding state is entered. This delay is provided so that when a new bridge comes onto a busy network, it analyzes data traffic before participating.

Priority	Specify the Priority Number. A smaller number has greater priority.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

6.4 Band Steering

When Band Steering is activated dual-band client devices are associated to the ECB600 access point on the 5 GHz frequency band. Check **Enable** and then click **Save/Apply** to use band steering.

Band Steer

[Home](#)[Reset](#)

Band Steering

NOTE:

2.4G and 5G must have at least one the same SSID and the SSID of 2.4G can not duplicate.

 Enable[Save/Apply](#)[Cancel](#)

7 2.4G/5G Wireless

7.1 Wireless Network

This page displays the current status of the Wireless settings of the ECB600.

Access Point / WDS AP mode:

2.4G / Wireless Network

Home

Reset

Wireless Mode	802.11 B/G/N Mixed ▾
Channel HT Mode	20/40MHz ▾
Extension Channel	Upper Channel ▾
Channel / Frequency	Ch1-2.412GHz ▾ <input checked="" type="checkbox"/> Auto
AP Detection	<input type="button" value="Scan"/>

Current Profiles				
SSID	Security	VID	Enable	Edit
EnGenius5325FE-2.4G	None	1	<input checked="" type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_2-2.4G	None	2	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_3-2.4G	None	3	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_4-2.4G	None	4	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_5-2.4G	None	5	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_6-2.4G	None	6	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_7-2.4G	None	7	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FE_8-2.4G	None	8	<input type="checkbox"/>	<input type="button" value="Edit"/>

5G / Wireless Network

Home

Reset

Wireless Mode	802.11 A/N Mixed ▾
Channel HT Mode	20/40MHz ▾
Extension Channel	Upper Channel ▾
Channel / Frequency	Ch36-5180GHz ▾ <input checked="" type="checkbox"/> Auto
AP Detection	<input type="button" value="Scan"/>

Current Profiles

SSID	Security	VID	Enable	Edit
EnGenius5325FF-5G	None	51	<input checked="" type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_2-5G	None	52	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_3-5G	None	53	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_4-5G	None	54	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_5-5G	None	55	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_6-5G	None	56	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_7-5G	None	57	<input type="checkbox"/>	<input type="button" value="Edit"/>
EnGenius5325FF_8-5G	None	58	<input type="checkbox"/>	<input type="button" value="Edit"/>

2.4G/5G Wireless Network (Access Point / WDS AP mode)

Wireless Mode	Wireless mode supports 802.11b/g/n mixed mode in 2.4G and 802.11a/n mixed mode in 5G.
Channel HT Mode	The default channel bandwidth is 20/40MHz. The larger the channel, the better the transmission quality and speed.
Extension Channel	Select upper or lower channel. Your selection may affect the Auto channel function.
Channel / Frequency	Select the channel and frequency appropriate for your country's regulation.

Auto	Check this option to enable auto-channel selection.
AP Detection	AP Detection can select the best channel to use by scanning nearby areas for Access Points.
Current Profile	Configure up to eight different SSIDs (four in WDS AP mode). If many client devices will be accessing the network, you can arrange the devices into SSID groups. Click Edit to configure the profile and check whether you want to enable extra SSID.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

Note: Only support four SSID in WDS AP mode.

2.4G/5G SSID Profile

2.4G / SSID Profile

Wireless Setting

SSID	EnGenius5325FE-2.4G (1 to 32 characters)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Wireless Security

Security Mode	Disabled ▼
---------------	------------

5G / SSID Profile

Wireless Setting

SSID	EnGenius5325FF-5G (1 to 32 characters)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Wireless Security

Security Mode	Disabled ▼
---------------	------------

2.4G/5G SSID Profile	
SSID	Specify the SSID for the current profile.
Suppressed SSID	Check this option to hide the SSID from clients. If checked, the SSID will not appear in the site survey.
Station Separation	Click the appropriate radio button to allow or prevent communication between client devices.
Wireless Security	See the Wireless Security section.
Save / Cancel	Click Save to accept the changes or Cancel to cancel and return previous settings.

Client Bridge / WDS Station / Repeater mode:**2.4G / Wireless Network**[Home](#)[Reset](#)

Wireless Mode	802.11 B/G/N Mixed ▾
SSID	Specify the static SSID : AP SSID <input type="text"/> (1 to 32 characters) Or press the button to search for any available WLAN Service. <input type="button" value="Site Survey"/>
Repeater SSID	AP SSID <input type="text"/> (1 to 32 characters)
Prefered BSSID	<input type="checkbox"/> <input type="text"/> : <input type="text"/>

Wireless Security

Changing the wireless security settings may cause this wireless client to associate with a different one. This may temporarily disrupt your configuration session.

Security Mode ▾

5G / Wireless Network[Home](#)[Reset](#)

Wireless Mode	802.11 A/N Mixed ▾
SSID	Specify the static SSID : AP SSID <input type="text"/> (1 to 32 characters) Or press the button to search for any available WLAN Service. <input type="button" value="Site Survey"/>
Repeater SSID	AP SSID <input type="text"/> (1 to 32 characters)
Prefered BSSID	<input type="checkbox"/> <input type="text"/> : <input type="text"/>

Wireless Security

Changing the wireless security settings may cause this wireless client to associate with a different one. This may temporarily disrupt your configuration session.

Security Mode ▾

2.4G/5G Wireless Network (Client Bridge / WDS Station / Repeater mode)	
Wireless Mode	Wireless mode supports 802.11b/g/n mixed mode in 2.4G and 802.11a/n mixed mode in 5G.
SSID	The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters. You may specify an SSID or select one from the Site Survey .
Site Survey	Click on Site Survey to search the existing Access Points.
Preferred SSID	Specify the SSID for the repeater. It can be different from Access Point's SSID. (Note: Only in Repeater mode)
Preferred BSSID	Specify the BSSID (Access Point's MAC Address).
Wireless Security	The encryption is using. It must the same as Access Point's encryption.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

7.2 Wireless Security

The Wireless Security section lets you configure the ECB600's security modes: WEP, WPA-PSK, WPA2-PSK, WPA-PSK Mixed, WPA, WPA2, and WPA Mixed. It is strongly recommend to use WPA2-PSK.

WEP Encryption:

Wireless Security

Security Mode	WEP ▾
Auth Type	Open System ▾
Input Type	Hex ▾
Key Length	40/64-bit (10 hex digits or 5 ASCII char) ▾
Default Key	1 ▾
Key1	1234567890
Key2	
Key3	
Key4	

WEP Encryption	
Auth Type	Select Open System or Shared Key .
Input type	ASCII: Regular Text (recommended) HEX: Hexadecimal Numbers (For advanced users)
Key Length	Select the desired option and ensure the wireless clients use the same setting. Choices are 64, 128, 152-bit password lengths.
Default Key	Select the key you wish to be default. Transmitted data is ALWAYS encrypted using the Default

	Key; the other Keys are for decryption only. You must enter a Key Value for the Default Key .
Encryption Key #	Enter the key value or values you wish to use. Only the Key selected as Default is required. The others are optional.

WPA-PSK (WPA Pre-Shared Key) Encryption:

Wireless Security

Security Mode	WPA-PSK Mixed ▾
Encryption	Both(TKIP+AES) ▾
Passphrase	12345678 (8 to 63 characters) or (64 Hexadecimal characters)
Group Key Update Interval	3600 seconds(30~3600, 0: disabled)

WPA-PSK (WPA Pre-Shared Key) Encryption	
Encryption	Select the WPA encryption type you would like. Please ensure that your wireless clients use the same settings.
Passphrase	Wireless clients must use the same key to associate the device. If using ASCII format, the Key must be from 8 to 63 characters in length. If using HEX format, the Key must be 64 HEX characters in length.
Group Key Update Interval	Specify how often, in seconds, the group key changes.

WPA Encryption: Only in Access Point / WDS AP mode

Wireless Security

Security Mode	WPA Mixed ▾
Encryption	Both(TKIP+AES) ▾
Radius Server	<input type="text"/>
Radius Port	1812 <input type="text"/>
Radius Secret	<input type="text"/>
Group Key Update Interval	3600 <input type="text"/> seconds(30~3600, 0: disabled)
Radius Accounting	Enable ▾
Radius Accounting Server	<input type="text"/>
Radius Accounting Port	1813 <input type="text"/>
Radius Accounting Secret	<input type="text"/>
Interim Accounting Interval	600 <input type="text"/> seconds(60~600)

WPA Encryption	
Encryption	Select the WPA encryption type you would like. Please ensure that your wireless clients use the same settings.
Radius Server	Enter the IP address of the Radius server.
Radius Port	Enter the port number used for connections to the Radius server.
Radius Secret	Enter the secret required to connect to the Radius server.
Group Key Update Interval	Specify how often, in seconds, the group key changes.
Radius Accounting	Enable or disable accounting feature.
Radius Accounting Server	Enter the IP address of the Radius accounting server.
Radius Accounting Port	Enter the port number used for connections to the Radius accounting server.

Radius Accounting Secret	Enter the secret required to connect to the Radius accounting server.
Interim Accounting Interval	Specify how often, in seconds, the accounting data sends.

Note: 802.11n does not allow WEP/WPA-PSK TKIP/WPA2-PSK TKIP security mode. The connection mode will automatically change from 802.11n to 802.11a/g.

WPA Encryption: Client Bridge / WDS Station mode

Wireless Security

Changing the wireless security settings may cause this wireless client to associate with a different one. This may temporarily disrupt your configuration session.

Security Mode	WPA2 ▾
Encryption	AES ▾
EAP Method	PEAP ▾
EAP Authentication	MS-CHAP ▾
Authentication Identity	<input type="text"/> (1 to 32 characters)
Authentication Password	<input type="password"/> (1 to 32 characters)

WPA Encryption	
Encryption	Select the WPA encryption type: TKIP or AES .
EAP Method	Select EAP Method: PEAP or TTLS .
EAP Authentication	Select EAP Authentication: MS-CHAP or MS-CHAPV2 .
Authentication Identity	Enter the Identity required for the Radius server.
Authentication Password	Enter the Password required for the Radius server.

7.3 Site Survey

Use this feature to scan for nearby access points.

Note: Only applicable in Client Bridge, WDS Station and Repeater mode.

1. Click **Site Survey**.

Wireless Network

[Home](#)[Reset](#)

Wireless Mode	802.11 B/G/N Mixed ▾
SSID	Specify the static SSID : AP SSID <input type="text"/> (1 to 32 characters) Or press the button to search for any available WLAN Service. <input type="button" value="Site Survey"/>
Preferred BSSID	<input type="checkbox"/> <input type="text"/> : <input type="text"/>

Wireless Security

Changing the wireless security settings may cause this wireless client to associate with a different one. This may temporarily disrupt your configuration session.

Security Mode	Disabled ▾
---------------	------------

2. Scanning for the nearby access points

Scanning

Please wait...

3. The ECB600 will list the available access points after site survey.

Site Survey

2GHz Site Survey

:Infrastructure :Ad_hoc

BSSID	SSID	Channel	Signal Level	Type	Security	Mode
00:02:6F:B9:3A:30	SQA-ADSL	1	-66 dBm	11g/n	WPA2-PSK	
00:0C:F6:54:A9:79		6	-72 dBm	11g/n	WPA2-PSK	
00:02:6F:9C:3D:84	EnGenius9C3D84	11	-85 dBm	11b/g	WPA-PSK	
00:03:7F:BE:F2:25	ADDA_TEST	11	-84 dBm	11g/n	WPA/WPA2-PSK	
00:03:7F:BE:F0:C0	EAP350- antennatesting	11	-52 dBm	11g/n	WPA2-PSK	
00:02:6F:10:10:14	EnGenius	4	-38 dBm	11g/n	WPA2-PSK	
00:02:6F:51:F9:38	EnGenius51F938	11	-79 dBm	11g/n	none	
00:02:6F:B3:4F:38	SENAOWL	1	-83 dBm	11g/n	WEP	
00:02:6F:6D:0B:EF	yenger	4	-83 dBm	11b/g	WEP	
06:03:7F:BE:F1:1D	EnGenius2	6	-89 dBm	11g/n	none	
00:1B:11:62:71:C3	dlink	2	-90 dBm	11g/n	none	
00:40:05:C7:49:4C	default	6	-90 dBm	11b	none	

Refresh

Site Survey (Client Bridge / WDS Station / Repeater mode)	
BSSID	Access Point's wireless MAC address.
SSID	SSID that the Access Point is broadcasting.
Channel	Channel that the Access Point is using.
Signal Level (dBm)	Signal strength from the Access Point to your station.
Type	The band that the Access Point is using.
Security	Encryption method that the Access Point is using to secure data over the WLAN.
Refresh	Click Refresh to rescan nearby Access Point.

4. Select an Access Point and click that Access Point's BSSID.

Site Survey

2GHz Site Survey :Infrastructure :Ad_hoc

BSSID	SSID	Channel	Signal Level	Type	Security	Mode
00:02:6F:B9:3A:30	SQA-ADSL	1	-66 dBm	11g/n	WPA2-PSK	i
00:0C:F6:54:A9:79		6	-72 dBm	11g/n	WPA2-PSK	i
00:02:6F:9C:3D:84	EnGenius9C3D84	11	-85 dBm	11b/g	WPA-PSK	i
00:03:7F:BE:F2:25	ADDA_TEST	11	-84 dBm	11g/n	WPA/WPA2-PSK	i
00:03:7F:BE:F0:C0	EAP350-antennatesting	11	-52 dBm	11g/n	WPA2-PSK	i
00:02:6F:10:10:14	EnGenius	4	-38 dBm	11g/n	WPA2-PSK	i
00:02:6F:51:F9:38	EnGenius51F938	11	-79 dBm	11g/n	none	i
00:02:6F:B3:4F:38	SENAOWL	1	-83 dBm	11g/n	WEP	i
00:02:6F:6D:0B:EF	yenger	4	-83 dBm	11b/g	WEP	i
06:03:7F:BE:F1:1D	EnGenius2	6	-89 dBm	11g/n	none	i
00:1B:11:62:71:C3	dlink	2	-90 dBm	11g/n	none	i
00:40:05:C7:49:4C	default	6	-90 dBm	11b	none	i

Refresh

5. Enter the correct security setting and then click **Accept**.

Wireless Network

[Home](#)[Reset](#)

Wireless Mode	802.11 B/G/N Mixed ▾
SSID	Specify the static SSID : EnGenius (1 to 32 characters) Or press the button to search for any available WLAN Service. Site Survey
Preferred BSSID	<input type="checkbox"/> 00 : 02 : 6F : 10 : 10 : 14

Wireless Security

Changing the wireless security settings may cause this wireless client to associate with a different one. This may temporarily disrupt your configuration session.

Security Mode	WPA2-PSK ▾
Encryption	AES ▾
Passphrase	12345678 (8 to 63 characters) or (64 Hexadecimal characters)

[Accept](#)[Cancel](#)

7.4 Wireless MAC Filtering

Wireless MAC Filtering is used to allow or deny network access to wireless clients (computers, tablet PCs, NAS, smartphones, etc.) according to their MAC addresses. You can manually add a MAC address to restrict the permission to access ECB600. The default setting is **Disable Wireless MAC Filter**.

Note: Only applicable in Access Point, WDS AP and Repeater mode.

2.4G / Wireless MAC Filter

[Home](#)
[Reset](#)

 ACL Mode
 : : : : :

#	MAC Address	
1	00:02:6F:30:9A:12	<input type="button" value="Delete"/>

5G / Wireless MAC Filter

[Home](#)
[Reset](#)

 ACL Mode
 : : : : :

#	MAC Address	
---	-------------	--

Wireless MAC Filter (Access Point / WDS AP / Repeater mode)	
ACL Mode	Determines whether network access is granted or denied to clients whose MAC addresses appear in the MAC Address table on this page. Choices are: Disabled , Deny MAC in the list , or Allow MAC in the list .
MAC Address	Enter the MAC address of the wireless client.
Add	Click Add to add the MAC address to the MAC Address table.
Delete	Delete the selected entries.
Apply	Click Apply to apply the changes.

7.5 Wireless Advanced Settings

This page allows you to configure wireless advance settings. It is recommended that the default settings are used unless the user has experience with more advanced networking features.

2.4G / Wireless Advanced Settings

[Home](#)
[Reset](#)

Data Rate	Auto
Transmit Power	20 dBm <input type="checkbox"/> Obey Regulatory Power
RTS/CTS Threshold (1 - 2346)	2346 bytes
Distance (1-30km)	1 km
Aggregation:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable 32 Frames 50000 Bytes(Max)

WMM Parameters

AC_BE	4	10	3	0
AC_BK	4	10	7	0
AC_VI	3	4	2	3.008ms
AC_VO	2	3	2	1.504ms

Client limit

Frequency	Enable	Max Client
2.4G	<input checked="" type="checkbox"/>	127

[Accept](#)
[Cancel](#)

5G / Wireless Advanced Settings

Home

Reset

Data Rate	Auto
Transmit Power	20 dBm <input type="checkbox"/> Obey Regulatory Power
RTS/CTS Threshold (1 - 2346)	2346 bytes
Distance (1-30km)	1 km
Aggregation:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable 32 Frames 50000 Bytes(Max)

WMM Parameters

AC_BE	4	10	3	0
AC_BK	4	10	7	0
AC_VI	3	4	2	3.008ms
AC_VO	2	3	2	1.504ms

Client limit

Frequency	Enable	Max Client
5G	<input checked="" type="checkbox"/>	127

Accept

Cancel

2.4G/5G Wireless Advanced

Data Rate	Select a data rate from the drop-down list. The data rate affects throughput of data in the ECB600. The lower the data rate, the throughput will be lower, but so will the transmission distance.
Transmit Power	Set the power output of the wireless signal.
RTS/CTS Threshold	Specify the threshold package size for RTC/CTS. A small number causes RTS/CTS packets to be sent more often and consumes more bandwidth.
Distance	Specify the distance between Access Points and clients. Longer distances may drop high-speed connections.

Aggregation	Merges data packets into one packet. This option reduces the number of packets, but increases packet sizes.
WMM Parameters	WMM (Wi-Fi Multimedia) manages the priority of audio, video and voice data over a Wi-Fi network so that data from other applications are less likely to interfere with transmission. The parameters CWmin, CWmax and AIFS together control the priority of the four access categories (AC). Note: Only applicable in Access Point and WDS AP mode.
Client Limit	Check Enable and enter a number to limit the maximum client connection (The maximum is 127). Note: Only applicable in Access Point, WDS AP and Repeater mode.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

Note: **WMM Parameters** is only applicable in Access Point and WDS AP mode.

Client Limit is only applicable in Access Point, WDS AP and Repeater mode.

7.6 WPS (Wi-Fi Protected Setup)

Wi-Fi Protected Setup (WPS) feature complies with the Wi-Fi Alliance WPS standard and makes it easier to quickly add client devices to an established, security-enabled Wi-Fi network.

WPS reduces the user steps required to configure a network and supports two methods that are familiar to most consumers to configure a network and enable security.

Note: Only applicable in Access Point and WDS AP mode.

2.4G / WPS Setting

[Home](#)[Reset](#)

WPS	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
WPS current status	Configured Release Configuration
Self Pin Code	35525646
SSID	EnGenius5325FE-2.4G
Authentication Mode	WPA2-PSK AES
Passphrase Key	12345678
WPS Via Push Button	Start to Process
WPS Via Pin	<input type="text"/> Start to Process

[Accept](#)[Cancel](#)

5G / WPS Setting

Home

Reset

WPS	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
WPS current status	Configured <input type="button" value="Release Configuration"/>
Self Pin Code	35525646
SSID	EnGenius5325FF-5G
Authentication Mode	WPA-PSK Mixed TKIP/AES
Passphrase Key	12345678
WPS Via Push Button	<input type="button" value="Start to Process"/>
WPS Via Pin	<input type="text"/> <input type="button" value="Start to Process"/>

WPS (Wi-Fi Protected Setup)	
WPS	Select to Enable or Disable the WPS feature.
WPS Current Status	Shows whether the WPS function is Configured or unConfigured . When it is Configured, the WPS has been used to authorize connection between the device and wireless clients.
Self Pin Code	The PIN code of this device.
SSID	The SSID (wireless network name) used when connecting using WPS.
Authentication Mode	Shows the encryption method used by the WPS process.
Passphrase Key	This is the passphrase key that is randomly generated during the WPS process. It is required if wireless clients that do not support WPS attempts to connect to the wireless network.
WPS via Push Button	Click this button to initialize WPS feature using the push button method.
WPS via PIN	Enter the PIN code of the wireless device and click this button to initialize WPS feature using the PIN method.

7.7 WDS Link Settings

Using WDS (Wireless Distribution System) will allow a network administrator or installer to connect to Access Points wirelessly. Doing so will extend the wired infrastructure to locations where cabling is not possible or inefficient to implement.

Note: Compatibility between different brands and models of access points is not guaranteed. It is recommended that the WDS network be created using the same models for maximum compatibility.

Also note: All Access Points in the WDS network needs to use the same Channel and Security settings.

To create a WDS network, please enter the MAC addresses of the Access Points that you want included in the WDS. There can be a maximum of four access points.

Note: Only applicable in WDS AP and WDS Bridge mode.

2.4G / WDS Link Settings

[Home](#)
[Reset](#)

Security	None
WEP Key	<input type="text"/> 40/64-bit(10 hex digits)
AES Passphrase	<input type="text"/> (8-63 ASCII characters or 64 hexadecimal digits)

Caution: NAWDS was enabled, you need assign Wifi Channel manually later.

ID	MAC Address	Mode
1	00 : 02 : 6F : CA : E6 : BE	Enable
2	<input type="text"/> : <input type="text"/>	Disable
3	<input type="text"/> : <input type="text"/>	Disable
4	<input type="text"/> : <input type="text"/>	Disable

[Accept](#)
[Cancel](#)

5G / WDS Link Settings

[Home](#)
[Reset](#)

Security	None ▾	
WEP Key	<input type="text"/>	40/64-bit(10 hex digits) ▾
AES Passphrase	<input type="text"/> (8-63 ASCII characters or 64 hexadecimal digits)	

Caution: NAWDS was enabled, you need assign Wifi Channel manually later.

ID	MAC Address	Mode
1	<input type="text"/> 00 : <input type="text"/> 02 : <input type="text"/> 6F : <input type="text"/> 11 : <input type="text"/> 22 : <input type="text"/> 33	Enable ▾
2	<input type="text"/> : <input type="text"/>	Disable ▾
3	<input type="text"/> : <input type="text"/>	Disable ▾
4	<input type="text"/> : <input type="text"/>	Disable ▾

2.4G/5G WDS Link Settings	
Security	Select None or WEP or AES from drop-down list.
WEP Key	Enter the key values you wish to use if selecting WEP.
AES Passphrase	Enter the key values you wish to use if selecting AES.
MAC Address	Enter the Access Point's MAC address to which you want to extend the wireless area.
Mode	Select Disable or Enable from the drop-down list.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

Note: Other AP(s) must use the same security and key to establish WDS link.

8 Management

8.1 Administration

This page allows you to change the ECB600 username and password. By default, the username is **admin** and the password is: **admin**. The password can contain 0 to 12 alphanumeric characters and is case sensitive.

Login Setting

[Home](#)
[Reset](#)

New Name	<input type="text" value="admin"/>
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm Password	<input type="password"/>
<input type="button" value="Save/Apply"/> <input type="button" value="Cancel"/> <input type="button" value="logout"/>	

Login Setting	
New Name	Enter a new username for logging in to the New Name entry box.
Old Password	Enter the old password for logging in to the Old Password entry box.
New Password	Enter the new password for logging in to the New Password entry box.
Confirm Password	Re-enter the new password in the Confirm Password entry box for confirmation.
Save/Apply / Cancel	Click Save/Apply to apply the changes or Cancel to return previous settings.
Logout	Click Logout to logout.

8.2 Management VLAN Settings

This page allows you to assign a VLAN tag to the packets. A VLAN is a group of computers on a network whose software has been configured so that they behave as if they were on a separate Local Area Network (LAN). Computers on VLAN do not have to be physically located next to one another on the LAN.

Note: Only applicable in Access Point and WDS AP mode.

Management VLAN Settings

Home

Reset

2.4G Current Profiles				
SSID	Security	Isolation	VID	Enable
EnGenius5325FE-2.4G	None	<input type="checkbox"/>	1	<input checked="" type="checkbox"/>
EnGenius5325FE_2-2.4G	None	<input type="checkbox"/>	2	<input type="checkbox"/>
EnGenius5325FE_3-2.4G	None	<input type="checkbox"/>	3	<input type="checkbox"/>
EnGenius5325FE_4-2.4G	None	<input type="checkbox"/>	4	<input type="checkbox"/>
EnGenius5325FE_5-2.4G	None	<input type="checkbox"/>	5	<input type="checkbox"/>
EnGenius5325FE_6-2.4G	None	<input type="checkbox"/>	6	<input type="checkbox"/>
EnGenius5325FE_7-2.4G	None	<input type="checkbox"/>	7	<input type="checkbox"/>
EnGenius5325FE_8-2.4G	None	<input type="checkbox"/>	8	<input type="checkbox"/>

5G Current Profiles				
SSID	Security	Isolation	VID	Enable
EnGenius5325FF-5G	None	<input type="checkbox"/>	51	<input checked="" type="checkbox"/>
EnGenius5325FF_2-5G	None	<input type="checkbox"/>	52	<input type="checkbox"/>
EnGenius5325FF_3-5G	None	<input type="checkbox"/>	53	<input type="checkbox"/>
EnGenius5325FF_4-5G	None	<input type="checkbox"/>	54	<input type="checkbox"/>
EnGenius5325FF_5-5G	None	<input type="checkbox"/>	55	<input type="checkbox"/>
EnGenius5325FF_6-5G	None	<input type="checkbox"/>	56	<input type="checkbox"/>
EnGenius5325FF_7-5G	None	<input type="checkbox"/>	57	<input type="checkbox"/>
EnGenius5325FF_8-5G	None	<input type="checkbox"/>	58	<input type="checkbox"/>

Caution: If you reconfigure the Management VLAN ID, you may lose connectivity to the access point. Verify that the switch and DHCP server can support the reconfigured VLAN ID, and then re-connect to the new IP address.

Management VLAN ID

No VLAN tag
 Specified VLAN ID
 (must be in the range 1 ~ 4094.)

Accept

Cancel


Management VLAN (Access Point / Repeater mode)	
Profile Isolation	Restricted client to communicate with different VID by selecting the radio button.
VLAN ID	Specify the VLAN tag for each profile.
Management VLAN ID	If your network includes VLANs, you can specify a VLAN ID for packets pass through the Access Point with a tag. Otherwise, select No VLAN tag .
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

Note:

1. If you reconfigure the Management VLAN ID, you may lose your connection to the ECB600. Verify that the DHCP server supports the reconfigured VLAN ID and then reconnect to the ECB600 using the new IP address.
2. Clicking **Accept** does not apply the changes. To apply them, use Status > Save/Load (see section 5.1).

VLAN Setup

Below is a sample network diagram for VLAN.

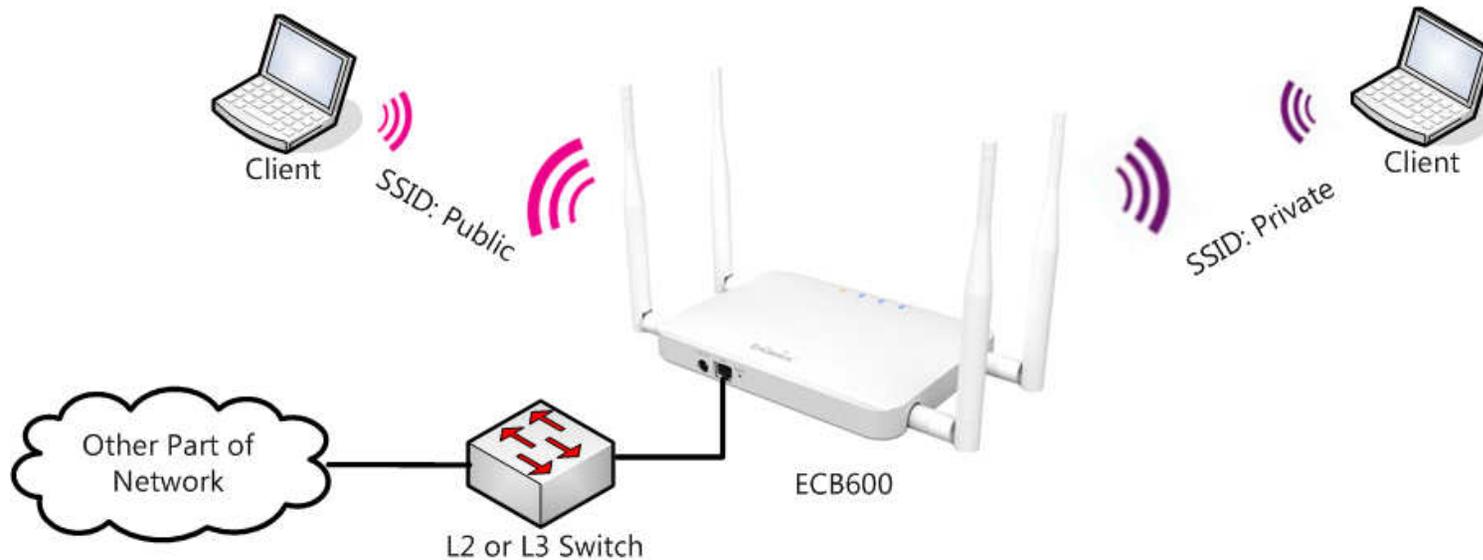

Please note that in order for the settings to save on this unit you need to click **Save & Apply** under the **Save/Reload** option under **Status**.

The screenshot shows the EnGenius web interface for a 'Wireless Access Point/Client Bridge'. The left sidebar is yellow and contains a 'Status' menu with 'Save/Reload:1' highlighted. The main content area is white and titled 'Save/Reload'. It features 'Home' and 'Reset' buttons at the top right. Below is an 'Unsaved changes list' table with one entry: 'network.lan.gateway=192.168.1.254'. A red 'Caution' message states: 'Network Setting changed, redirect IP to 192.168.1.1'. At the bottom, there are 'Save & Apply' and 'Revert' buttons.

Step 1. Setup Operation mode to **Access Point**.

The screenshot displays the EnGenius configuration web interface for a Wireless Access Point/Client Bridge. The page title is "Wireless Access Point/Client Bridge" and the current page is "AP/AP".

System Properties

System Properties

Device Name	ECB600 (1 to 32 characters)
Country/Region	Please Select a Country Code
Operation Mode	2.4G Wireless Configuration <ul style="list-style-type: none"><input checked="" type="radio"/> Access Point<input type="radio"/> Client Bridge<input type="radio"/> WDS<input type="radio"/> Repeater 5G Wireless Configuration <ul style="list-style-type: none"><input checked="" type="radio"/> Access Point<input type="radio"/> Client Bridge<input type="radio"/> WDS<input type="radio"/> Repeater

Buttons: **Accept** | Cancel

Left Sidebar:

- Status
 - Save/Reload:0
 - Main
 - 2.4G Wireless Client List
 - 5G Wireless Client List
 - System Log
- System**
 - Operation Mode**
 - IP Settings
 - Spanning Tree Settings
- 2.4G Wireless
 - Wireless Network

Step 2. Click on whichever band you want to configure.

EnGenius® | Wireless Access Point/Client Bridge

AP/AP

Status

- Save/Reload:0
- Main
- 2.4G Wireless Client List
- 5G Wireless Client List
- System Log

System

- Operation Mode
- IP Settings
- Spanning Tree Settings

2.4G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

5G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

Home
Reset

2.4G / Wireless Network

Wireless Mode	802.11 B/G/N Mixed ▾	
Channel HT Mode	20/40MHz ▾	
Extension Channel	Upper Channel ▾	
Channel / Frequency	Ch1-2.412GHz ▾	<input checked="" type="checkbox"/> Auto
AP Detection	Scan	

Current Profiles

SSID	Security	VID	Enable	Edit
Untagged SSID	WPA2-PSK AES	1	<input checked="" type="checkbox"/>	Edit
Public	WPA2-PSK AES	10	<input checked="" type="checkbox"/>	Edit
Private	WPA2-PSK AES	20	<input checked="" type="checkbox"/>	Edit
Unused 1 2.4GHz	None	30	<input type="checkbox"/>	Edit
Unused 2 2.4GHz	None	5	<input type="checkbox"/>	Edit
Unused 3 2.4GHz	None	6	<input type="checkbox"/>	Edit
Unused 4 2.4GHz	None	7	<input type="checkbox"/>	Edit
Unused 5 2.4GHz	None	8	<input type="checkbox"/>	Edit

Accept
Cancel

Step 3. Click **Edit** on the SSID you want to configure. Note the Enable checkbox is if you want the AP to have an SSID accessible via the wireless side of the AP.

SSID	Security	VID	Enable	Edit
Untagged SSID	WPA2-PSK AES	1	<input checked="" type="checkbox"/>	Edit
Public	WPA2-PSK AES	10	<input checked="" type="checkbox"/>	Edit
Private	WPA2-PSK AES	20	<input checked="" type="checkbox"/>	Edit

Step 4. Configure the AP with the SSID you want, and the type of encryption you desire.

Wireless Setting

SSID	Untagged SSID (1 to 32 characters)
Suppressed SSID	<input type="checkbox"/>
Station Separation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

Wireless Security

Security Mode	WPA2-PSK
Encryption	AES
Passphrase	***** (8 to 63 characters) or (64 Hexadecimal characters)
Group Key Update Interval	3600 seconds(30~3600, 0: disabled)

Save Cancel

Step 5. Under **Management** > **Management VLAN** is where you configure the SSID to VLAN map.

EnGenius® | Wireless Access Point/Client Bridge

API/AP

Status

- Save/Reload:0
- Main
- 2.4G Wireless Client List
- 5G Wireless Client List
- System Log

System

- Operation Mode
- IP Settings
- Spanning Tree Settings

2.4G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

5G Wireless

- Wireless Network
- Wireless MAC Filter
- Wireless Advanced Settings
- WPS

Management

- Administration
- Management VLAN
- Wireless Traffic Shaping
- SNMP Settings
- Backup/Restore Settings
- Firmware Upgrade
- Time Settings
- Schedule
- CLI Settings
- Log
- Diagnostics
- Device Discovery

Management VLAN Settings

Home
Reset

2.4G Current Profiles				
SSID	Security	Isolation	VID	Enable
Untagged SSID	WPA2-PSK AES	<input type="checkbox"/>	1	<input checked="" type="checkbox"/>
Public	WPA2-PSK AES	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>
Private	WPA2-PSK AES	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>
Unused 1 2.4GHz	None	<input type="checkbox"/>	30	<input type="checkbox"/>
Unused 2 2.4GHz	None	<input type="checkbox"/>	5	<input type="checkbox"/>
Unused 3 2.4GHz	None	<input type="checkbox"/>	6	<input type="checkbox"/>
Unused 4 2.4GHz	None	<input type="checkbox"/>	7	<input type="checkbox"/>
Unused 5 2.4GHz	None	<input type="checkbox"/>	8	<input type="checkbox"/>

5G Current Profiles				
SSID	Security	Isolation	VID	Enable
EnGenius112234-5G	None	<input type="checkbox"/>	51	<input checked="" type="checkbox"/>
EnGenius112234_2-5G	None	<input type="checkbox"/>	52	<input type="checkbox"/>
EnGenius112234_3-5G	None	<input type="checkbox"/>	53	<input type="checkbox"/>
EnGenius112234_4-5G	None	<input type="checkbox"/>	54	<input type="checkbox"/>
EnGenius112234_5-5G	None	<input type="checkbox"/>	55	<input type="checkbox"/>
EnGenius112234_6-5G	None	<input type="checkbox"/>	56	<input type="checkbox"/>
EnGenius112234_7-5G	None	<input type="checkbox"/>	57	<input type="checkbox"/>
EnGenius112234_8-5G	None	<input type="checkbox"/>	58	<input type="checkbox"/>

Caution: If you reconfigure the Management VLAN ID, you may lose connectivity to the access point. Verify that the switch and DHCP server can support the reconfigured VLAN ID, and then re-connect to the new IP address.

Management VLAN ID

No VLAN tag
 Specified VLAN ID (must be in the range 1 ~ 4094.)

Accept
Cancel

Step 6. The **Isolation** checkbox tells the unit that you want the SSID to be mapped to a VID specified in the **VID** field. If the Isolation box is not checked the SSID will not be tied to the VLAN that is not tagged off the trunk port. The **Enable** box performs the same as it did in Step 3.

SSID	Security	Isolation	VID	Enable
Untagged SSID	WPA2-PSK AES	<input type="checkbox"/>	1	<input checked="" type="checkbox"/>
Public	WPA2-PSK AES	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>
Private	WPA2-PSK AES	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>

Step 7. Please set your unit to be in the subnet that you want to manage the device in, pointing to the proper default gateway and outside of your DHCP scope.

The screenshot shows the EnGenius web interface for a Wireless Access Point/Client Bridge. The left sidebar is yellow and contains a menu with 'Status' and 'System' sections. 'IP Settings' is highlighted in red in the System menu. The main content area is titled 'IP Settings' and has 'Home' and 'Reset' buttons. It displays 'System Information' with radio buttons for 'Obtain an IP address automatically (DHCP)' and 'Specify an IP address'. The 'Specify an IP address' option is selected. Below this are input fields for IP Address (192.168.1.1), IP Subnet Mask (255.255.255.0), Default Gateway (192.168.1.254), Primary DNS (8.8.8.8), and Secondary DNS (0.0.0.0). At the bottom, 'Accept' and 'Cancel' buttons are visible, with 'Accept' highlighted in red.

Optional:

If using a tagged VLAN to manage the unit then please place unit in the proper subnet and set the management VLAN tag to the tagged LAN you want to manage the device from.

Caution: If you reconfigure the Management VLAN ID, you may lose connectivity to the access point. Verify that the switch and DHCP server can support the reconfigured VLAN ID, and then re-connect to the new IP address.

Management VLAN ID	<input type="radio"/> No VLAN tag
	<input checked="" type="radio"/> Specified VLAN ID <input type="text" value="100"/> (must be in the range 1 ~ 4094.)

8.3 Wireless Traffic Shaping

Traffic shaping regulates the flow of packets leaving an interface to deliver improved Quality of Service.

Wireless Traffic Shaping		Home	Reset
Enable Traffic Shaping	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		
Incoming Traffic Limit	10000	kbit/s (512-99999999)	
2.4G Setting			
Outgoing Traffic Limit	180000	kbit/s (512-99999999)	
Total Percentage	10	%	
SSID #1 : EnGenius5325FE-2.4G	10	%	
SSID #2 : (Off)	10	%	
SSID #3 : (Off)	10	%	
SSID #4 : (Off)	10	%	
SSID #5 : (Off)	10	%	
SSID #6 : (Off)	10	%	
SSID #7 : (Off)	10	%	
SSID #8 : (Off)	10	%	

5G Setting

Outgoing Traffic Limit	180000	kbit/s (512-99999999)
Total Percentage	10	%
SSID #1 : EnGenius5325FF-5G	10	%
SSID #2 : (Off)	10	%
SSID #3 : (Off)	10	%
SSID #4 : (Off)	10	%
SSID #5 : (Off)	10	%
SSID #6 : (Off)	10	%
SSID #7 : (Off)	10	%
SSID #8 : (Off)	10	%

Accept

Cancel

Wireless Traffic Shaping	
Enable Traffic Shaping	Check this option to enable wireless traffic shaping.
Incoming Traffic Limit	Specify the wireless transmission speed used for downloading.
2.4G / 5G Setting	
Outgoing Traffic Limit	Specify the wireless transmission speed used for uploading.
Total Percentage	It shows how much percentage has been used.
SSID #1~#8	Specify the wireless transmission speed used for each SSID.
Accept / Cancel	Click Accept to confirm the changes or Cancel to cancel and return previous settings.

8.4 SNMP Settings

This page allows you to assign the Contact Details, Location, Community Name, and Trap Settings for Simple Network Management Protocol (SNMP). This is a networking management protocol used to monitor network attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of the network. Upon receiving these messages, SNMP compatible devices (called agents) return the data stored in their Management Information Bases.

SNMP Settings		Home	Reset
SNMP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
Contact	<input type="text"/>		
Location	<input type="text"/>		
Community Name (Read Only)	public		
Community Name (Read/Write)	private		
Trap Destination Address	<input type="text"/>		
Trap Destination Community Name	public		
SNMPv3	<input checked="" type="radio"/> v3Enable <input type="radio"/> v3Disable		
User Name	admin		
Auth Protocol	MD5 ▾		
Auth Key	12345678		
Priv Protocol	DES ▾		
Priv Key	12345678		
Engine ID	<input type="text"/>		

SNMP	
SNMP Enable/Disable	Enable or Disable SNMP feature.
Contact	Specify the contact details of the device
Location	Specify the location of the device.
Community Name (Read Only)	Specify the password for the SNMP community for read only access.
Community Name (Read/Write)	Specify the password for the SNMP community with read/write access.
Trap	
Trap Destination Address	Specify the IP address of the computer that will receive the SNMP traps.
Trap Destination Community Name	Specify the password for the SNMP trap community.
SNMPv3	
SNMPv3 Enable/Disable	Enable or Disable SNMPv3 feature.
User Name	Specify the username for SNMPv3.
Auth Protocol	Select the authentication protocol type: MDS or SHA .
Auth Key	Specify the authentication key for authentication.
Priv Protocol	Select the privacy protocol type: DES .
Priv Key	Specify the privacy key for privacy.
Engine ID	Specify the engine ID for SNMPv3.
Save/Apply / Cancel	Click Save/Apply to apply the changes or Cancel to return previous settings.

8.5 Backup/Restore

This page allows you to save the current device configurations. When you save the configurations, you also can reload the saved configurations into the device through the **Restore Saved Settings from A File** section. If extreme problems occur, or if you have set up the ECB600 incorrectly, you can use the **Factory Default** button in the **Revert to Factory Default Settings** section to restore all the configurations of the ECB600 to the original default settings.

Backup/Restore Settings

Save A Copy of Current Settings

Restore Saved Settings from A File

Revert to Factory Default Settings

Backup/Restore	
Save A Copy of Current Settings	Click Backup to save the current configured settings.
Restore Saved Settings from A File	To restore settings that have been previously backed up, click Browse , select the file, and click Restore .
Revert to Factory Default Settings	Click Factory Default button to restore the ECB600 to its factory default settings.

8.6 Firmware Upgrade

This page allows you to upgrade the firmware of the ECB600.

Firmware Upgrade Home Reset

Current firmware version: 1.2.5

Locate and select the upgrade file from your hard disk:

Browse...

Upload

To perform the Firmware Upgrade:

1. Click the **Browse** button and navigate the OS File System to the location of the upgrade file.
2. Select the upgrade file. The name of the file will appear in the *Upgrade File* field.
3. Click the **Upload** button to commence the firmware upgrade.

Note: The device is unavailable during the upgrade process and must restart when the upgrade is completed. Any connections to or through the device will be lost.

8.7 Time Settings

This page allows you to set the internal clock of the ECB600.

Time Settings

[Home](#)
[Reset](#)

Time

Manually Set Date and Time
 2012 / 11 / 28 03 : 12 [Synchronize with PC](#)

Automatically Get Date and Time
 Time Zone: UTC+00:00 Gambia, Liberia, Morocco
 User defined NTP Server: 209.81.9.7

Enable Daylight Saving
 Start Time: January 1st Sun 12 am
 End Time: January 1st Mon 12 am

[Save/Apply](#)
[Cancel](#)

Time	
Manually Set Date and Time	Manually specify the date and time.
Automatically Get Date and Time	Select a time zone from the drop-down list and check whether you want to enter the IP address of an NTP server or use the default NTP server to get have the internal clock set automatically.
Enable Daylight Saving	Check whether daylight savings applies to your area.
Save/Apply / Cancel	Click Save/Apply to apply the changes or Cancel to return previous settings.

8.8 Schedule

Use the schedule function to control the wireless on/off or reboot ECB600 on a routine basis. The Schedule function relies on the GMT time setting acquired from a network time protocol (NTP) server. For details on how to connect the ECB600 to an NTP server, see *Time Settings*.

Schedule

[Home](#)
[Reset](#)

Wifi Schedule

Disable ▾

Schedule Name

Service

- Reboot
- Wireless Active (2G)
- Wireless Active (5G)
- Wireless Active (Both)

Day

- Every Day
- Mon Tue Wed Thu Fri Sat Sun

Time of day

 :

[Add](#) [Cancel](#)

Schedule Table

#	Name	Service	Schedule	Select
Delete Selected Delete All Reset				

[Accept](#) [Cancel](#)

Schedule	
Wifi Schedule	Select to Enable or Disable schedule function.
Schedule Name	Enter the description of the schedule service.
Service	Select the type of schedule service, either Wireless Power ON or Wireless Power OFF.
Day	Select the days of the week to enable the schedule service.
Time of Day	Set the start time that the service is active.
Add / Cancel	Click Add to append the schedule service to the schedule service table, or Cancel to discard changes.
Schedule Table	
#	Displays the ID number of the service in the table.
Name	Displays the description of the service.
Service	Displays the type of service.
Schedule	Displays the schedule information of when the service is active.
Select	Select one or more services to edit or delete.
Delete Selected / Delete All	Click Delete Selected to delete the selected services or Delete All to delete all services.
Accept / Cancel	Click Accept to save the settings or Cancel to discard changes.

8.9 CLI Setting

Most users will configure the ECB600 through the graphical user interface (GUI). However, for those who prefer an alternative method there is the command line interface (CLI). The CLI can be access through a command console, modem or Telnet connection.

CLI Setting
Home Reset

CLI ON OFF

Save/Apply
Cancel

CLI Setting	
CLI	Select ON or OFF to enable or disable the ability to modify the ECB600 via a command line interface (CLI).
Save/Apply / Cancel	Click Save/Apply to apply the changes or Cancel to return previous settings.

8.10 Log

Display a list of events that are triggered on the ECB600 Ethernet and wireless interfaces. You can consult this log if an unknown error occurs on the system or when a report needs to be sent to the technical support department for debugging purposes.

Home
Reset

Log

Syslog

Syslog	Disable ▾
Log Server IP Address / Computer Name	0.0.0.0

Local log

Local Log	Enable ▾
-----------	----------

Save/Apply
Cancel

Log	
Syslog	Enable or disable the syslog function.
Log Server IP Address	Enter the IP address of the log server.
Local Log	Enable or disable the local log service.
Save/Apply / Cancel	Click Save/Apply to apply the changes or Cancel to return previous settings.

8.11 Diagnostics

The diagnostics feature allows the administrator to verify that another device is available on the network and is accepting request packets. If get ping packet response, it means a device is on line. This feature does not work if the target device is behind a firewall or has security software installed.

Diagnostics

[Home](#)[Reset](#)

Ping Test Parameters

Target IP / Domain Name	<input type="text"/>
Ping Packet Size	64 Bytes
Number of Pings	4
<input type="button" value="Start Ping"/>	

Traceroute Test Parameters

Traceroute target	<input type="text"/>
<input type="button" value="Start Traceroute"/>	

Speed Test

Target Address	<input type="text"/>
Time period	20 Sec
Check Interval	5 Sec
<input type="button" value="Start Speed Test"/>	

IPv4 Port	5001
IPv6 Port	5002

Diagnostics	
Target IP	Enter the IP address you would like to search.
Ping Packet Size	Enter the packet size of each ping.
Number of Pings	Enter the number of times you want to ping.
Start Ping	Click Start Ping to begin pinging target device (via IP).
Traceroute Target	Enter an IP address or domain name you want to trace.
Start Traceroute	Click Start Traceroute to begin the trace route operation.
Target Address	Enter the IP address of the target PC.
Time period	Enter time period for the speed test.
Check Interval	Enter the interval for the speed test.
Start Speed Test	Click Start Speed Test to begin the speed test operation.
IPv4 / IPv6 Port	ECB600 use IPv4 port 5001 and IPv6 port 5002 for the speed test.

8.12 Device Discovery

This page shows the EnGenius device(s) connected with ECB600 same network.

Device Discovery

Device Name	Operation Mode	IP Address	System MAC Address	Firmware Version
EAP350	Access Point	192.168.1.18	00:02:6F:DB:A0:7D	1.2.5
EAP350	Access Point	192.168.1.19	00:02:6F:E8:08:80	1.2.5

Refresh

Device Discovery	
Device Name	Displays the name of the devices connected to the network.
Operation Mode	Displays the operation mode of the devices connected to the network.
IP Address	Displays the IP address of the devices connected to the network.
System MAC Address	Displays the system MAC address of the devices connected to the network.
Firmware Version	Displays the firmware version of the devices connected to the network.

8.13 LED Control

This page allows you to control LED on/off for Power, LAN interface and 2.4G/5G WLAN interface.

LED Control

[Home](#)[Reset](#)



LED Control

Power LED	<input checked="" type="radio"/> ON <input type="radio"/> OFF
LAN LED	<input checked="" type="radio"/> ON <input type="radio"/> OFF
2.4G LED	<input checked="" type="radio"/> ON <input type="radio"/> OFF
5G LED	<input checked="" type="radio"/> ON <input type="radio"/> OFF

[Save/Apply](#)[Cancel](#)

8.14 Logout

Click [**Logout**] in **Management** menu to logout.

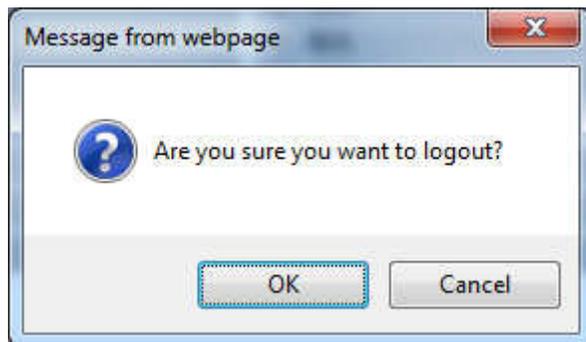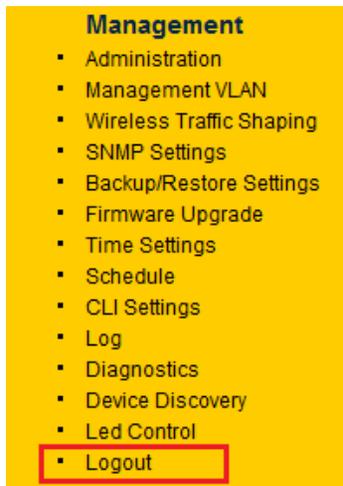

8.15 Reset

In some circumstances, it may be required to force the device to reboot. Click on **Reboot the Device** to reboot the ECB600.

Reset Home Reset

The System Settings section allows you to reboot the device, or restore the device to the factory default settings. Restoring the unit to the factory default settings will erase all settings, including any rules you have created.

System Commands

Reboot the Device

Restore to Factory Defaults

Appendix A – FCC Interference Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 21cm between the radiator & your body.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

Appendix B – IC Interference Statement

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Caution :

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Avertissement:

- (i) les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

IMPORTANT NOTE: (For mobile devices usage)

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 21cm between the radiator & your body.

NOTE IMPORTANTE: (Pour l'utilisation de dispositifs mobiles)

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 21cm de distance entre la source de rayonnement et votre corps.

This device has been designed to operate with a **diople** antenna have a maximum gain of **[5]** dB. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter (**IC: 10103A-ECB600 / Model: ECB600**) has been approved by Industry Canada to operate with the antenna type, maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this user's manual, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Ce dispositif a été conçu pour fonctionner avec une antenne ayant un gain maximal de **diople** antenne avec dB **[5]**. Une antenne à gain plus élevé est strictement interdite par les règlements d'Industrie Canada. L'impédance d'antenne requise est de 50 ohms.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio (**IC: 10103A-ECB600 / Modèle: ECB600**) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Appendix C – CE Interference Statement

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

- EN60950-1
- Safety of Information Technology Equipment

- EN50385
- Generic standard to demonstrate the compliance of electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (0 Hz - 300 GHz)

- EN 300 328
- Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

- EN 301 489-1
- Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

- EN 301 489-17
- Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

- EN 301 893
- Broadband Radio Access Networks (BRAN); 5 GHz high performance RLAN; Harmonized EN covering essential requirements of article 3.2 of the R&TTE Directive

This device is a 2.4 GHz/5 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE 0560

☐ ^{cs} Český [Czech]	<i>[Jméno výrobce]</i> tímto prohlašuje, že tento <i>[typ zařízení]</i> je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
☐ ^{da} Dansk [Danish]	Undertegnede <i>[fabrikantens navn]</i> erklærer herved, at følgende udstyr <i>[udstyrets typebetegnelse]</i> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
☐ ^{de} Deutsch [German]	Hiermit erkläre <i>[Name des Herstellers]</i> , dass sich das Gerät <i>[Gerätetyp]</i> in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
☐ ^{et} Eesti [Estonian]	Käesolevaga kinnitab <i>[tootja nimi = name of manufacturer]</i> seadme <i>[seadme tüüp = type of equipment]</i> vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
☐ ^{en} English	Hereby, <i>[name of manufacturer]</i> , declares that this <i>[type of equipment]</i> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
☐ ^{es} Español [Spanish]	Por medio de la presente <i>[nombre del fabricante]</i> declara que el <i>[clase de equipo]</i> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
☐ ^{el} Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>[name of manufacturer]</i> ΔΗΛΩΝΕΙ ΟΤΙ <i>[type of equipment]</i> ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

fr] Français [French]	Par la présente [<i>nom du fabricant</i>] déclare que l'appareil [<i>type d'appareil</i>] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
it] Italiano [Italian]	Con la presente [<i>nome del costruttore</i>] dichiara che questo [<i>tipo di apparecchio</i>] è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo [<i>name of manufacturer / izgatavotāja nosaukums</i>] deklarē, ka [<i>type of equipment / iekārtas tips</i>] atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo [<i>manufacturer name</i>] deklaruoja, kad šis [<i>equipment type</i>] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
nl] Nederlands [Dutch]	Hierbij verklaart [<i>naam van de fabrikant</i>] dat het toestel [<i>type van toestel</i>] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
mt] Malti [Maltese]	Hawnhekk, [<i>isem tal-manifattur</i>], jiddikjara li dan [<i>il-mudel tal-prodott</i>] jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
hu] Magyar [Hungarian]	Alulírott, [<i>gyártó neve</i>] nyilatkozom, hogy a [<i>... típus</i>] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
pl] Polski [Polish]	Niniejszym [<i>nazwa producenta</i>] oświadczam, że [<i>nazwa wyrobu</i>] jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
pt] Português [Portuguese]	[<i>Nome do fabricante</i>] declara que este [<i>tipo de equipamento</i>] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
sl] Slovensko [Slovenian]	[<i>Ime proizvajalca</i>] izjavlja, da je ta [<i>tip opreme</i>] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	[<i>Meno výrobcu</i>] týmto vyhlasuje, že [<i>typ zariadenia</i>] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
fi] Suomi [Finnish]	[<i>Valmistaja = manufacturer</i>] vakuuttaa täten että [<i>type of equipment = laitteen tyyppimerkintä</i>] tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
sv] Svenska [Swedish]	Härmed intygar [<i>företag</i>] att denna [<i>utrustningstyp</i>] står i överensstämmelse med de

	väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
--	---