





### Table of Content

1. Pr	roduct Overview	6
1.1.	roduct Overview	6
1.2.	Read Before Using	7
1.3.	Key Features	8
1.4.	Package Contents	9
1.5.	Physical Description	10
2. In:	stallation	
2.1.	Hardware Setup	11
2.2.	Wall Mount	15
2.3.	IP Camera Connection	17
2.3.1.	Connecting via Ethernet Cable	18
3. Ac	ccessing the Camera after Installation	
3.1.	Managing using PC or Laptop	20
3.1.1.	EnViewer Finder	20
3.1.1.1		
3.1.1.2	EnViewer Finder: Config	30
3.1.1.3		
3.1.1.4		
3.1.1.5		
3.1.2.	Web Browser	36

3.2.	Manage using Tablet or Mobile Phones	38
4. Firs	t Time Basic Settings	39
4.1.1.	Setting the Interface Language	44
4.1.2.	Changing the Camera Name	45
4.1.3.	Setting the Camera Time	47
4.1.4.	Setting the Storage Folder	48
4.1.5.	Adding a User Account	49
5. Use	r Interface	50
5.1.	Navigation Panel	51
5.2.	Live View Settings	54
5.3.	Main Menus	57
5.4.	System	59
5.4.1.	Status	60
5.4.2.	Service Port	61
5.4.3.	Time	62
5.4.4.	PC Storage Path	63
5.4.5.	Firmware	64
5.4.6.	Backup	67
5.4.7.	Reboot/Reset to Default	72
5.4.8.	Language	73
5.5.	Network	74
5.5.1.	IP Configuration	75
5.5.2.	EnGenius Cloud Service	79

5.5.3.	UPnP	84
5.6.	Media	85
5.6.1.	Video	86
5.6.2.	Camera	88
5.6.2.1.	Light Setting	89
5.6.2.2.	Flicker Control	92
5.6.2.3.	Mirror	93
5.6.2.4.	Day/Night Mode	95
5.6.3.	Advanced	96
5.6.4.	Privacy Mask	98
5.7.	Event Management	99
5.7.1.	Event Control	100
5.7.1.1.	Motion Detection	103
5.7.1.2.	Tampering Detection	106
5.7.1.3.	Event Action	107
5.8.	Event Server	109
5.8.1.	Network Storage	111
5.8.1.1.	NFS (Network File System)	112
5.8.1.2.	SAMBA	113
5.8.2.	FTP (File Transfer Protocol)	114
5.8.3.	E-mail Alerts	115
5.9.	Storage Info	117
5.9.	User Management	118

5.10.1.	Add User	120
5.10.2.	Edit User	121
5.10.3.	Delete User	123
5.10.4.	Push Message Mobile List	125
6. Cam	nera Connecting to EnGenius Router	126
5.10.	Enable Router Storage Function	129
5.11.	Camera Profile	133
5.11.1.	Add Profile	133
5.11.2.	Edit Profile	136
5.11.3.	Delete Profile	137
5.11.4.	Synchronize	138
5.12.	Fine Tune Camera Configuration set by the Router	139
5.13.	Access the Media files on the Router	140
5.13.1.	Using web browser	140
5.13.2.	Using Windows File Explorer	144
6. Cam	nera Connecting to Other Router	147
7. App	lication Guide	148
7.1.	Example: Remote Surveillance and Motion Detection.	149
7.1.1.	Step 1: Choose Event Control	150
7.1.2.	Step 2: Configure Motion Detection	151
7.1.3.	Step 3: Configure Event Action	152
8. Trou	ıble Shooting	
8.1.	Viewing Your Video	153

8.2.	Networking	15!
8.3.	Security and Privacy	
8.4.	Cloud Video Services	
9.	Appendix	

### 1. Product Overview

The EDS5250 is a 2-Megapixel Day & Night Bullet Network Camera which adds surveillance capability to a variety of network environments. With a built-in removable mechanical IR-cut filter, it helps users keep an eye on what matters and get notified by what just happened on demand allowing 24/7 monitoring remotely.

It features LED Infrared Night Vision with automatic activation system. Megapixel HD with High speed H.264 encoding ensures high quality image recording without losing any details. Infrared Night Vision feature can assist to deliver 24/7 non-stop monitoring. With the support of patented EnGenius Cloud service, users can monitor their surveillance networks remotely in real time any time anywhere on any computer or on iOS or Android based mobile devices using EnGenius APPs.

### 1.1. Introduction

This document will guide you through detail steps for EDS5250 installation and both basic and advanced configurations. Familiarizing with the product features can help you to fully utilize the camera for various application scenarios. Please note that the product feature may improve over time, be sure to check out the latest firmware and user's manual for most updated changes on EnGenius web site.

Thank you for choosing **EnGenius** products.

### 1.2. Read Before Using

For users' convenience, the camera is configured with DHCP enabled by default which allows the camera to get an IP address for itself automatically. This applies to majority of the surveillance network settings. However, if you are connecting the product in an office (or any public setting), you may need to consult the IT department in charged for IP setting detail to avoid IP address conflict.

Like all electronic devices, do not install the product in hazardous environment where humidity or temperature is high to avoid danger. This camera is designed for indoor/outdoor (with IP66 waterproof) usage; when the camera is wall-mount installed, please secure the camera and wires in place to prevent it from dangling.

## 1.3. Key Features



















- Megapixel HD Resolution to Deliver Quality Streaming on A Variety of Mobile Devices and PCs
- LED Infrared Night Vision up to 82 Feet (25 Meters) with Automatic Activation System
- Supports Simultaneous Dual-Stream Recording with High Speed H.264 Encoding
- Multiple Storage Options—Samba/FTP Client to Save to an External Storage
- Supports Push Message and Play Back on Smart Devices triggered by Motion
- EnGenius Cloud Services Supported (Apps and Web-based Services)

# 1.4. Package Contents

The package should contain all of following items shown below.

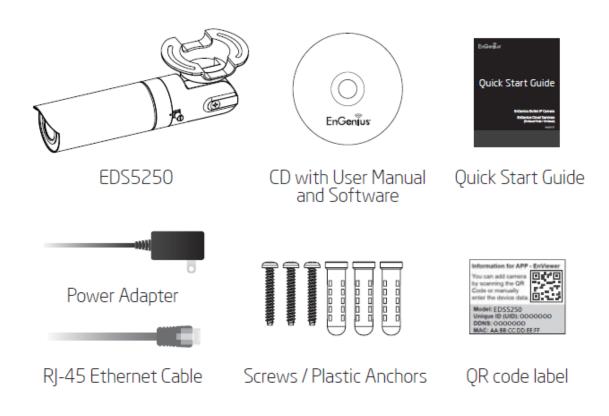

# 1.5. Physical Description

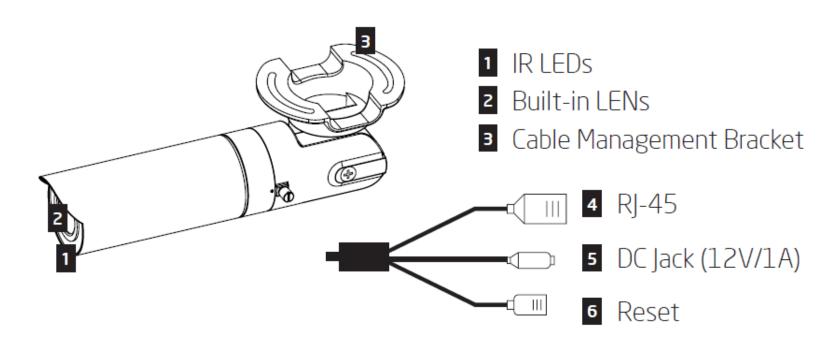


### 2. Installation

# 2.1. Hardware Setup

Before installing the camera, please make sure the camera is properly configured and tested before hardware installation especially if it is mounted on a wall. Please also make sure the power outlet is available near the installation site.

#### I. Basic Connection (without PoE)


- A) Connect the camera to a switch via Ethernet Cable.
- B) Connect the supplied power cable from the camera to the power outlet.

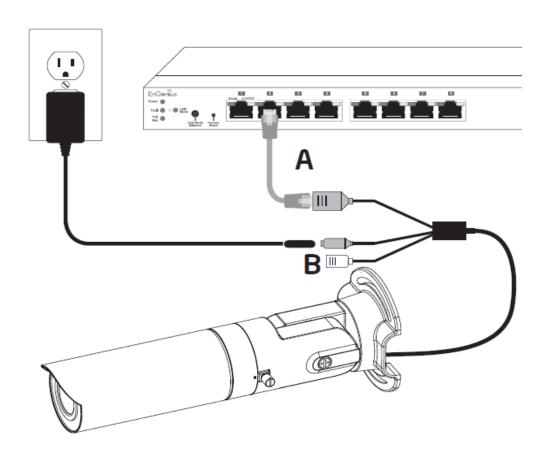


#### II. Power over Ethernet (PoE) Connection

A) When connecting to PoE-Enabled Switch:

The camera is PoE compliant, please connect the Ethernet Port from the Cable Harness to a PoE-enabled Switch using single Ethernet Cable.

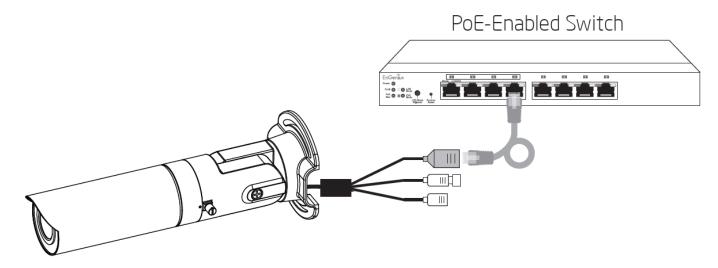


# B) When connecting to a non-PoE Switch: Connect the camera to a non-PoE Switch via PoE Injector (optional).

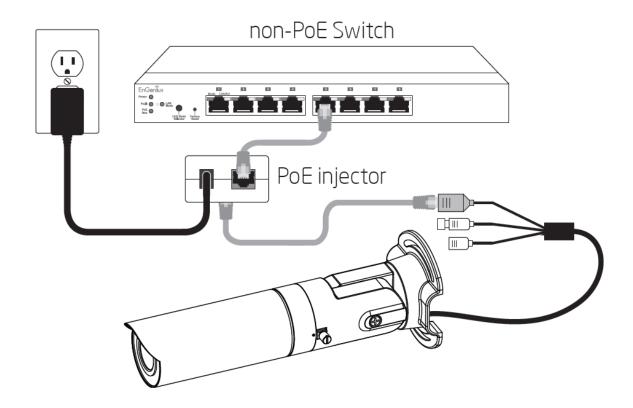


### 2.2. Wall Mount

- Locate an area on the wall and make sure the area is capable of supporting the weight of camera.
- Mark and drill pilot holes aligning to the screw holes at the base of mounting bracket.
- Insert the plastic anchors into the pilot holes, and align the holes at the base of the bracket with plastic anchors.
- Once aligned, insert the provided screws through the holes at the base of camera bracket and ensure the cable is seated in the cable channel. Screw and tighten the bracket in place.

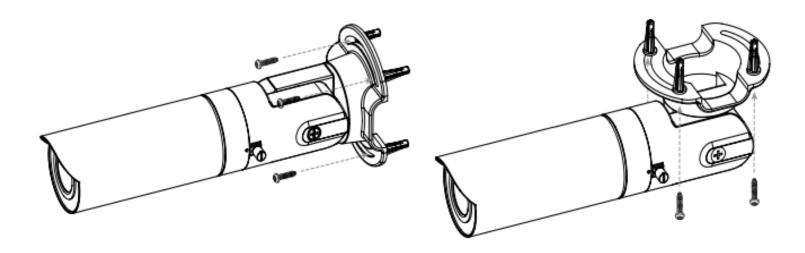


Please loosen the screw-A/B before you turn the camera housing to do vertical and rotation. Align the camera to the correct field of view and tighten the screw-A/B to lock it into the place.

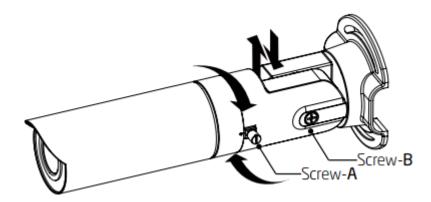


### 2.3. IP Camera Connection

Before setting up the camera with your router, please ensure the Internet is ready. When camera is configured with the router with Internet connection, you can then access the camera through the Internet anytime anywhere. This section will guide you through the connection setup. Please follow the following guide step by step to setup the connection between your camera and the router.

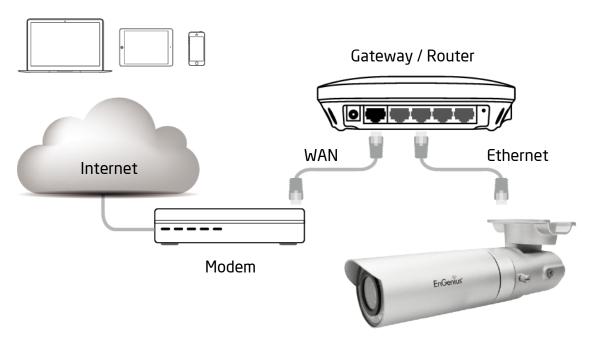


# 2.3.1. Connecting via Ethernet Cable

Connect the camera to the router on the LAN ports with a network RJ45 Ethernet cable (shown below). You may use the cable that came with the package for initial setup

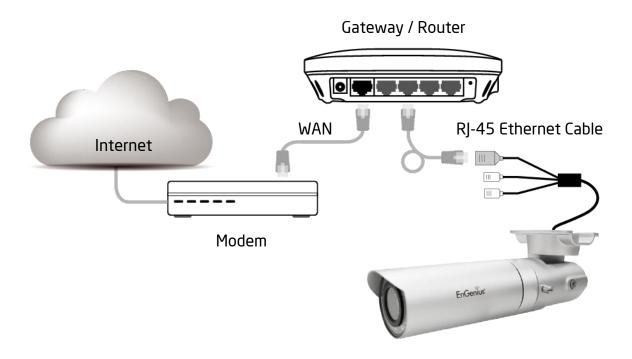

## 3. Accessing the Camera after Installation


There are several ways to get access to your camera on your network. You should probably have a setup similar to the following diagram. You can manage the camera using your PC, Laptop, Tablet or iOS/Android based on mobile phone; we will call it **management station** in the following context. The key point is that management station and the camera must be connected under the same subnet.

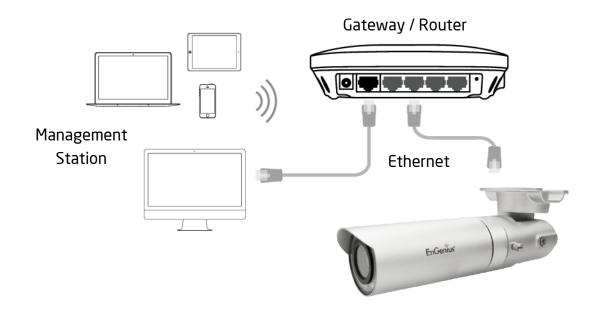

## 3.1. Managing using PC or Laptop

### 3.1.1. EnViewer Finder

**EnViewer Finder** is a tool provided by EnGenius that helps you discover the camera within a local network. You should be able to find the tool inside the CD. Please install the tool to your **management station** desktop for quick access when you need it. Please take note of the IP address shown. In this example, **192.168.0.101** is the camera IP address.

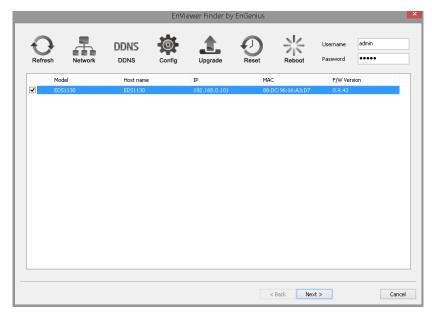



Double-click on the icon to run.

The camera list at the center displays the discovered cameras currently connected to your router (local network). If you do not find the one you intend to configure, please click on **Refresh** to rescan the network until it appears on the list. Please turn off any heavy-loading applications such as P2P that may occupy your network.

Enter **Username** and **Password** for the selected camera on the list. Click on **Next** to start configuration.

The **EnViewer Finder** will guide you step by step through the basic settings Network, DDNS and Config. You can also switch between settings by clicking the icons on the panel.



Rescan the network for camera.



Go to Network setting



Go to DDNS setting



Go to Camera Video Configuration setting



Upgrade the current camera firmware




Reset the current camera to factory default



Reboot/restart the current camera

#### EnViewer Finder: Network

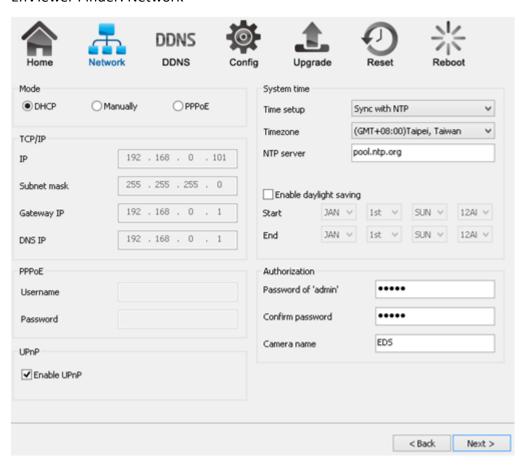

MODE: There are three modes that your camera can get its IP address. DHCP, Manually, or PPPoE.



#### DHCP:

It is the most popular way in the home network setting. It will request IP address from your router automatically. The requirement is that your router should enable DHCP (which is basically the default setting for most of the home router vendors). You are not required to enter any IP related information.

#### Manual:




You will need to assign the IP address details in TCP/IP section. Please ensure that the IP address is not being used by someone else in the network.

#### PPPoE:




If you are connecting to the Internet without going through your router, you can connect the camera directly to your modem (given that your Internet service is using PPPoE protocol). Please consult your local ISP provider for more detail. Basically, the PPPoE setting is exactly the same as your router. You need to provide at least the **Username** and **Password** to get access.

**UPnP**: this feature must be enabled so that the camera can be discovered by UPnP services. Leave it **enabled** if you unsure what UPnP is.

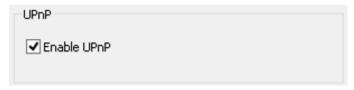


#### **System Time:**

Like any other surveillance system, time is essential because we want to keep track of the time of the events recorded or detected by the camera. By default, the camera is connected to a public NTP server (pool.ntp.org) and its time is always synchronized with the server over the Internet. Normally, you only need to change the **Time Zone**. Choose the one that matches your location. Leave the other setting as default should be fine. Setting the wrong time server or time zone will result in inaccurate scheduling and time stamp.

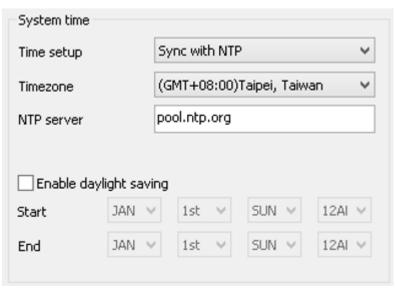


#### Authorization:

You may change the **Password of 'admin'** or **Camera Name** here. Please note that, once you changed the password. You will need to provide your new password next time upon login to the camera through EnViewer Finder or Web Browser. The Camera Name is the camera host name that represents the identity of the camera. If you installed several cameras, please assign a unique name for each camera for better identification.

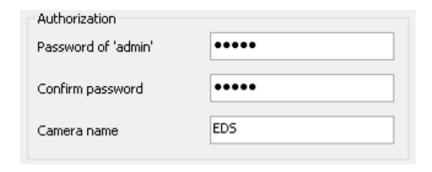

## 3.1.1.1. EnViewer Finder: DDNS

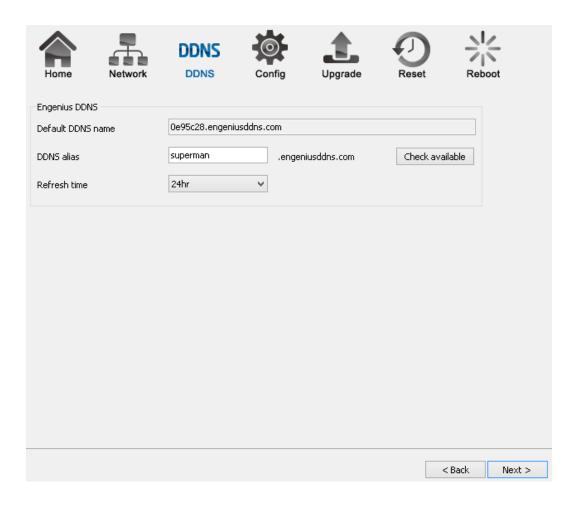





**Default DDNS name**: Each camera has a unique DDNS name printed on the back of your camera. It is the default DDNS name.

**DDNS Alias**: You may try to rename it (alias) to a name so that you can memorize it better. For instance, you can use your initials with your birthday as a combination; for example, ab19791220. Then you need to check whether the name has been taken by someone else by clicking on **Check Availability** button. If the alias is not being used by others, then you can access the camera with both your default DDNS and the new alias DDNS (ab19791220.engeniusddns.com).

**Refresh Time**: options are 3HR, 6HR, 9HR, 12HR and 24HR. DDNS server needs to synchronize with your IP address often so that you can access your device over the Internet with DDNS name. Depends on your Internet Service provider, your WAN IP address lease time will be different. You can check with your local Internet Service provider for WAN IP address refresh time. The default setting is **24HR** (which means DDNS server will check the synchronization **every 24 hours**). Normally, the default setting 24HR is okay for most cases.

# 3.1.1.2. EnViewer Finder: Config

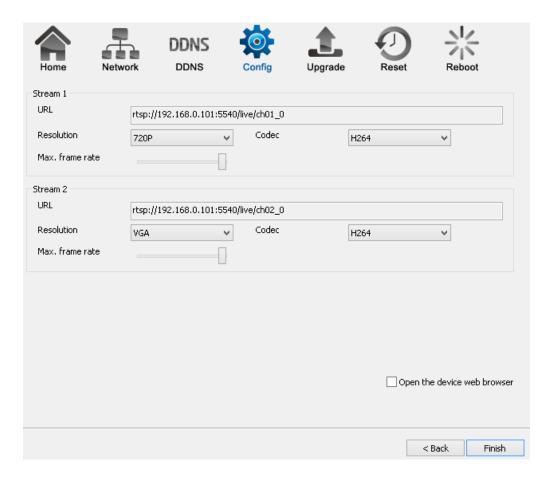

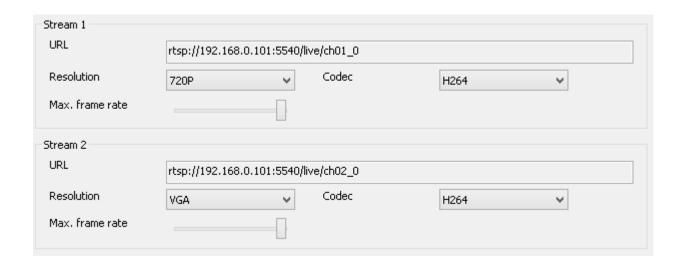

#### URL

The URLs are provided for your reference. There are many 3<sup>rd</sup> party media player that supports RTSP streams. You can provide these URLs to those players and view the camera streams in real time.

#### Resolution

Usually you do not need to worry about this page setting. However, you may need to know that the camera has two concurrent video streams running at the same time. **Stream 1** serves for monitoring over browser while **Stream 2** serves mobile APP EnViewer. The reason that Stream 2 has lower resolution (VGA) is that mobile devices have smaller screens and have limited network bandwidth than regular PC/Laptop; therefore, keeping lower resolution helps to smoother the view.

#### Codec

This setting determines what codec used for video compression. Please use the default for optimized performance. The compression method affects overall performance and media file size. The options are reserved for advanced purposes only.

#### Max frame rate


This setting determines how many frames are taken per second. This setting affects the quality of the video. High frame rate results in smoother video but larger video file.

Open the device web browser

Please **Select** this option before hitting **Finish** button. This will open the web browser with the detect Camera IP address entered in the web browser URL for you. Please bookmark it to your favorite so that you don't have to memorize the IP address when next time you want to login into the camera. You can also use your DDNS name to access the camera management page. Either way works fine.

Click Finish when completed.

### 3.1.1.3. EnViewer Finder: Upgrade

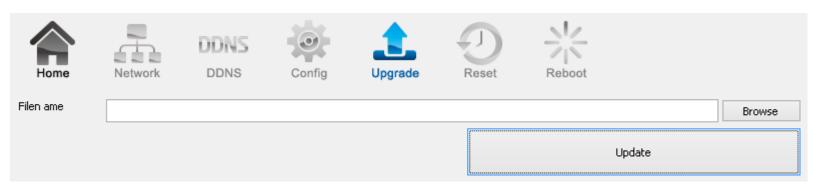

EnViewer Finder also allows you to upgrade your camera firmware. The product feature may improve over time, you may check EnGenius official web site for the latest firmware. New firmware may contain bug fixes or feature improvement; please download the latest firmware file to your local computer first before proceeding further:

Click **Browse** and select the firmware file you downloaded.


Click **Update** to proceed with upgrade process.

It may take a moment for the upgrade process; please wait patiently.

**WARNING:** Do not turn off the device in the middle of upgrade process. Terminating the device during the process will damage the device and may cause the device to fail.

### 3.1.1.4. EnViewer Finder: Reset



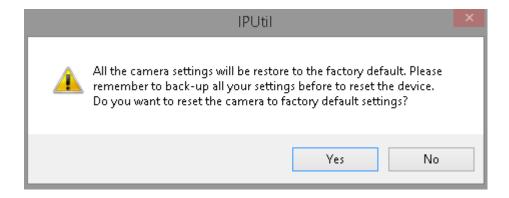


You can **reset** the camera to its factory default state and your settings on the camera will be erased.

**Note**: It will take a while for the camera to come back on again. Therefore, the camera will not appear on the camera list if you rescan the network before it resets to default and boots up.

### 3.1.1.5. EnViewer Finder: Reboot



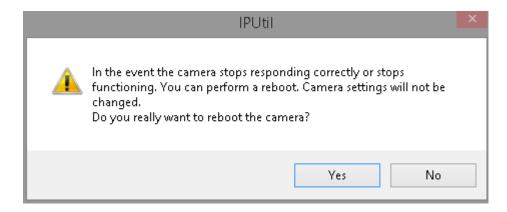

You can **reboot** the camera on EnViewer Finder if the camera stops responding for unknown reason. Click on **Yes** to proceed.

**Note**: It will take a while for the camera to come back on again. Therefore, the camera will not appear on the camera list if you rescan the network before it boots up.

## 3.1.2. Web Browser

You can use web browser on the management station to access the camera by entering IP address or DDNS of your camera. DDNS works only if your router is connected to the Internet. Please refer to the previous section if you do not know the IP address or DDNS of your camera.

For this example we have our DDNS and IP address as follows:

DDNS: ab19791220.engeniusddns.com


**IP Address:** 192.168.0.101

If you are using EnGenius Intelligent Router or IoT Gateway please proceed to Manage camera over EnGenius Router chapter. If not, please proceed to First Time Basic Setting chapter for more detail guide on camera initial settings.



### **EnGenius Router/Gateway**

If you are using EnGenius Intelligent Router or IoT Gateway, you can manage the camera through the router management interface. The benefit of this is that you can manage both the router and the camera on a single integrated user interface. Please refer to **Manage camera** over EnGenius Router section for detail.

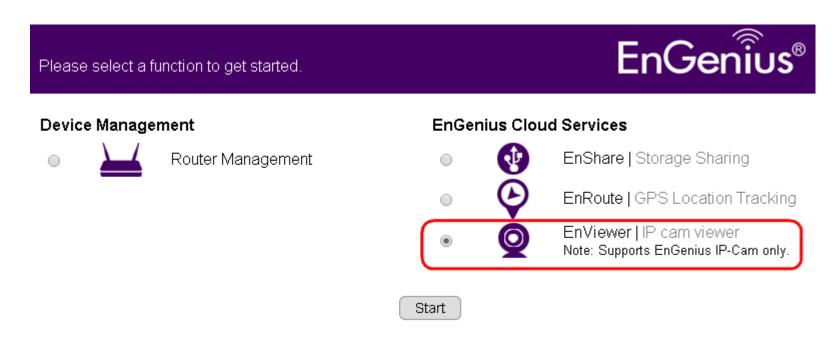


# 3.2. Manage using Tablet or Mobile Phones


You can manage your camera over Tablet or Mobile Phones using the free EnGenius APP **EnViewer**. EnViewer currently supports the two most popular Android and iOS platforms. Please search the keyword "EnViewer" in Google Play or iOS Store.



# 4. First Time Basic Settings

Open your browser and type in the camera IP (e.g. 192.168.0.103) address or the given DDNS name printed on the label on the back of your camera (e.g. 0f9e76a.engeniusddns.com) using a regular web browser.

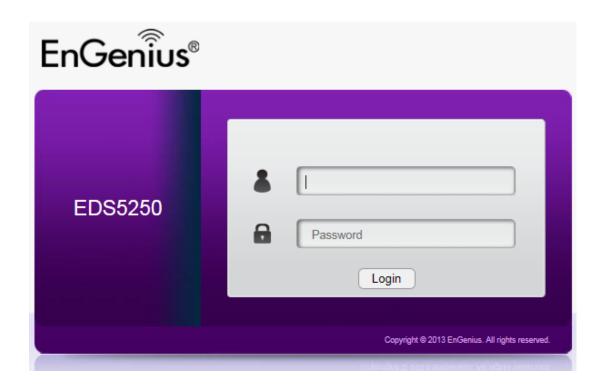

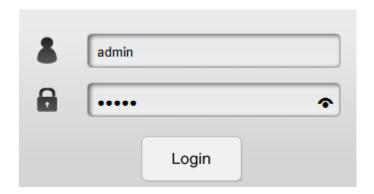

Enter the default username admin and password admin. Click Login to proceed.


For the first time of login, you will be informed to download and install "WebCMS". Please click on "Download WebCMS" to start download (you will be required to have Internet connection on your router). WebCMS enables browsers to support camera feature. Don't worry if you are prompted with a different version number because the software upgrades from time to time.

### WebCMS 0.2.3.0


Installation of IP Camera "WebCMS" plug-in control requires your attention. You need to download the latest "WebCMS" plug-in and install to continue view camera web user interface.

Download WebCMS

If prompted with the following question, click on Save (Internet Explorer).

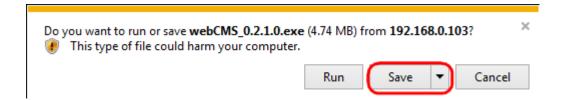

Save the downloaded file.

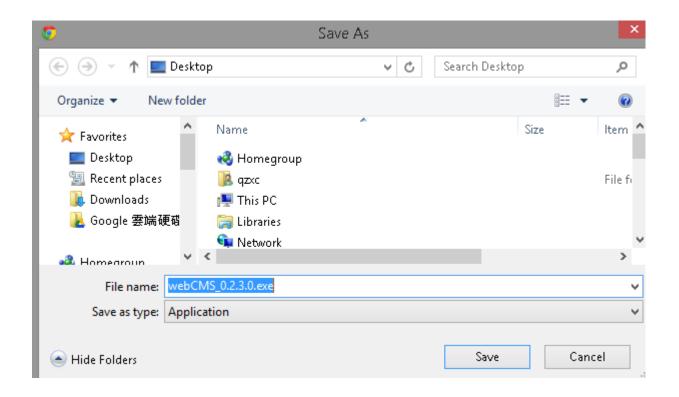


Once download is completed, you **MUST close all the browsers** before install WebCMS.



Double click on **WebCMS** to install the program. You may not have noticed, the installation is very fast, it only takes a few seconds for **WebCMS** to be installed.

When installation is completed, open the browser and login into the camera again. You should be able to see the camera viewer in live as shown below. If you do not see the viewer that means you did not install **WebCMS** properly or try login using other browsers.

**NOTE:** If you are seeing grey color in the viewer, it is because the camera has detected insufficient of light in the room and enabled night vision mode automatically. If you point your camera to a brighter area, you should be able to see it switched to normal color mode. Try a few places to get a feeling on how it works. If listening closely, you may hear the click sound from the camera when night vision is switched on and off.

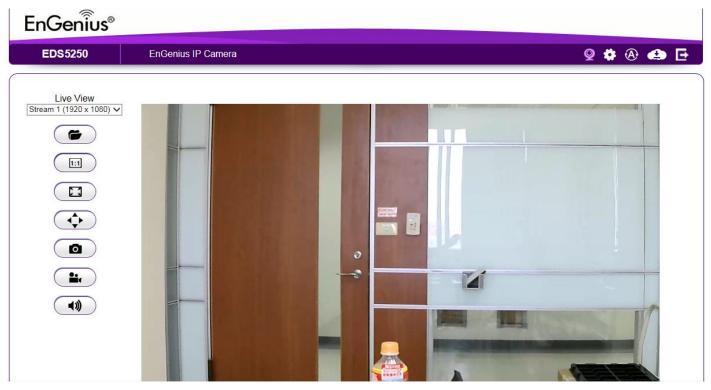

Congratulations, you are now ready to proceed with further camera settings!

## 4.1.1. Setting the Interface Language

First of all you may want to change the user interface language. The default factory language is English. To change the language, click on

icon the make the change. On the language list, click to select the one you feel comfortable with from the list. The user interface with refresh automatically with your chosen language.

Select Display Language




## 4.1.2. Changing the Camera Name



to access the configuration Main Menu.

On the Main Menu, select Network -> UPnP

Then, you may want to assign the camera with proper names for better identification if you have several cameras at the same time. Meaningful names such as living room, kitchen, baby room or any other descriptions you find suitable to describe the space being monitored.

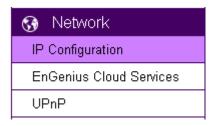

Select Network → UPnP


Host Name	EDS				
UPnP	Enable	O Disab	е		
UPnPc	Enable	O Disab	е		
				Apply	Cancel

**Hostname:** Enter a new name into this field Click **Apply** to change the camera name.

# 4.1.3. Setting the Camera Time

It is crucial to setup camera time properly so that scheduling can be arranged and events be recorded with accurate date and time.

On the Main Menu, select **System** > **Time** 

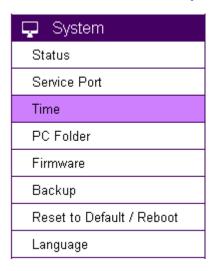


Please refer to **Chapter 5** for time setting detail.

# 4.1.4. Setting the Storage Folder

The Storage Folder is the location where media files will be placed.


On the Main Menu, select System → PC Storage Path

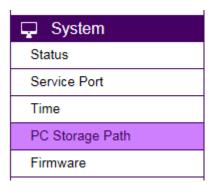

Please refer to **Chapter 5** for detail setting


# 4.1.5. Adding a User Account

On the Main Menu, select **User Management**  $\rightarrow$  **User Account** 

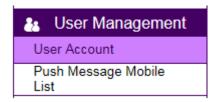

Please refer to **Chapter 5** for User Management for adding a User.


## 5. User Interface

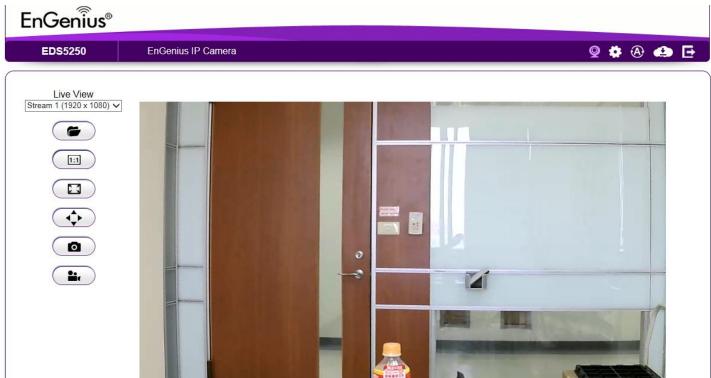


Camera management page

allows you to view and configure the camera at real time. This chapter will introduce all supported features and detail configurations.

# 5.1. Navigation Panel

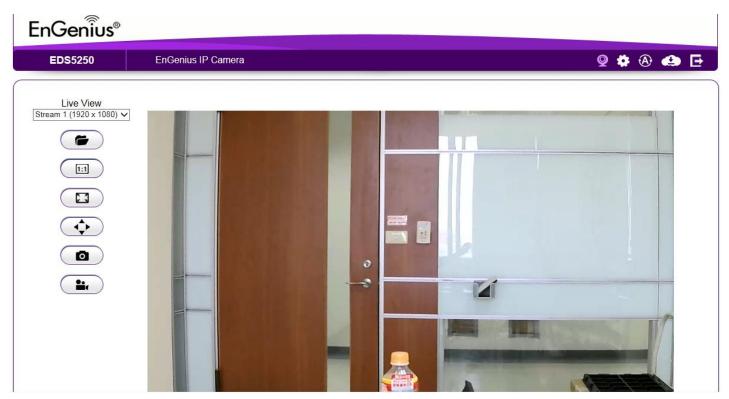


The **Navigation Panel** is located at the top-right corner of the page. Since there are two different user levels (Administrator and Viewer), the functions shown on the Navigation Panel also vary accordingly. For more information about user account, please refer to **User Management** section.

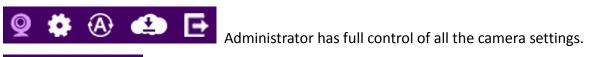






The viewer only has camera view features.

### The descriptions are as follows

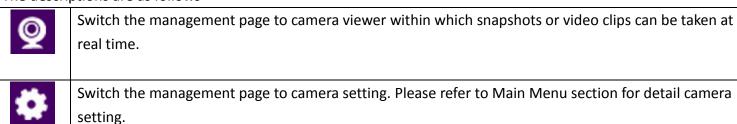


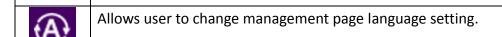

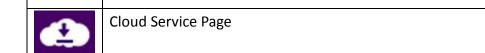


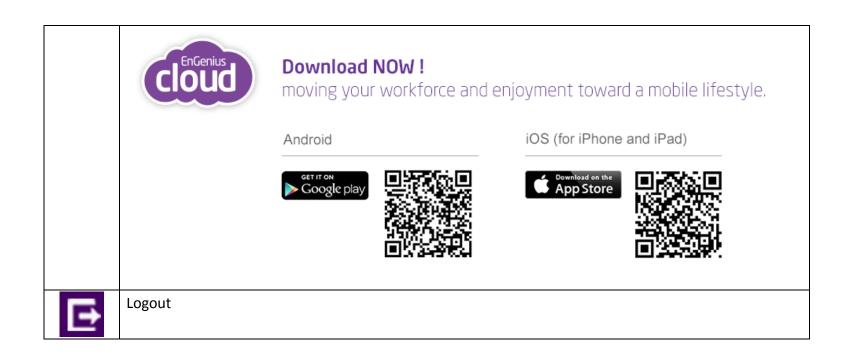


# 5.2. Live View Settings

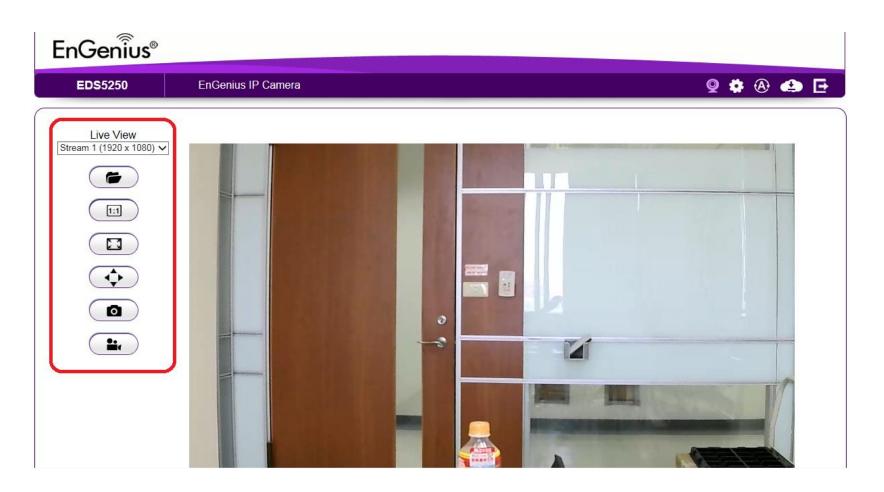

The **Live View Management** menu is located at the right side of the page.

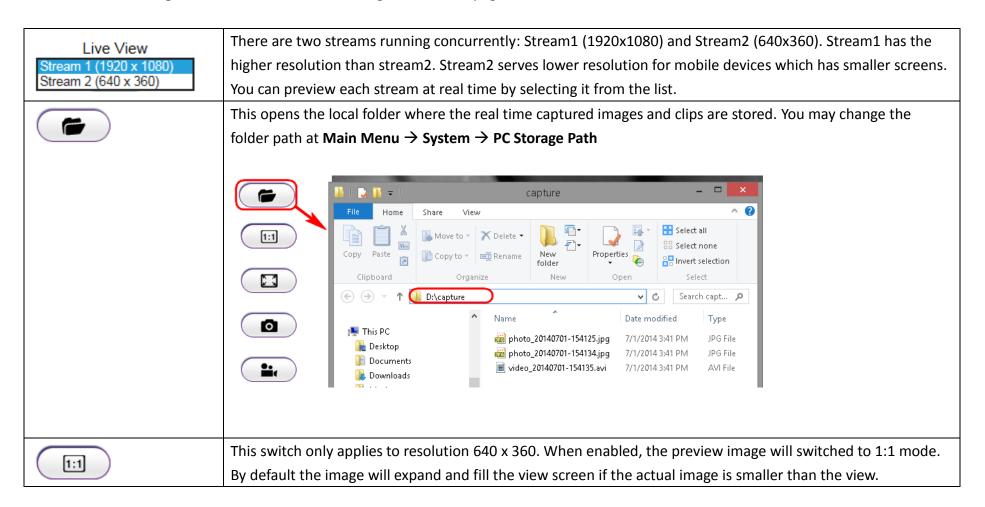


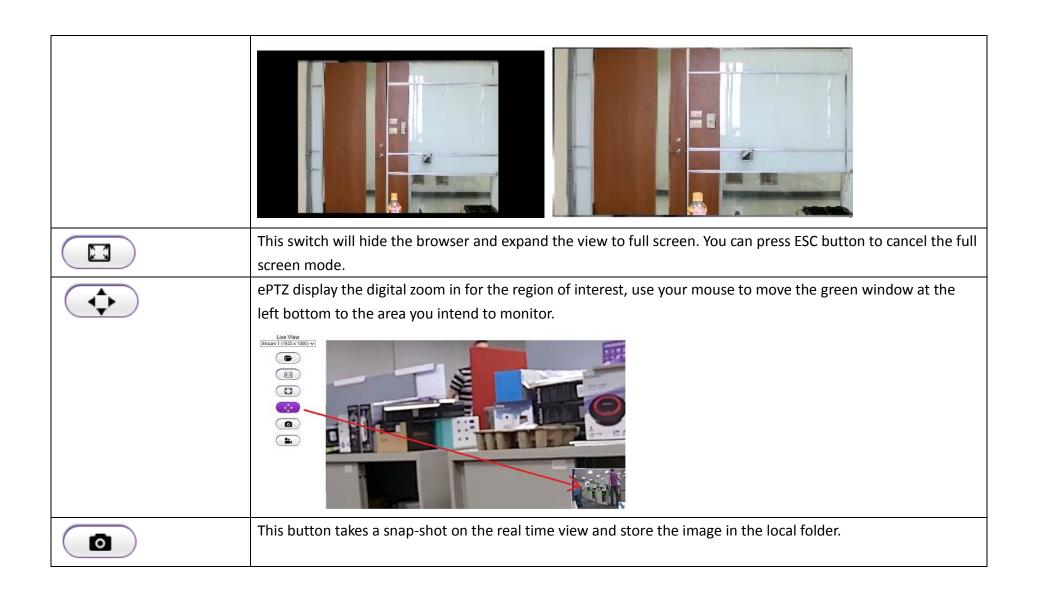



### 5.3. Main Menus

Only Administrator Users can get access to Main Menus. Viewers do not have the privilege of changing camera settings.

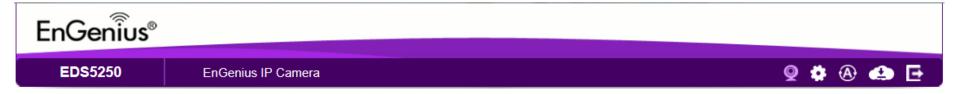



To get access to the Main Menu, click on the setting icon

The Main Menu is shown below.

#### EnGenius® Q 🌣 🕸 🕰 🕒 EDS5250 **EnGenius IP Camera** System Status System Service Port Model EDS5250 Time 32 min 17 sec Uptime PC Storage Path Current Date/Time 2015/11/03 01:43:13 Firmware Serial Number 156292166 Backup 0.9.6 Firmware Reset to Default / Reboot WebCMS Version 1.0.19 Default UID 105f940 Language Network Default DDNS Name 105f940.engeniusddns.com Media Network Event Management Attain IP Protocol Event Server IP Address Storage Info Subnet Mask & User Management Default Gateway MAC Address 88:DC:96:FA:06:BF Primary DNS Secondary DNS Video Stream 1 1920 x 1080 Resolution

# 5.4. System

The System setting menu consists of system related configurations.

System
Status
Service Port
Time
PC Storage Path
Firmware
Backup
Reset to Default / Reboot
Language

## 5.4.1. Status

Status Page displays the detail system level information on the page including current time, firmware version, DDNS name, IP address and etc.

System		
	Model	EDS5250
	Uptime	32 min 17 sec
	Current Date/Time	2015/11/03 01:45:21
	Serial Number	156292166
	Firmware	0.9.6
	WebCMS Version	1.0.19
	Default UID	105f940
	Default DDNS Name	105f940.engeniusddns.com
Network		
	Attain IP Protocol	
	IP Address	
	Subnet Mask	
	Default Gateway	
	MAC Address	88:DC:96:FA:06:BF
	Primary DNS	
	Secondary DNS	
Video		
Stream 1		
	Resolution	1920 x 1080


## 5.4.2. Service Port

The default setting is as follows. This is only reserved for advanced users who want to keep certain ports for other particular services. Changing the ports will result in unexpected result. Unless necessary, please keep the default setting.

Port Settings		
Note: We recommend that you keep	the default settings to ensu	re that the service to function properly.
HTTP Port	80	
HTTP External Port	50000	
RTSP Port	554	
RTSP External Port	50037	
EnViewer Port	9091	
EnViewer External Port	50075	
		Apply Cancel

### 5.4.3. Time

Like any other surveillance system, time is essential because we want to keep track of the time of the events recorded or detected by the camera. By default, the camera is connected to a public time server (pool.ntp.org) and its time is always synchronized with the server over the Internet. Normally, you only need to change the **Time Zone**. Choose the one that matches your location. Leave the other setting as default should be fine. Setting the wrong time server or time zone will result in inaccurate scheduling and time stamp.

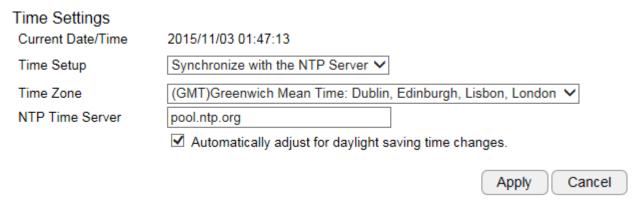

Time Setup: synchronized with time server/ manually setup or synchronized with PC time

Time Zone: select time zone

**NTP Time Server:** the time server address

Automatically adjust for daylight saving time changes: check the box if applicable

# 5.4.4. PC Storage Path

Recording / Snapshot Pat	h	
Folder Path	C:\Users\Eric\AppData\LocalLow	Browse
Snapshot File Type	JPG ✓	
Recording File Type	AVI 🗸	
Note: The video recording and	snapshot will be stored in the target folder.	

**Folder Path:** click "**Browse**" to change the path

Snapshot File Type: support image format JPG, PNG & BMP

Recording File Type: support format AVI & MP4

### Compression rate comparison (High to Low):

JPG > PNG > BMP

MP4 > AVI

You should consider keeping the default setting because it reduces image or clip file size.

Apply

Cancel


## 5.4.5. Firmware

The product feature may improve over time; you may check EnGenius official web site for the latest firmware. New firmware may contain bug fixes or feature improvement which is beneficial to you.

Either download the latest firmware file to your local computer or use Auto Firmware Upgrade when Internet connection is available. For manual upgrade, click **Browse** and select the firmware file to start upgrading firmware.


Manual Firmware Upgrade	!		
To upgrade the device firmware computer. Then, click on Choos			
	瀏覽		
			Apply Cancel
Auto Firmware Upgrade	<ul><li>Enable</li></ul>	ODisable	
Current Firmware version	v1.0.0		
New Firmware version	unknown		
Release Date	unknown		
Firmware File Size	0k		
			Relase Note Upgrade

Select the downloaded new firmware then click on **Open**.

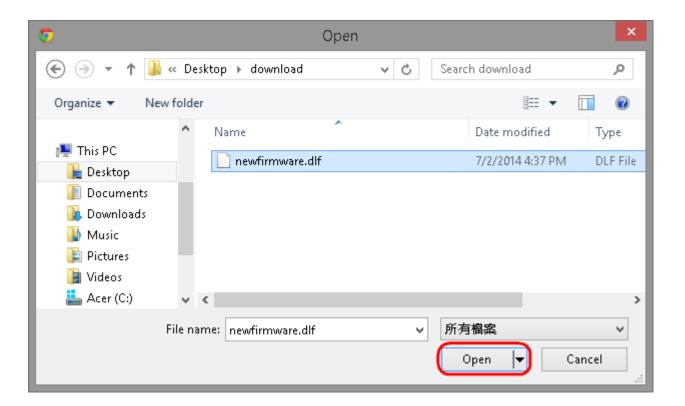

### Click **Apply** to start upgrading the firmware.

You can upgrade the firmware of the IP-CAM in this page. Ensure, the firmware you want to use is on the local hard drive of your computer. Click on Browse to browse and locate the firmware to be used for your update.

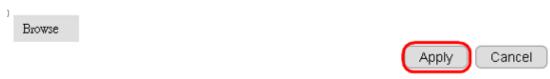


It may take a moment for the upgrading process, please wait patiently.

**WARNING:** Do not turn off the device in the middle of upgrade process. Terminating the device during the process will damage the device and may cause the device to fail.


# 5.4.6. Backup

There are times that you may want to test new settings or keep different settings for different application scenarios. You can do this with following steps:

### ■ Save Settings

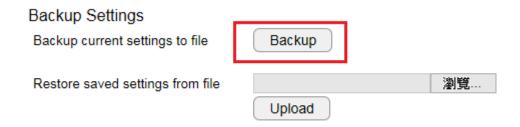


Click **Save** to initiate setting backup process.

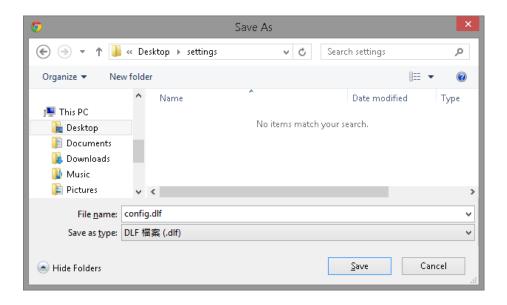


Click **Save** to store the file to the chosen location.

### ■ Restore Settings

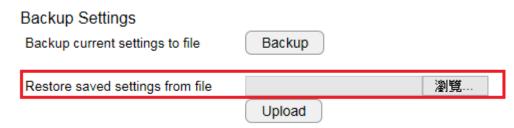

Click on Browse to select the backup file.

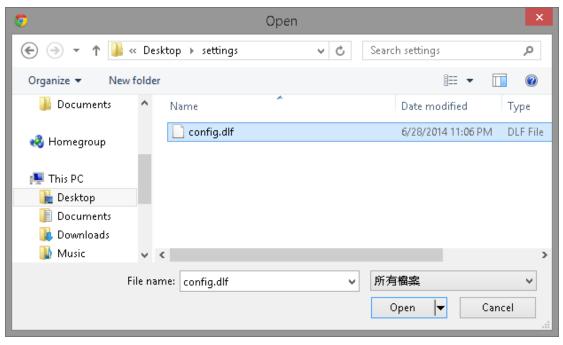

Choose the configuration file and click on **Open**.

Click on **Upload** to start storing process.



It may take a moment for the uploading process, please wait patiently.

**WARNING:** Do not turn off the device in the middle of the upload. Terminating the device during the process will damage the device and may cause the device to fail.

## 5.4.7. Reboot/Reset to Default

There may be times that you feel like to restore the settings to factory default. To reset to default click on the button Reset to Default

If the camera for some reason stop responding or acting abnormally, you can choose to **Reboot the Device**. If the device still does not recover to normal operation, please consider to perform a hard reset (unplug and re-plug the power adapter).

To proceed Reset to Default will erase current settings and restore the device to its original factory settings.

Note: We suggest you to back up current settings before running the reset.

Reset to Default

In case that the system stops responding or functioning incorrectly, you can perform **Reboot the Device** to restart. The current settings will be kept without change.

Reboot the Device

# 5.4.8. Language


The default User Interface language is English, you can change the language with just a mouse click.

On the language list, click to select the one you feel comfortable with from the list. The user interface with refresh automatically with your chosen language.

Select Display Language




# 5.5. Network

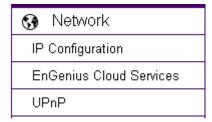

The **Network** setting menu consists of Network related configurations.

# 5.5.1. IP Configuration

Each camera should be assigned with an IP address in the network for identification. IP Configuration setting allows you to change the method with which the camera obtains its IP address. The default setting Dynamic IP (DHCP) is applicable to most of the application scenario. However, advanced users can also change to Static IP or PPPoE whichever suit the purpose.

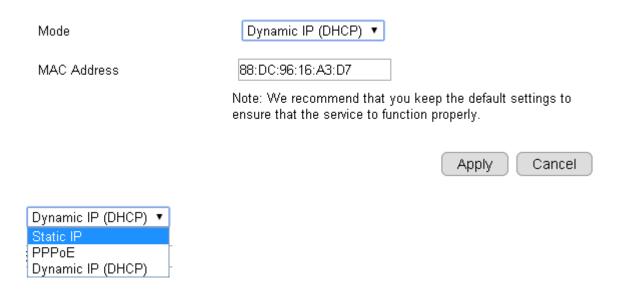

Mode: Static IP, PPPoE and Dynamic IP (DHCP)

## **Static IP**

IP Configuration Settings			
Mode	Static IP	~	
IP Address			
IP Subnet Mask			
Default Gateway			
Primary DNS			
Secondary DNS			
MAC Address	00:51:31:09:25:04		
	Note: We recommend that the service to fund		efault settings to ensure
			Apply Cancel

If your network requires Static IP, you need to specify the detail IP settings similar to above. Please note that, if you are managing your camera in local network similar to the example shown above, you will need to configure your management PC/Laptop under the same domain.

#### **PPPoE**

IP Configuration Settings  Mode	PPPoE ✓
Username	
Password	
Service Name	
MAC Address	00:51:31:09:25:04
	Note: We recommend that you keep the default settings to ensure that the service to function properly.
	Apply Cancel


If you are connecting to the Internet without going through your home router, you can connect the camera directly to your modem (given that you are using PPPoE for your Internet service). Please consult your local network service provider for more detail. Basically, the PPPoE setting is exactly the same as what your home router. You need to provide at least **Username** and **Password** to get access.

## **Dynamic IP (DHCP)**

**IP Configuration Settings** 

Mode

MAC Address

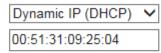

Note: We recommend that you keep the default settings to ensure that the service to function properly.




MAC Address: Type in the MAC address to insert the local MAC address into the field.

Click **Apply** when configuration is done to activate new settings.

Note: If you have a working Internet connection through your router, there is no need to type in the MAC address. Providing such MAC address only if the IP address assigner binds each IP with a specific MAC address.

## 5.5.2. EnGenius Cloud Service

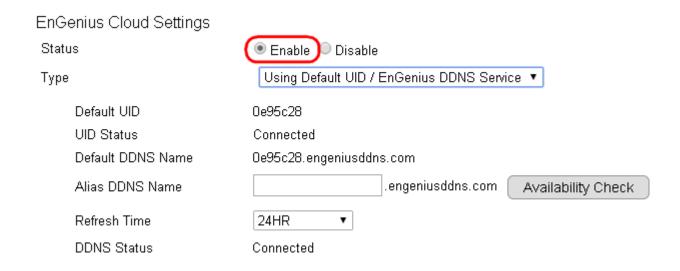

You must **Enable** EnGenius Cloud first and then choose the **Type**.

A key part about EnGenius Cloud Service is DDNS. Dynamic DNS (DDNS) is a type of DNS that works with dynamic IP address. DDNS keeps update its mapping regularly and ensures a consistent matching so that your device can be accessed over the Internet using a fixed DDNS name. You can either use the default EnGenius DDNS Service or other 3<sup>rd</sup> party Service you prefer.

Using Default UID / EnGenius DDNS Service ▼
Using Default UID / EnGenius DDNS Service
Using Other DDNS Service

Users are recommended to use the free DDNS address printed on the label enclosed in the package. This is because ISP often leases dynamic WAN IP address that changes from time to time. DDNS domain name will always be the same even if the WAN IP address changes. The domain name can also be found on your **System** > Status page.

#### EnGenius Cloud Settings Status Enable Disable Using Default UID / EnGenius DDNS Service 🔻 Type Default UID 0e95c28 UID Status Connected 0e95c28.engeniusddns.com Default DDNS Name engeniusddns.com Alias DDNS Name Availability Check Refresh Time 24HR

Default UID: default UID

DDNS Status

**UID Status**: when working properly, it should show "Connected".

Connected

Default DDNS: shows the default DDNS

Alias DDNS Name: You may find that your DDNS is too difficult to remember. EnGenius provides free DDNS name registration as long as the alias is not yet been taken other EnGenius product users. You can check the availability by clicking on the button Availability Check for verification. In this example, "superman.engeniusddns.com" is available. That is, when the setting is activated, both DDNS name "superman.engeniusddns.com" and "0e95c28.engeniusddns.com" can be used to access this camera.

**Refresh Time**: options are 3HR, 6HR, 9HR, 12HR and 24HR. DDNS server needs to synchronize with your IP address often so that you can access your device over the Internet with DDNS name. Depends on your Internet Service provider, your WAN IP address lease time will be different.

You can check with your local Internet Service provider for WAN IP address refresh time. The default setting is **24HR** (which means DDNS server will check the synchronization **every 24 hours**). Normally, the default setting 24HR is okay for most cases.

**DDNS Status**: when working properly, it should show "Connected".

**Note**: DDNS will only work only if your router is connected to the Internet. If router is not connected to the Internet, your DDNS status will show "Disconnected".

# EnGenius Cloud Settings Status ● Enable ● Disable Type Using Other DDNS Service ▼ Server Address 3322(qdns) ▼ Host Name Username Password

If you prefer to use third-party DDNS server, you can choose this option.

The current supported third-party DDNS services are 3322(qdns), DHS, DynDNS, ZoneEdit and CyberGate. Choose the one that best suits your purpose. You should provide your account information so that the camera can communicate with the selected DDNS vendor.

Apply

Cancel

Your third-party DDNS service account credential should include the following information.

Host Name: please enter your registered Host Name

**Username**: please enter your registered Username

**Password**: please enter the password for this

Click **Apply** when configuration is done to activate new settings.

## 5.5.3. UPnP

Universal Plug and Play (UPnP) allows the other device to detect the presence of the camera so that communication become possible. You should enable UPnP if you wish your camera to be recognized by your router. UPnP Traversal makes camera remote access over the Internet possible using camera DDNS name. You won't be able to access the camera if you disable UPnP feature. Please keep it **Enable** if you are not sure.

**Hostname**: You may rename your camera to other meaningful names such as storage room, lobby, or any other descriptions you find suitable to describe the space being monitored.

**UPnP**: Enable or Disable

**UPnP Traversal**: Enable or Disable

UPnP Settings		
Host Name	EDS-F7BA	
UPnP	● Enable ○ Disable	
UPnP Traversal	● Enable  ODisable	Apply

Click **Apply** when configuration is done to activate new settings.


Cancel

# 5.6. Media



All media quality related settings can be found under **Media** menu. These settings will have direct effect on the captured image or video.

## 5.6.1. Video

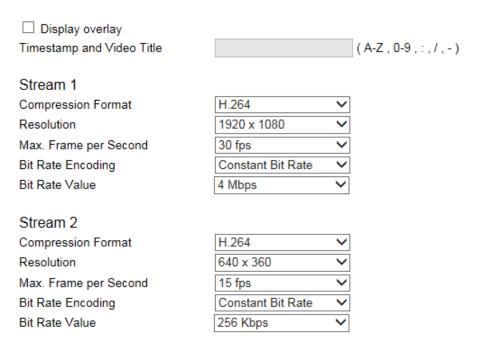


Note: You may adjust Bit Rate Value according to your connectivity mode or bandwidth conditions. Higher bit rates delivers excellence resolution when video is viewed in full-screen on PC. Lower bit rates may be better choices in limited-bandwidth environments or via remote Wi-Fi network.



**Enable**: it is recommended that you enable **Time Stamp and Video Title**; the timestamp will show on the top-left corner of your video as shown below.



## 5.6.2. Camera

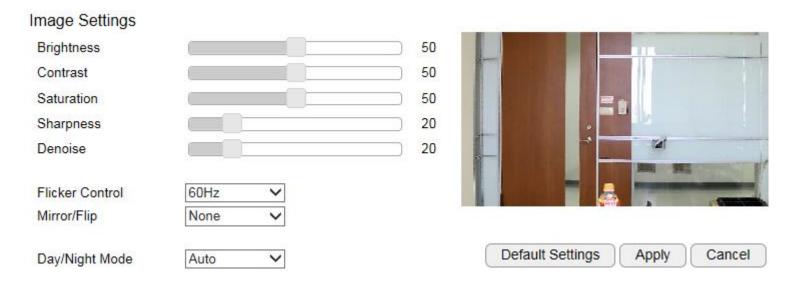

You can get better quality by tuning the lighting condition of the camera. For example, in a dark room you may want to set the Brightness higher to generate clearer result. When directly facing an outdoor window (too much light) you may want to lower the Brightness a bit. There may be different settings under different circumstance; therefore, you should tune the setting if the image quality has become too low to serve its purpose. Please refer to the following examples for comparison between low and high for each of the light settings.

# 5.6.2.1. Light Setting

## Brightness






Contrast






#### Sturation

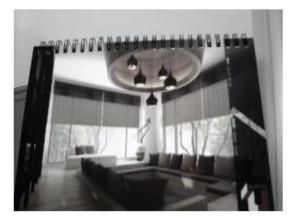



Sharpness

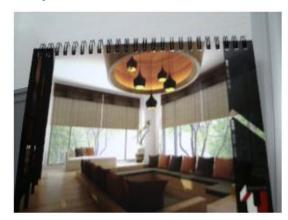



#### De-noise





Please note that some of the effects will be more obvious in higher resolution at real time.

## 5.6.2.2. Flicker Control

The supported options are: 60Hz & 50Hz

Flicker Control is an anti-flicker feature setting.

AC lamp can cause a flicker effect, which is a consequence of the AC power frequency (50 or 60 Hz). As the light can change from picture to picture, causing light flicker. This will lead to inconsistent light source between each snapshot. To eliminate flicker, configure your camera to PAL (60Hz) or NTSC (50Hz) modes to compensate the effects. Check the power supply of your region for proper setting.


## 5.6.2.3. Mirror

Support Mirrors: None, Mirror, Flip and Both

There are times that the camera will have to be mounted upside down for sideways. That is, the view become difficult to monitor when it is upside down. The **Mirror** settings does not reflect on the preview at real time (unlike lighting condition settings). Therefore, you have to click on **Apply** to see the result.

The following examples compares **none** with a **chosen mirror effect**.

#### Mirror (Horizontal)

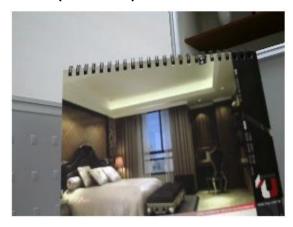



#### None Mirror


## Flip (Vertical)





None Flip

## **Both (Horizontal and Vertical)**

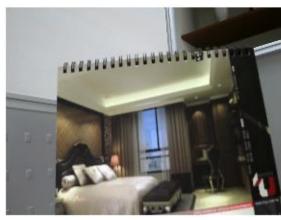




None Both

# 5.6.2.4. Day/Night Mode

This controls Night Vision ON and OFF.

Auto: auto detect light sufficiency and switch between Day and Night automatically.


Day: force the camera to turn OFF Night Vision.Night: force the camera to turn Night Vision ON.

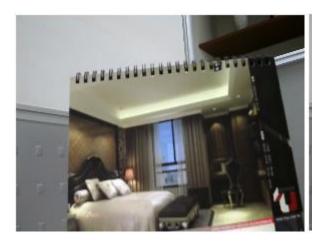



Day Night

## 5.6.3. Advanced

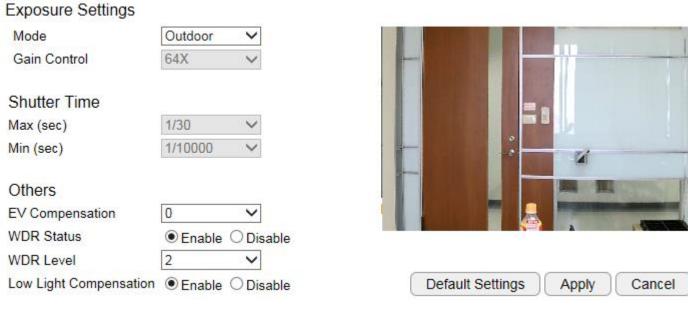


#### **Exposure Settings**

Mode: Manual, Indoor, Outdoor


For regular users, please choose indoor or outdoor, if you are not sure about the terms and behavior, the default values will the preconfigured. The areas are grey out for preconfigured settings when you choose **Indoor** or **Outdoor**.

#### Manual

Choose **Manual** if you would like to fine tune some of the settings that suits your application. Please be noted that these settings may have impacts on the image quality and performance.

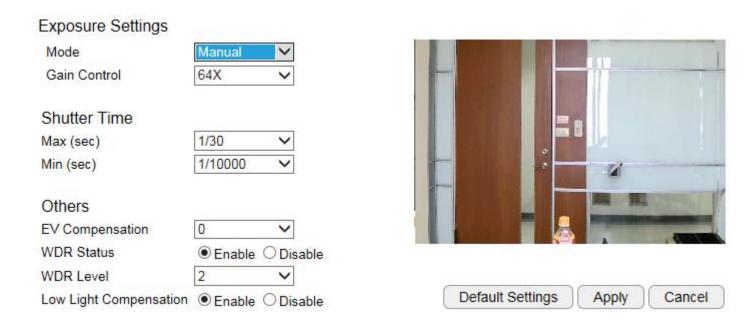


# 5.6.4. Privacy Mask

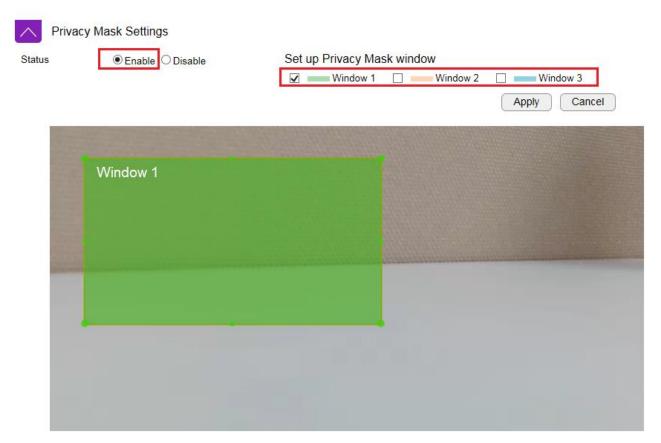


Choose **Enable** if you would like to put certain areas in private. Please use selected window to hide certain area for privacy purpose.

# 5.7. Event Management

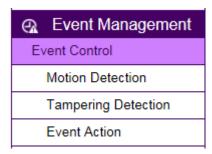

This camera supports many smart features that allows you to utilize the camera in many application scenarios. This section will introduce each of them in detail.

## 5.7.1. Event Control

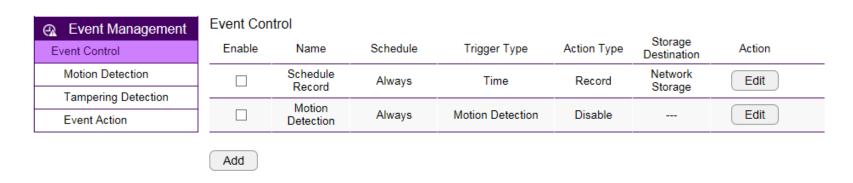

When camera detects an event that matches the predefined condition an **event** will be triggered and proceed with the defined actions; for instance, taking snapshots or recording videos for the specified length of time and interval. There are two profiles for default setting, you can click "Edit" for detail settings or create a new profile by "Add".

#### Event Control

Enable	○ Enable   Disable		
Name			
Schedule	☐ Every Day ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Su		
Time of day	☐ All Day From : To :		
Trigger Type	○ Time ● Detectors		
	■ Motion Detection  ○ Tampering Detection		
Event Notification			
Push Message	○ Enable		
E-Mail	○ Enable		
VMS	○ Enable		
Event Action			
Action Type	Disable		

**Enable/Disable** the event control

**Schedule** to set the camera to record video regularly based on a predefined schedule.

**Time of day** can specify the time range for each schedule.

**Trigger Type** by Time or Detectors, if you select the detectors, it can be trigger by Motion detection or Tampering detection.

**Event Notification** can send the message to user when event triggered, you can select Push message, E-mail and VMS at the same time.

**Event Action** includes two types of the action when event triggered.

#### Event Action Action Type




**Record** to Network Storage or FTP, please remember to setup and enable the correlate settings of Network Storage and FTP, you can refer to Ch5.8.1 and 5.8.2.



**Snapshot** to Network Storage, FTP or E-Mail, please remember to setup and enable the correlate settings of Network Storage, FTP, E-mail, you can refer to Ch5.8.1, 5.8.2 and 5.8.3.



## 5.7.1.1. Motion Detection

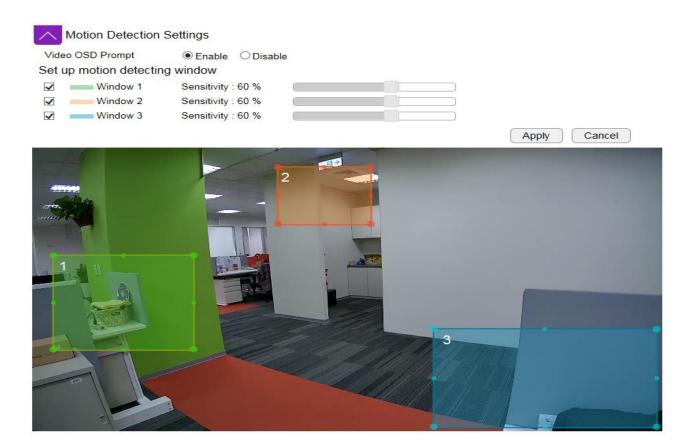

**Motion Detection Window** is a hot zone that the camera analyzes for motion (image changes). When a motion is detected within the zone an event will be triggered.

When the window is selected, use your mouse to move the window to the area you intend to monitor. There can be 3 windows at the most. The Windows are differentiated by color; Window 1 is Green, Window 2 is Red and Window 3 is Blue.


Video OSD Prompt displays the warning on the top lift of the live view page when motion triggered.

**Uncheck** the window to remove the window from the view.

Sensitivity: Level 0% to Level 100% (with Level 100% being the most sensitive)

Depends on your application, high sensitivity will trigger event more often than low sensitivity and produce more snapshots or videos. However, overly sensitive events will fill up the storage very quickly. Even if you have unlimited storage space, large amount of files can become a problem when you need search through each of the files to find what you are really looking for. It may take some time for you to fine tune the optimal sensitivity for your application.


You can adjust the motion detecting area by dragging the four corners to resize the window.

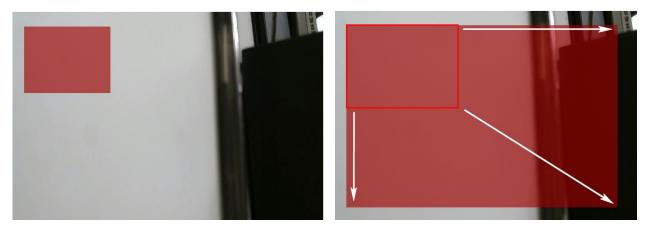

Therefore, you can have a combination of three different detection window sizes.



## 5.7.1.2. Tampering Detection

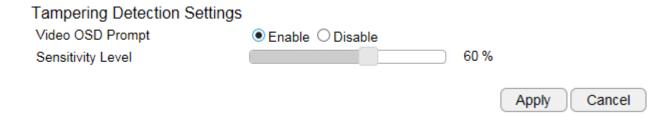


Tamper detection is a setting within your IP camera that will send you an alert when the camera is tampered with. Once an action has been detected, whether it's someone trying to knock the camera down or blocking its view, the alert lets you know to log into the actions to see what happened.

Video OSD Prompt displays the warning on the top lift of the live view page when motion triggered.

Sensitivity Level: Level 0% to Level 100% (with Level 100% being the most sensitive)

Depends on your application, high sensitivity will trigger event more often than low sensitivity and produce more snapshots or videos. However, overly sensitive events will fill up the storage very quickly. Even if you have unlimited storage space, large amount of files can become a problem when you need search through each of the files to find what you are really looking for. It may take some time for you to fine tune the optimal sensitivity for your application.

## 5.7.1.3. Event Action

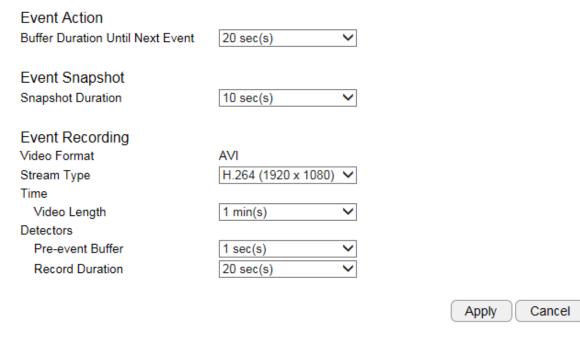

This page provides **Event**-related settings.

Event Action/Buffer Duration until Next Event: can set 20sec(s), 30sec(s), 1min(s), 5min(s), 10min(s), if you set 20sec(s) for this item, system will ignore any trigger during this 20sec(s).

Event Snapshot/Snapshot Duration: can set 10sec(s), 20sec(s), if you set 10sec(s) for this item, system will send a snapshot in every 10sec(s).

**Event Recording Stream Type**: H.264 (1920x1080) or H.264 (640x360)


Video Length: the maximum video length of time per file

**Detectors Pre-event Buffer:** the length of pre-event time (1~5 seconds) **Record Duration:** the length of recording time when alarm is triggered.

#### Note:


If setting **Buffer Duration Until Next Event** to 30 seconds, the camera will keep recording for 30 seconds when event is triggered. In this case, if the **Video Length** is 10 seconds, then 3 files will be generated for single instance of event. If **Video Length** is 30 seconds, then only 1 file will be generated. Please note that pre-event buffer will extend the length of the video clip for the chosen extra length of time.

### 5.8. Event Server

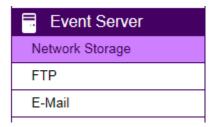

It is required for users to configure **Event Server** settings before setting camera **Event** or **Schedule Recording**. You will have to tell **where** the captured images or clips are going to be stored. The following concept diagram depicts the flow of the image file when and when captured. The file is stored at one of the predefine storage locations.

For EDS5250, **Network Storage and FTP** are required to have existing servers ready for upload. **SMTP** is good for small image capture since it sends the file through email. You should choose what is best for your application.

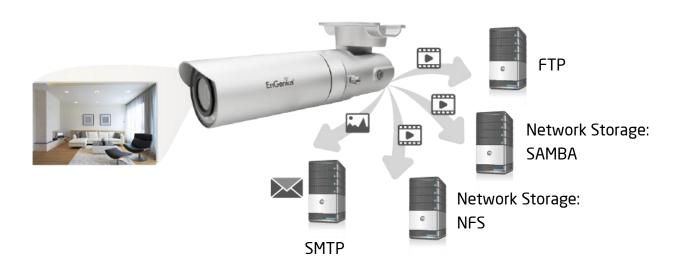

# 5.8.1. Network Storage


This camera supports two types of Network Storage: **NFS** and **SAMBA**.

Before going further, you need to **Enable** to configure the network storage first.



Please refer to the following sections for NFS and SMABA.

# 5.8.1.1. NFS (Network File System)

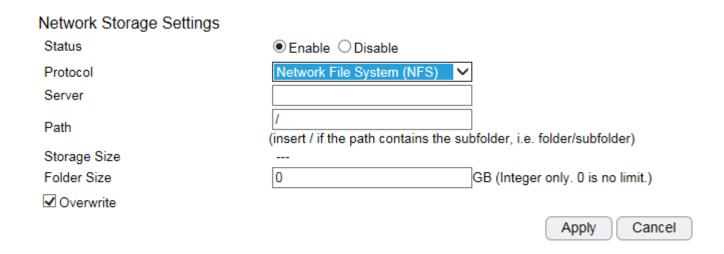

**Server**: IP address of the NFS server **Path**: enter the initial path if applicable

Folder Size: storage allocated for the camera; the default value 0 signifies infinity.

Overwrite: when the defined folder is full, the oldest files will be overwritten to accommodate the new one.

Click **Apply** when done.

### 5.8.1.2. SAMBA

Network Storage Settings		
Status	● Enable ○ Disable	
Protocol	SAMBA ~	
Server		
Path	/ (insert / if the path contains the su	] bfolder, i.e. folder/subfolder)
Username		
Password		
Storage Size		_
Folder Size	0	GB (Integer only. 0 is no limit.)
✓ Overwrite		
		Test Apply Cancel

**Server**: IP address of the SAMBA server **Path**: enter the initial path if applicable

**User Name**: username for accessing SAMBA server **Password**: password for accessing SAMBA server

**Folder Size**: storage allocated for the camera; the default value 0 signifies infinity.

**Overwrite**: when the defined folder is full, the oldest files will be overwritten to accommodate the new one. Click **Test** to verify the connection with the server using the username and password. Click **Apply** when done.

# 5.8.2. FTP (File Transfer Protocol)

FTP Settings	
Server IP address	e.g. 192.168.0.100
Port	21
Username	
Password	
FTP Path	/ (insert / if the path contains the subfolder, i.e. folder/subfolder)
	Test Apply Cancel


**Server**: IP address of the FTP server **Port**: the FTP server port; default 21

**User Name**: username for accessing FTP server **Password**: password for accessing FTP server **FTP Path**: enter the initial path if applicable

Click **Test** to verify the connection with the server using the username and password. Click **Apply** when done.

#### 5.8.3. E-mail Alerts

#### E-mail SMTP Settings

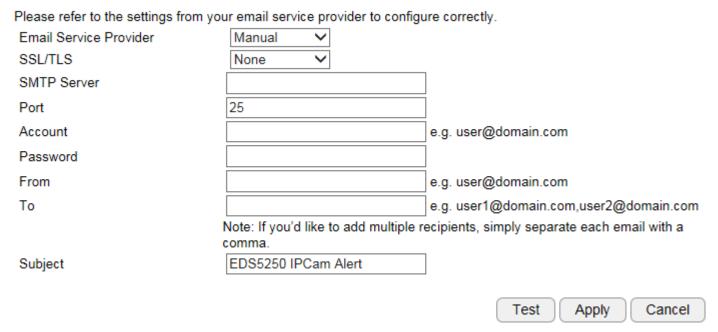

EDS5250 allows camera to send captured images to the predefined email box to notify about an event or alarm.

SMTP is an email sender's server. You need to check whether your email service provider supports SMTP and obtain the required information for this setting.

**Email Server Provider:** supported Gmail, Yahoo and Hotmail.

SSL/TSL: select the type of the authentication as Transport Layer Security (TLS) protocol or Secure Sockets Layer (SSL) protocol

**SMTP Server**: enter the SMTP server address (e.g. smtp.gmail.com).

Port: enter SMTP server port (normally 587 or 465)

**Account**: the email account name; if your email is <a href="myemail@gmail.com">myemail</a> is the account name.

**Password**: the password you use to login into your email box.

**From**: you can type in your email address or other address if you would like the receiver to reply the email to.

**To**: enter the receiver email here (usually your or the administrator's email).

**Subject**: enter the email subject here.

# 5.9. Storage Info




System will display the storage information on this page; it includes the network storage status, total size and available size. User can click the "Refresh" button to get the latest information of these information.

Storage Info					
	Status	Total Size	Available Size		
Network Storage	Ready	100.00 GB	11.22 GB		
Refresh					
Name		Size		Last Modified	Action
<b>∌</b>					
alarm_video_20150728-1	115251.avi	7420K		2015/07/28 11:53:06	Delete
sched_video_20150728-	115146.avi	17768K		2015/07/28 11:52:19	Delete

It depends on different browsers, user can double click the mouse on the records of .avi or .jpg file to save and view the video or snapshot.

## 5.9. User Management



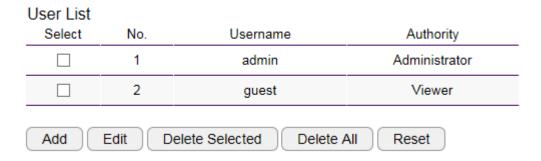

There are two types of user accounts: **Administrator** and **Viewer**. Administrator has full control over the camera settings while viewer only has the accessibility of watching the real time video. Viewer account is particularly useful when you have multiple users such as other staff members. You may have many administrators as well as viewers depending on your needs.

**Administrator** has full control of the camera interface with configuration features as shown below.



Viewer only has basic camera view interface.



## 5.10.1.Add User

User Name	
Password	
Confirm Password	
Authority	Administrator ▼
Add Reset	

**User Name:** enter username **Password:** enter password

**Confirm Password:** enter password for confirmation


**Authority:** select **Administrator** or **Viewer** 

Click **Add** to add the user

### 5.10.2. Edit User



**Select** a user from the list by click on the check box. Click **Edit** to change the user account setting.

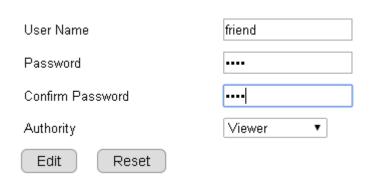

Make the changes and then click **Edit** to save the changes.

Once all necessary changes are made to the accounts, click **Apply** to make the changes affective.




### 5.10.3. Delete User

On the user list, **select** the user account to be deleted.

Click on **Delete** Selected to delete the account.



When prompted with delete confirmation, click **Yes** to delete.

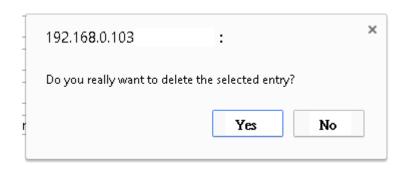


Once all necessary changes are made to the accounts, click **Apply** to make the changes affective.



# 5.10.4. Push Message Mobile List

Here will list the devices which enable the feature of push message on this camera. When an event triggered, camera will send the message to all the devices in this list. You can click "Delete" to disable the feature of the mobile device.

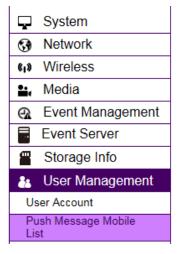


Mobile List									
Description	Platform	Device Token	Action						
John	iOS	7ef97c571d	Delete						
Mary	Android	APA91bGz0f	Delete						

# 6. Camera Connecting to EnGenius Router

**Smart Recording** is an intelligent camera management technology that allows EnGenius users to manage cameras collectively with ease. EnGenius bundles cameras with **Intelligent Router** and **IoT gateway** series and provides a single point of entrance for integrated management. Traditionally, if you have multiple cameras installed you will need to go through the tedious configurations on each of the camera. The benefits of Smart Recording are as follows:

#### 1. Easy and Integrated Access




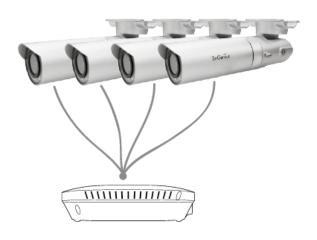

EnGenius


#### 2. Integrated Storage


**Smart Recording** technology integrates the EnGenius **Intelligent Router** and **IoT Gateway** storage feature and allows you to store the media files on the centralized storage over the router.

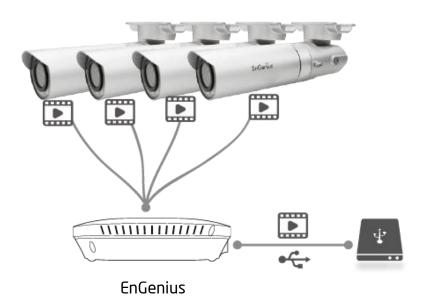

#### 3. Easy Remote Access over Internet

Traditionally, you cannot get access to your Camera over the Internet without some manual configuration known as Port Forwarding because your camera is installed under a local network. **Smart Recording** technology takes care of all the complicated setup and leave you with ease of control. That is, you will be able to access any of the cameras in your home by providing their DDNS names on EnViewer or web browser if you are using PC/Laptop.

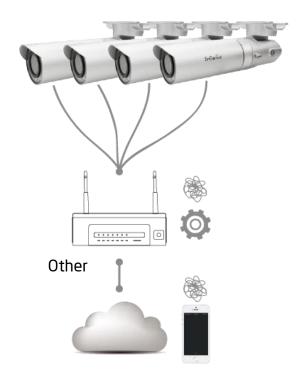

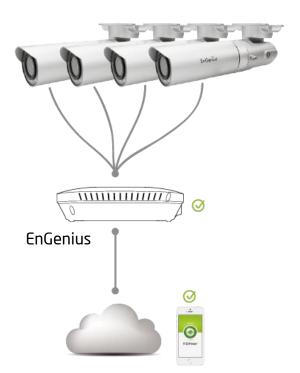


# 5.10. Enable Router Storage Function

The best thing about **Smart Recording** is that you can make use of the EnGenius Router Storage function. You should attach an external USB storage device (portable hard-disk or USB flash drive) to your router. Enter the Username and Password of **your router** and press **Login**.




If you have not yet enable Samba Server on your router, choose **USB Port** > **File Sharing**. Skip this step if samba is already enabled. Then, **Enable** Samba Service and click on **Apply** to activate the function.

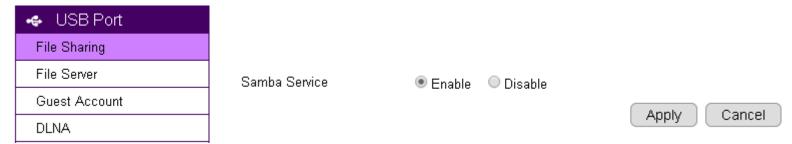

On your router's Main Menu, Click **System** > **IP Camera** to access the connected cameras.


**Note**: that **only EnGenius Cameras** can be managed collectively by EnGenius Router. For other vendor's cameras, you still have to configure them one by one manually.



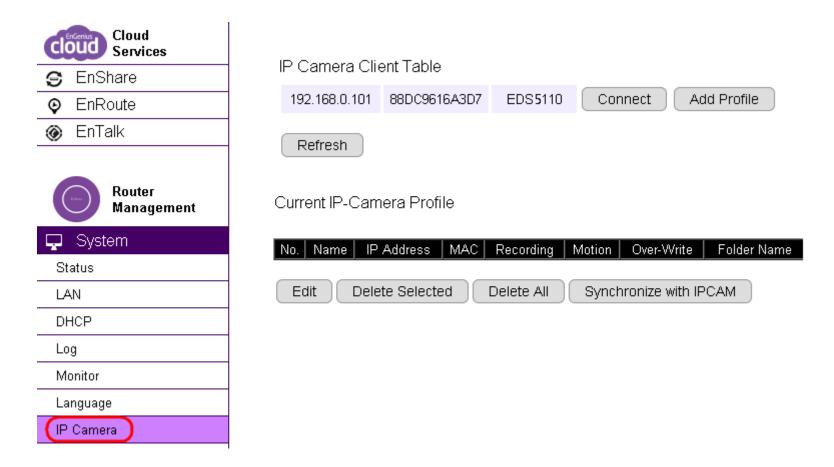

You should be see all your cameras listed on the **IP Camera Client Table**. If not, click **Refresh** button to scan the network again. Please be noted that only EnGenius Cameras will be listed on the table.

#### IP Camera Client Table

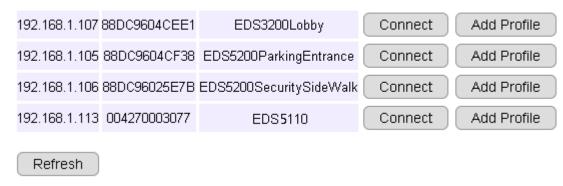

**Connect:** You can get access to the selected cameras' camera mange page.

Add Profile: Add the selected camera to a profile (please refer to next section for more detail on Profile)

### 5.11. Camera Profile

A Profile is an entry that represents the added camera. You must add the camera to a profile so that the router has the privilege to configure your camera and link them together.


### 5.11.1.Add Profile

This example shows 4 connecting cameras on the router. We have chosen to add two cameras (Lobby and Entrance) for demonstration purpose.

Click on Add Profile button to add the chosen camera.

IP Camera Client Table

192.168.1.113	004270003077	EDS1130	Connect	Add Profile
192.168.1.107	88DC9604CEE1	EDS5110Lobby	Connect	Add Profile
192.168.1.100	003110016621	EDS3110	Connect	Add Profile
192.168.1.105	88DC9604CF38	EDS5110ParkingEntrance	Connect	Add Profile

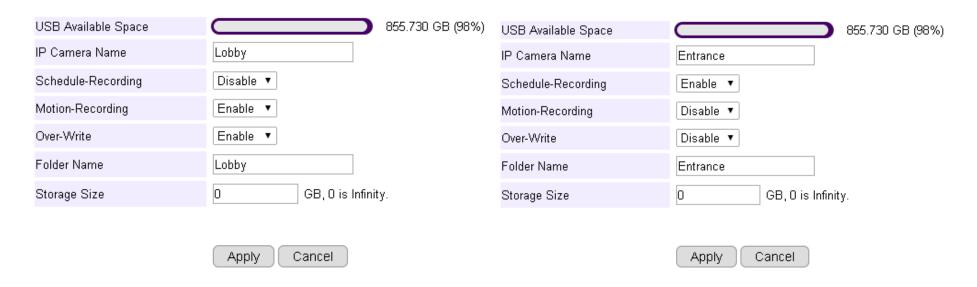

IP Camera Name: Lobby (use meaningful name for better identification)

**Scheduled-Recording**: Enable/Disable this type of recording

Motion-Recording: Enable/Disable this type of recording

Over-Write: Enable/Disable over-writing the old files when there's no space for storing the new files

**Folder Name**: The name of the folder where the media files of this camera will be stored on the router storage.

Storage Size: put 0 if storage is unlimited.

Click **Apply** when done.

The added cameras will be listed as shown below.

#### Current IP-Camera Profile

No	. Name	IP Address	MAC	Recording	Motion	Over-Write	Folder Name	Storage Size	Select
1	Lobby	192.168.1.107	88DC9604CEE1		4	4	Lobby	0	
2	Entrance	192.168.1.105	88DC9604CF38	✓			Entrance	0	

Edit Delete Selected Delete All Synchronize with IPCAM

You can **Edit** or **Delete** profile by selecting the profile and click on the buttons below.

## 5.11.2. Edit Profile

#### Current IP-Camera Profile

No.	Name	IP Address	MAC	Recording	Motion	Over-Write	Folder Name	Storage Size	Select
1	Lobby	192.168.1.107	88DC9604CEE1		4	✓	Lobby	0	
2	Entrance	192.168.1.105	88DC9604CF38	✓			Entrance	0	

Edit Delete Selected Delete All Synchronize with IPCAM

**Select** the camera profile and then click **Edit** button to make the changes.

## 5.11.3. Delete Profile

#### Current IP-Camera Profile

No.	Name	IP Address	MAC	Recording	Motion	Over-Write	Folder Name	Storage Size	Select
1	Lobby	192.168.1.107	88DC9604CEE1		4	✓	Lobby	0	
2	Entrance	192.168.1.105	88DC9604CF38	✓			Entrance	0	



**Select** the camera profile and then click **Delete Selected** button to delete the profile.

Click **Delete All** to delete all the profiles.

# 5.11.4. Synchronize

Current IP-Camera Profile

No	Name	IP Address	MAC	Recording	Motion	Over-Write	Folder Name	Storage Size	Select
1	Lobby	192.168.1.107	88DC9604CEE1		<b>4</b>	4	Lobby	0	
2	Entrance	192.168.1.105	88DC9604CF38	✓			Entrance	0	

Edit Delete Selected Delete All Synchronize with IPCAM

# 5.12. Fine Tune Camera Configuration set by the Router

This section provides extra information on what actually happened to your camera's setting after you added it to the **Profile** on the router. It is helpful for you to go through the automatically configured camera settings and make proper changes when necessary.

Click on **Connect** button to open the chosen camera's login page.

IP Camera Client Table

camora c	SHOTIL TOLDIO			
192.168.1.113	004270003077	EDS1130	Connect	Add Profile
192.168.1.105	88DC9604CF38	EDS5200ParkingEntrance	Connect	Add Profile
192.168.1.106	88DC96025E7B	EDS5200SecuritySideWalk	Connect	Add Profile
192.168.1.107	88DC9604CEE1	EDS5110Lobby	Connect	Add Profile
192.168.1.100	003110016621	EDS3110	Connect	Add Profile

### 5.13. Access the Media files on the Router

# 5.13.1. Using web browser

Please refer to EnGenius Router user's manual for more detail on the Shared Storage feature.









EnGenius Wireless Router ESR1750















#### Please select an account



- **2**
- Admin (The Admin user is allowed to access all the folders of the storage page)
- Guest (The Guest user has right to access the Guest folder only)

Start

Choose Admin and click on Start button.

#### **EnShare Web Access**

Select a target USB device to access the storage sharing

Note: Connecting single USB drive is suggested if there is no device shown on the list.




Choose the storage device to access the file.




In the previous example, the **Lobby** camera profile defines the path **/sda1/IP\_Camera/Lobby/**The media files will be stored as shown below.



#### Click the file to download it.

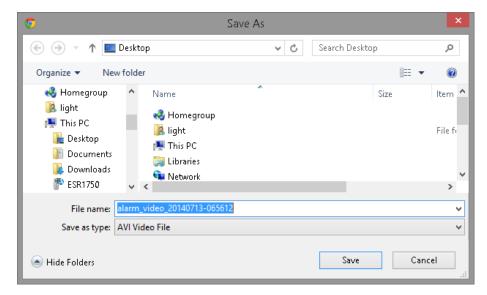


## 5.13.2. Using Windows File Explorer

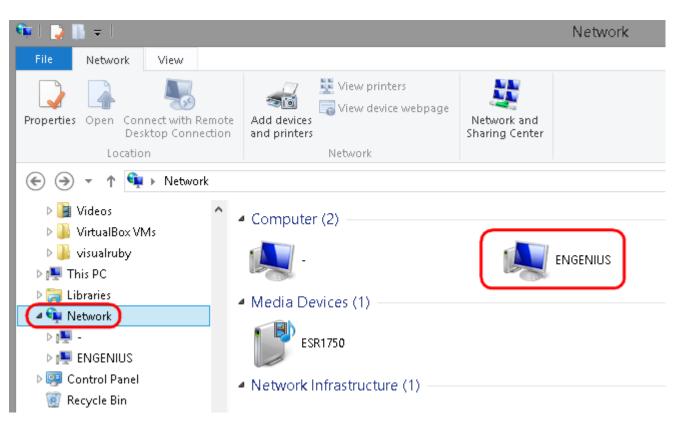


Once enabled Samba on the EnGenius router, you should find the router under Network in your File Explorer as shown above.

Double click on ENGENIUS to get access to the storage space.

Upon security prompt, enter the **router's username** and **password** to continue.

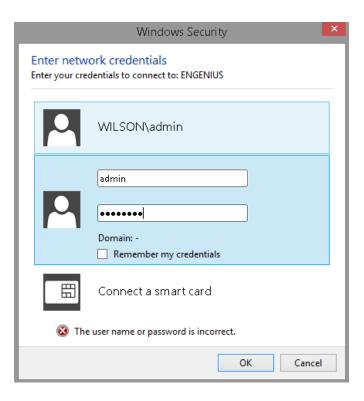

### You can access the media files located under **\\ENGENIUS\sda1\IP\_Camera\Lobby**

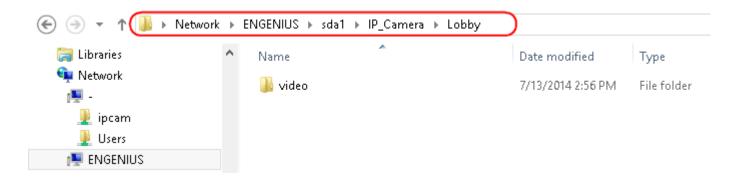

### 6. Camera Connecting to Other Router


Normally, you do not need to make any changes to your router setting to be able to use the camera. However, in case if you experience issues in connecting the camera, you should probably check for the following settings. UPnP, UPnP Traversal and Firewall.

#### **UPnP and UPnP Traversal:**

Universal Plug and Play (UPnP) allows the other device to detect the presence of the camera so that communication become possible. Please ensure that your router supports UPnP Traversal and has it enabled. Most of the modern router today supports this feature. You should enable UPnP if you wish your camera to be recognized by the home router. If you can't find the related settings, they are most likely enabled by default. UPnP Traversal makes camera remote access over the Internet possible using camera DDNS name.


#### Firewall:

By default, the firewall function of the router is not configured to filter out specific traffic. However, in case if you have trouble accessing the camera view, it's likely that the traffic has been blocked by the firewall on your router. You may want to double check whether you have blocked the service ports. Check the camera setting **System** Service Port. Make sure you do not block the following ports: 80, 50000, 554, 50045, 9091 and 50075.

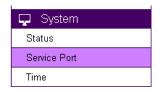


## 7. Application Guide

This chapter demonstrates a common application using EnGenius Camera. The examples assume that the camera is already connected to a router that has Internet accessibility.

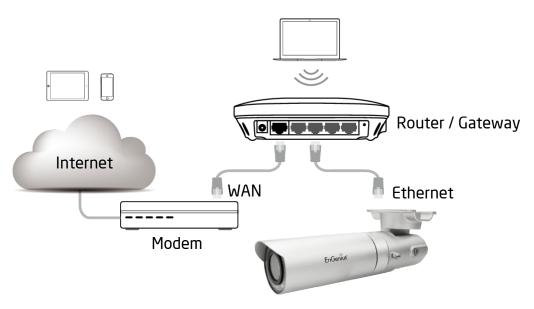

**Note**: Please ensure that your router supports UPnP Traversal and has it enabled. Most of the modern router today supports this feature. If you can't find the related settings, they are most likely enabled by default. UPnP Traversal makes camera remote access over the Internet possible using camera DDNS name (0e95c28.engeniusddns.com).

## 7.1. Example: Remote Surveillance and Motion Detection.

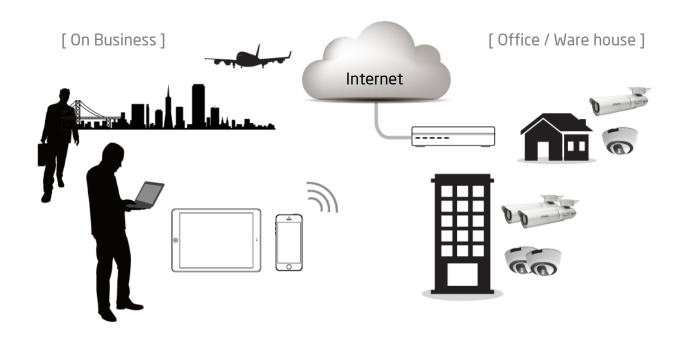


The application concept diagram shows a camera monitoring the property like office or warehouse. The management staff wants to remotely monitor their responsible property and needs to be alarmed when motion (intrusion) is detected.

# 7.1.1. Step 1: Choose Event Control

System	Event Control	
Network  Media	Enable Name	○ Enable ● Disable
R Event Management	Schedule	☐ Every Day ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun
Event Control  Motion Detection	Time of day	☐ All Day From : To :
Tampering Detection	Trigger Type	○ Time ● Detectors
Event Action		Motion Detection ○ Tampering Detection
Event Server	Event Notification	
Storage Info	Push Message	○ Enable
& User Management	E-Mail	○ Enable
	VMS	○ Enable
	Event Action	
	Action Type	Disable


Please select preferred Event Action; for example here, E-Mail would be suggested.

## 7.1.2. Step 2: Configure Motion Detection

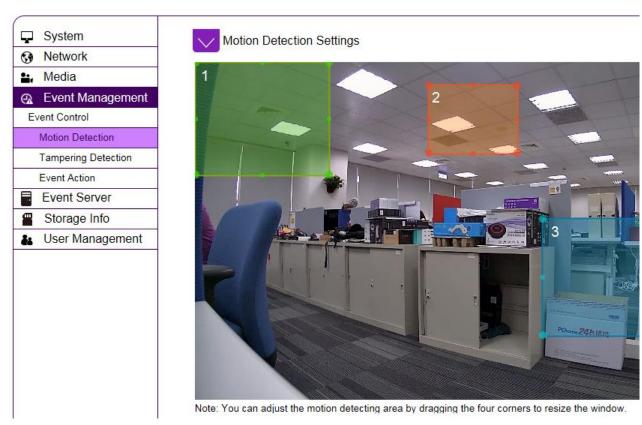

Please specify Window of your interest and click Apply.

## 7.1.3. Step 3: Configure Event Action

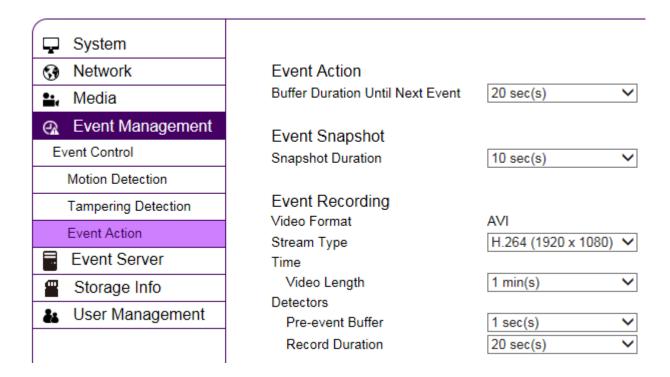

Select desired **Event Duration** and **Interval**; if you enable **Event Recording** via available methods such as **Network Storage** or **FTP**, please also review related settings regarding length and resolution. Once done, click **Apply** to activate the settings.

### 8. Trouble Shooting

### 8.1. Viewing Your Video

#### How do I view using a mobile?

You can view your video on your mobile devices (iOS or Android) by using **EnViewer**. EnViewer is an App that allows you to view and manage your camera at real time.

#### Where can I download my app?

You can download it by searching APP store (iOS) or Google Play(Android) for "EnViewer". You can also scan the following QR code to download **EnViewer** directly.

Android





iOS (for iPhone and iPad)





#### How do I use the web viewer on a computer?

You can view the camera at real time using a web browser. The supported web browsers are Google **Chrome** and Microsoft **Internet Explorer**. Given that you have configured your camera properly, you should be able to get access to your camera by entering its **DDNS** or **IP** address.

If you may have troubles finding your camera on your network, please use the provided utility on the enclosed CD, **EnViewer Finder**, to find out your camera's current IP address.

# 8.2. Networking

#### How can I minimize interference?

Make sure there is no electrical appliance near the camera, such as microwave or devices that may interfere with the camera. Upon experiencing interference, try to turn off possible electrical devices that are currently running.

## 8.3. Security and Privacy

Accessing the camera from the Internet is convenient; however, it is also possible for anyone who has your username and password to login into your camera. Therefore, it is crucial to keep your username and password safe and change them regularly. Your videos or images are stored either locally or in network storage. The images and videos are accessible only when provided with proper security check.

#### Can EnGenius employees view my video?

No! No one can view your video or login into your camera without security check. The username and password is stored locally in your camera and it is not accessible by anyone but yourself. Therefore, it is important to keep your security information safely.

### 8.4. Cloud Video Services

#### If I cannot connect to the cloud service, what should I do next?

Please check your router's Internet settings. You can first check the Internet connectivity from other devices connecting to the router and determine possible sources to cause the issue. If other connecting devices can connect to the Internet through the router, the problem may be caused from other router settings. Check the security settings and turn off any firewall rules on the router to see if connection can get through.

## 9. Appendix

#### **Federal Communication Commission Interference Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.