


# Quick Installation Guide

**EAP1250**  
version 1.0

Ceiling Mount Design  
Wireless Indoor Access Point

## Package Contents

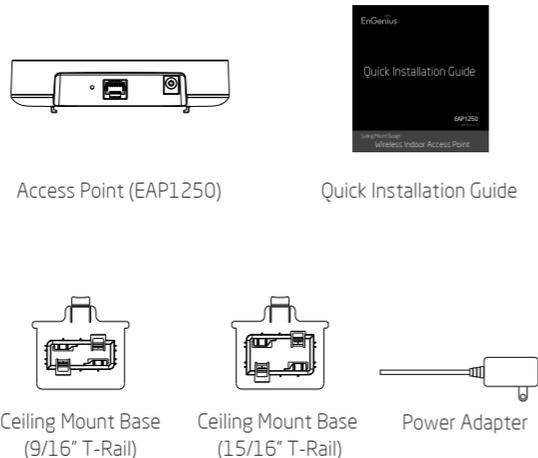


## Minimum Requirements

- + Broadband Internet Service  
(Cable or DSL Modem)
- + Internet Browser  
(Internet Explorer, Safari, Firefox, Chrome)

## 1 Connecting the Access Point


- A) Connect one end of the Ethernet cable into the Ethernet port of the Access Point and the other end to the Ethernet port on the computer.
- B) Connect the Power Adapter to the DC-IN port of the Access Point and plug the other end in to an electrical outlet.

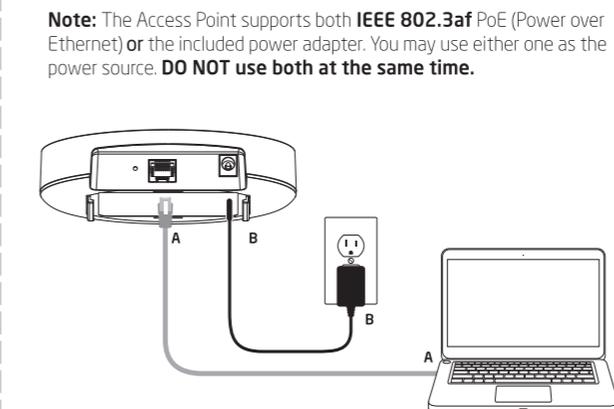

\* An optional power adapter is available.


## 2 IP Address Configuration

- A) Once your computer is on, ensure that your TCP/IP is set to **On** or **Enabled**. Open **Network Connections** and then click Local Area Connection. Select **Internet Protocol Version 4 (TCP/IPv4)**.


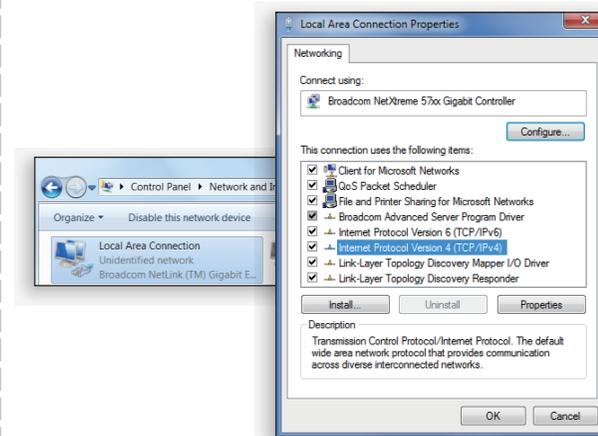


## 3 Access Point Setup

- B) If your PC is already on network, ensure that you have set it to a static IP Address on the interface. (Example: 192.168.1.10 and the Subnet Mask address as 255.255.255.0.

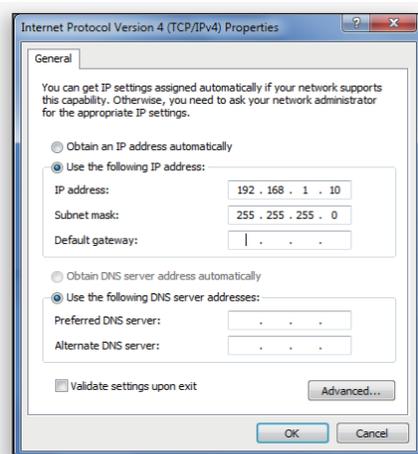

- A) Open a web browser on your computer. In the address bar of the web browser, enter **192.168.1.1** and **enter**.
- B) A login screen will appear. By default, the username of the Access Point is **admin** and the password is **admin**. Enter the current username and password of the Access Point and then click **Login**.
- C) The EnGenius Access Point User Interface will appear. This device can operate in Access Point operating mode.

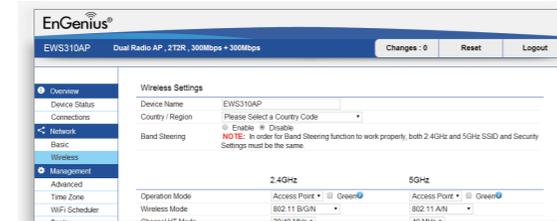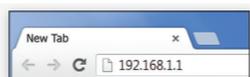


\* Your model number may be different in the web browser interface.

## Mounting the Access Point

### Ceiling Mounting the Access Point :

- A) Slide the ceiling mount base into the slot of the Access Point.
- B) Hold the Access Point with one hand to reach the other hand over the T-Rail sides of the bracket. Then hook the stationary end of the ceiling mount bracket onto the T-Rail.

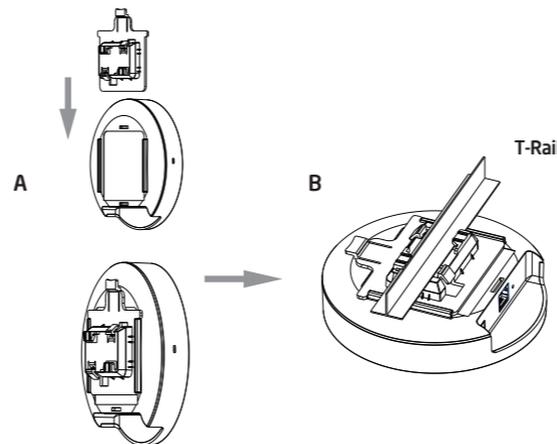

## Technical Support

Country of Purchase	Service Center	Service Information
North America www.engeniuscanada.com	Canada	rma@engeniuscanada.com Toll Free: 888 397 2788 Local: (+1) 905 940 8181
	Los Angeles, USA	support@engeniustech.com Toll Free: 885 735 7988 Local: (+1) 714 432 8668
Europe www.engeniusnetworks.eu	Netherlands	support@engeniusnetworks.eu Local: (+31) 40 8200 887
Africa / CIS / Middle East www.engenius-me.com	Dubai, UAE	support@engenius-me.com Toll Free: 0800 364 364 87 Local: (+971) 4 357 5599
Asia / Oceania www.engeniustech.com.sg	Singapore	techsupport@engeniustech.com.sg Local: (+65) 6227 1088
Taiwan www.engeniustech.com.tw	Taiwan, R.O.C.	twsupport@engeniusnetworks.com Toll Free: 0800 003 885 Local: (+886) 2 2652 1808

## Notes

Maximum data rates are based on the IEEE standards. Actual throughput and range may vary depending on many factors including environmental conditions, distance between devices, radio interference in the operating environment, and mix of devices in the network. Features and specifications subject to change without notice. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Trademarks and registered trademarks are the property of their respective owners. For United States of America: Copyright ©2017 EnGenius Technologies, Inc. All rights reserved.