

User Manual

DuraFon PSL Digital Long Range Cordless System (Single Line DuraFon PRO System)



EnGenius Customer Service
<http://www.engeniustech.com/>
<http://www.engeniuscanada.com/>

Table of Contents

SAFETY INSTRUCTIONS.....	4
GENERAL SAFETY INSTRUCTIONS	4
PRODUCT SAFETY INSTRUCTIONS	5
BATTERY SAFETY INSTRUCTIONS	6
REGULATORY INFORMATION	8
EQUIPMENT CHECKLIST.....	12
HANDSET ILLUSTRATION	14
HANDSET FEATURES.....	14
BASIC HANDSET FEATURES.....	15
ADDITIONAL HANDSET FEATURES.....	17
ADMINISTRATOR FEATURES (REGISTER TO PRO BASE).....	20
BASE ILLUSTRATION	21
BASE FEATURES	22
BASIC BASE STATION FEATURES	22
ADDITIONAL BASE STATION FEATURES	23
BROADCAST	23
<i>A. Broadcasting from Base to Handset</i>	23
<i>B. Broadcasting from Handset to Base</i>	23
INTERCOM CALL	23
<i>A. Intercom/2-Way from Base to Handset</i>	23
ADMINISTRATOR FEATURES	24
CHARGER ILLUSTRATION	26
CHARGER FEATURES	27
GETTING STARTED	28
BASE STATION INSTALLATION	28
HANDSET AND CHARGER INSTALLATION	31
BASIC OPERATIONS	32

OPERATION MODES	32
A. Base Operation Modes	32
B. Handset Operation Modes	32
MENU TREE	33
MAKING A TELEPHONE CALL (FOR DURAFON PRO ONLY)	35
MAKING A 2-WAY/ INTERCOM CALL	35
Handset to Handset Calls	35
MAKING A BROADCAST	36
REDIAL (FOR DURAFON PRO ONLY)	37
RECEIVING A TELEPHONE CALL (FOR DURAFON PRO ONLY)	37
RECEIVING AN INTERCOM CALL	38
ENDING A CALL	39
ADJUSTING RECEIVER (EARPIECE) VOICE VOLUME	39
PLACING A CALL ON HOLD (FOR DURAFON PRO ONLY)	39
MUTE	39
DO NOT DISTURB (SILENT RING)	40
KEY GUARD	40
TO VIEW MISSED CALL(S) (FOR DURAFON PRO ONLY)	40
TO CALL BACK FROM CALL LOG (FOR DURAFON PRO ONLY)	41
BATTERY RECHARGE AND REPLACEMENT	41
ADVANCED OPERATIONS	42
HANDSET REGISTRATION	42
ADVANCED REGISTRATION:	43
HANDSET GROUP SUBSCRIPTION	44
CALL TRANSFER (REGISTER TO PRO BASE ONLY)	45
BASE SELECT (REGISTER TO PRO BASE ONLY)	45
VISUAL MESSAGE WAITING INDICATOR (VMWI)	46
LINE DEDICATION (REGISTER TO PRO BASE ONLY)	46
LINE SELECTION (REGISTER TO PRO BASE ONLY)	47
CHANGE SYSTEM AND LINE SETTINGS BY ADMINISTRATOR (REGISTER TO PRO BASE ONLY)	47
PHONEBOOK OPERATIONS	49
REPEATER OPERATION	52
MENU OPERATIONS	54
TECHNICAL SPECIFICATIONS	63

Safety Instructions

Caution: Your wireless telephone gives you freedom and flexibility to stay in touch while you move around. However, when using your phone equipment, safety instructions should be followed to avoid the risks of fire, electric shock, injury to person, and damage to property.

General Safety Instructions

1. When using your wireless phone, ensure your safety and the safety of others:
 - a. Always watch where you are walking and standing.
 - b. Don't let a phone call distract you from working safely.
 - c. If power goes out, it won't work. Recommend backup power.
2. In an emergency:
 - a. If an emergency occurs, dial the emergency phone number. Remember: if you are in an area where your phone does not have a clear signal from the base, it is highly probable that the call may not go through. Locate the nearest landline telephone or other communications device to call for help.
 - b. Emergency calls may not automatically provide emergency personnel with your name, phone number or location.
3. Notice to Hearing Aid Users: This phone system is compatible with inductively coupled hearing aids.
4. Notice to Cardiac Pacemaker Users: Preliminary studies done by the US FDA and others have shown that, although interference to the implanted cardiac pacemaker may occur when operating very closely, wireless telephones "do not seem to pose a significant problem for pacemaker wearers." However, until more is known, FDA suggests that people with pacemakers may want to take precautions when using or carrying a wireless telephone to ensure that there is ample distance between the telephone and the pacemaker. Do not carry the handset in a breast pocket. If you have any reason to suspect that interference is taking place, turn off your handset immediately.

Product Safety Instructions

1. Read and understand all instructions.
2. Follow all warnings and instructions including those marked on the product.
3. Changes or modifications to this product not expressly approved by the manufacturer will void the warranty and the FCC authorization to operate the equipment. Use only manufacturer provided accessories.
4. Do not use the telephone near water. Never spill liquid of any kind on this product.
5. Unplug the product from the wall telephone jack and power outlet before cleaning. Do not use liquid or aerosol cleaners. Use damp cloth for cleaning.
6. Do not place this product on an unstable cart, stand, or table. The product may fall and cause personal injury or damage to the product or other property.
7. Power Outage: In the event of a power outage, your handset charger will not recharge the handset battery, and the base station will not allow you to make an outgoing call or take an incoming call. Both the charger and the base station require electricity for operation. You should have a telephone that does not require electricity available for use during power outage, or have a temporary backup power supply.
8. Slots or openings in the product's housing are provided for ventilation. These openings must not be blocked or covered. Placing the product on a bed, carpeting, or other similar surface may block these openings and should be avoided. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
9. Never push objects of any kind into this product through housing slots/openings as they may damage the product, touch dangerous voltage points or short out parts that could result in fire, electric shock, or injury.
10. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.

11. Do not overload wall power outlets and extension cords as this may result in fire or electric shock.
12. To avoid electric shock or burn, do not disassemble this product. Send this product to an authorized service center when service or repair work is required. Call Customer Service for locations near you. Opening or removing covers may expose you to dangerous voltages, electrical currents or other risks. Incorrect reassembling of the product may cause electric shock when the product is subsequently used.
13. Avoid using the product during a storm. There may be a risk of electric shock from lightning.
14. Do not place the product where persons can step, trip, or fall on it.
15. Do not place conductive objects over or near the antenna.
16. Do not use the product to report a gas leak while in the vicinity of the leak.
17. Do not install the base station or the handset charger near microwave ovens, radios, TV sets, speakers, or other electrical equipment. These appliances may cause interference to the product or experience interference from the product.
18. Unplug the base station or the charger adaptor from the power outlet and refer to an authorized service center under the following conditions:
 - a. If liquid has been spilled into the product.
 - b. When the power supply cord or plug is damaged or frayed.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions.
 - e. If the product has been dropped or housing has been damaged.
 - f. If the product shows a distinct change in performance.

Battery Safety Instructions

1. Use only manufacturer approved Li-ion rechargeable batteries and charger. Do not use other types of rechargeable batteries or non-rechargeable batteries. The batteries could short-circuit, and the battery enclosure may be damaged causing a hazardous condition.
2. Follow the charging instruction in this manual and instruction labels and markings in the handset and charger compartments.

3. Battery must be recycled or disposed of properly. Do not dispose the battery in a fire. The cells may explode.
4. Do not dispose of the battery in municipal waste. Check with local codes for disposal instructions.
5. Exercise care in handling the batteries in order not to short-circuit the battery with conductive materials such as rings, bracelets, keys, pocketknife, and coins. The battery or conductive material may overheat and cause burn or fire.
6. Do not expose batteries to rain or water.
7. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause injury to eyes or skin. The electrolyte may be toxic if swallowed.
8. During charging, the battery heats up. This is normal and is not dangerous.

Regulatory Information

DuraFon PSL

FCC ID: A8J-922PSLBU(Base), U2M-SP922PRO(Handset)

IC: 10103A-922PSLBU(Base), 3616C-SP922PRO(Handset)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

Base Station

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is

subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device has been designed to operate with an antenna having a maximum gain of 2 dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

Portable Handset

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with IC RF exposure compliance requirements, please follow operation instruction as documented in this manual.

This device has been designed to operate with an antenna having a maximum gain of 2.5dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

Equipment Checklist


1. In DuraFon PSL, it includes one base (DuraFon PSL-BU) and one handset package(DuraFon PRO HC) as the following components:
 - a. Base Station x 1
 - b. Base Antenna x 1
 - c. Base AC/DC Adaptor x 1
 - d. Handset x 1
 - e. Low Profile Handset Antenna x 1
 - f. Optimal Performance Handset Antenna x 1
 - g. 1700mA Li-ion Battery Pack x 1
 - h. Charger x 1
 - i. Charger AC/DC Adaptor x 1
 - j. Telephone Cord x 1
 - k. Audio-in Cable x 1
 - l. Belt Clip x 1
 - m. Quick Guide, and Warranty Card
2. In DuraFon USL, it includes one base (DuraFon PSL-BU) and one handset package(DuraFon PRO UHF HC) as the following components:
 - a. Base Station x 1
 - b. Base Antenna x 1
 - c. Base AC/DC Adaptor x 1
 - d. Handset x 1
 - e. Handset Antenna x 1
 - f. 2300mA Li-ion Battery Pack x 1
 - g. Charger x 1
 - h. Charger AC/DC Adaptor x 1
 - i. Telephone Cord x 1
 - j. Audio-in Cable x 1
 - k. Clip Fastener x 1
 - l. Belt Clip x 1
 - m. Quick Guide, and Warranty Card
3. In a Base package(DuraFon PSL-BU), as the following components:
 - a. Base Station x 1
 - b. Base Antenna x 1
 - c. Base AC/DC Adaptor x 1
 - d. Telephone Cord x 1

- e. Warranty Card
- f. Audio-in Cable x 1

4. Optional Accessories

- a. Outdoor Antenna Kit (including antenna and cable)
- b. Lightning Protection Kit (including cable)
- c. DuraPouch
- d. Belt Clip
- e. Spare Battery
- f. Low Profile Handset Antenna
- g. Optimal Performance Handset Antenna


Handset Illustration

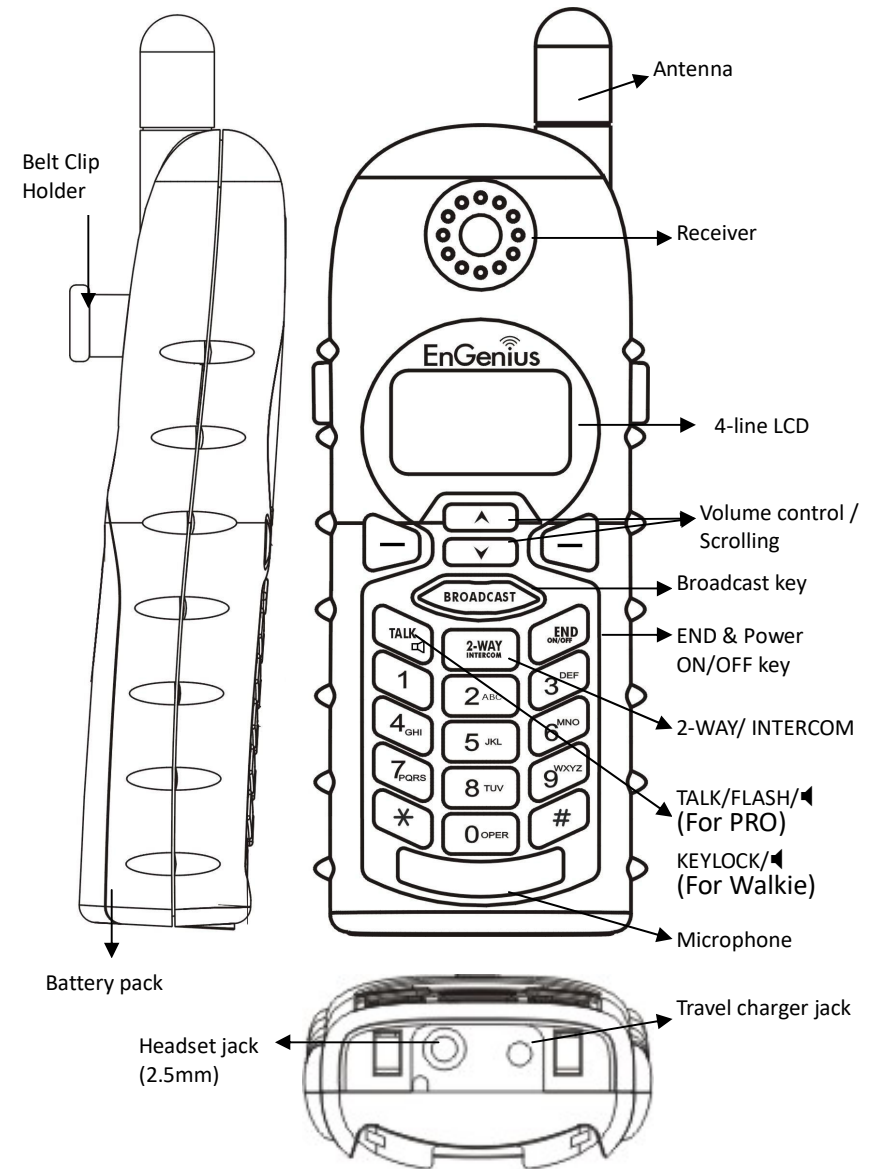

Handset Features

Basic Handset Features

1. 4-line LCD (Liquid Crystal Display)

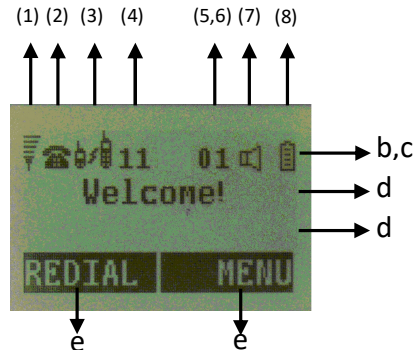

- The LCD display has LED (Light Emitting Diode) for backlighting.
- The 1st line of LCD consists of icons.
- Icons explanation from left to right
 - RSSI** (Receive Signal Strength Indicator)
During a call, the number of bars is proportional to the radio signal strength received.
 - ⊙ **Call in-progress** (ON/OFF-Hook)
Indicates if phone line mode is active
 - Intercom in-progress**
Indicates if Intercom mode is active
 - Handset ID**
Displays a handset icon and a 2-digit Handset ID
 - ⊙ **Two-Digit Address Index**
Shows address index when viewing contents of the call logs, text messages or phonebook
 - ⊙ **Line Indicator**
Indicates the number of the line being accessed by the handset.
 - Speaker phone**
Indicates if speaker phone is active
 - Battery Strength**
 - Number of bars is proportional to the amount of battery time remaining.
 - Indicates charging when in charger cradle.

- The 2nd and 3rd lines of the LCD, maximum 14 characters each, display status, message, menu selections, or user-editable alphanumeric characters.
- The last line displays the left and right soft keys.
Re: There is only right soft key in idle mode of DuraWalkie.
Note: "⊙" means only shown on DuraFon PRO handset.

2. Ringer

- Rings to an incoming call.
- Distinctive alert sounds indicating various events:
 - Single Beep: successful key entry
 - Double beep: failed operation or invalid key entry, also indicates power on/off
 - Periodic 1-Long-2-Short Beep (repeat every 10 seconds): low battery warning
 - Periodic 1-Long-2-Short beep (every 1 minute): low battery warning, out of range or call on hold

3. TALK/FLASH/Ⓚ (For DuraFon PRO only)






- Places or answers a telephone or intercom call
- Sends a Flash signal to phone line to retrieve a dial tone after the call ends, or to perform the call waiting feature provided by local phone companies during a call.
- Press and hold the key for one second to enable/disable speakerphone

4. KEYLOCK/Ⓚ (For DuraWalkie only)

- In Idle mode, press to lock up the keypad
- In 2-Way/Intercom mode, press and hold Ⓚ key to enable/disable speakerphone.

5. 2-WAY/INTERCOM (2-WAY INTERCOM)

- Places an intercom call to another handset ID or a group ID.
- Intercom calls are digital, full duplex, and are conducted without the assistance from the base.
- Press and hold Ⓚ key for one second to enable/disable speakerphone.



6. BROADCAST()
Half duplex broadcasting to handsets for immediate announcement
7. Left/Right Soft Keys()
Make menu selection.
8. Up() /Down() Scrolling Keys
 - a. Scroll through records and menu selections.
 - b. Adjust receiver voice volume when in Talk mode.
9. END; On/Off Key()
 - a. Ends a call.
 - b. Leaves current menu operation, up one level.
 - c. Press for 3 seconds to off the power

Additional Handset Features

1. Multiple handsets registration
 - a. Up to 90 handsets.
 - b. ID 10 and 11 are the first two ID's assigned by the base and are designated "administrators" who can change base settings such as greeting message and other base administrative functions.
Note: Unless necessary, it is better not to assign ID 10 and 11 to DuraWalkie handsets.
 - c. ID 01-07: Group IDs. Handsets can "subscribe" from the handset menu to group(s) and be paged when a landline caller or an intercom caller enters a Group ID.
2. Ringer / Vibrator
 - a. Six ringer volume selections (high/ medium/ low/ vibrate/ vibrate-and-ring/ off)
 - b. Four ringer type selections
3. Caller ID(For DuraFon PRO only)
Displays incoming call phone number and name on the LCD (needs Caller ID service from local telephone company)
Re: If behind a PBX or Key system, Caller ID information will only be recognized if the PBX or Key system passes that information

- through the analog ports.
4. Call Waiting with Caller ID(For DuraFon PRO only)
Displays 2nd incoming call information on the same phone line when 1st call is in progress (needs Call Waiting with Caller ID service from local telephone company)
Re: If behind a PBX or Key system, Caller ID information will only be recognized if the PBX or Key system passes that information through the analog ports.
5. Name Tagging with Caller ID(For DuraFon PRO only)
Matches the Caller ID with the phone book entries; once matched, the LCD screen will display the name or nickname instead of pure Caller ID info (needs Call Waiting with Caller ID service from local telephone company)
Re: If behind a PBX or Key system, Caller ID information will only be recognized if the PBX or Key system passes that information through the analog ports.
6. DND (Do Not Disturb, i.e., Silent Ring)
Silences the incoming call ring for current call only.
7. Three Call Logs(For DuraFon PRO only)
 - a. Called Log: Stores 10 phone numbers (up to 28 digits each) dialed most recently. Can perform last-number redial on all 10 numbers.
 - b. Received Call Log: 10 entries (14-digit phone number, 14-character names, and time stamp), needs Caller ID service from local telephone company.
 - c. Missed Call Log: 10 entries (14-digit phone number, 14-character names, and time stamp), needs Caller ID service from local telephone company.
 - d. Phone numbers and names can be saved into phonebook while in display.
 Re: If behind a PBX or Key system, Caller ID information will only be recognized if the PBX or Key system passes that information through the analog ports.
8. Key-guard
9. Dialing Prefix(For DuraFon PRO only)
Up to 14 digits, including pause(s), one access code can be pre-

programmed to be added automatically in front of the dialed number when dialing from call logs, phonebook, and dial-and-send dialing.

10. Call Hold(For DuraFon PRO only)
 - a. Places call on hold
 - b. Battery Hot Swap: Change battery while call is on hold.
11. Mute
12. Phonebook
 - a. 90 entries, each stores a phone number or handset ID (up to 28-digit) and name (up to 14-character)
 - b. Alphabetically sorted display and searched by letter
 - c. Dial from display
 - d. During the stand-by mode, you can enter the phonebook by pressing  or  scrolling key
 - e. Phone book transfer via air
 - i. Transfer specific phonebook to one handset or all registered handsets
 - ii. Transfer all phonebooks to one handset or all registered handsets

Re:For DuraWalkie, it can only store 2-digit handset ID(or Group ID).
13. Key Tone
 - a. Three key-tone volume selections (high/low/off)
 - b. Four key-tone type selections
14. Call Timer(For DuraFon PRO only)
 - a. Display call time duration for current call during and immediately after the call
15. Call Transfer
 - a. Direct Transfer: transfer a telephone call to another handset without announcement.
16. PBX option transfer(For DuraFon PRO only)
 - a. PBX transfer via air
 - b. Transfer specific PBX option to one handset or all registered handsets
 - c. Transfer all PBX options to one handset or all registered

handsets

17. Base Selection(For DuraFon PRO only)

When enable from the handset menu, a handset user can manually select the base which is the nearest one with user before making an outgoing call.
18. Repeater Operation

In order to get better range performance for handset to handset calls(intercom and broadcast), install a repeater and make the calls via repeater is able to extend the range of handset to handset calls.


Administrator Features (Register to PRO base)

Handsets 10 and 11 are designated administrators. Both have the same authority to perform base station administrative functions from their handset menu selections. No password is required.

1. Supports both DTMF and Pulse dialing(For DuraFon PRO only)
 - a. From an administrator handset (Handset 10 or 11), press **MENU-9-1**-enter base ID(00-07)-**1** to select Tone or Pulse dialing mode.
 - b. Default is Tone dialing.
2. Administrator programmable Flash key timing(For DuraFon PRO only)
 - a. From an administrator handset (Handset 10 or 11), press **MENU-9-1**- enter base ID(00-07)-**2** to select flash key timing
 - b. 9-level (100 ms - 900 ms) timing selections, default= **300 ms**.
 - c. The default value (**300 ms**) works in most areas. Changing this setting may result in Flash function not working. Change only when you are certain the new value will work.
3. Call Transfer to PBX Extension(For DuraFon PRO only)
 - a. When the DuraFon PRO is installed behind a PBX system, you can pre-program the feature code of call transfer function.
 - b. Need to adjust the Flash time to match your PBX setting.

Re: If loosing administrator handsets (handset 10 and 11), all settings must be reset (reset the base and re-register all handsets).

Base Illustration

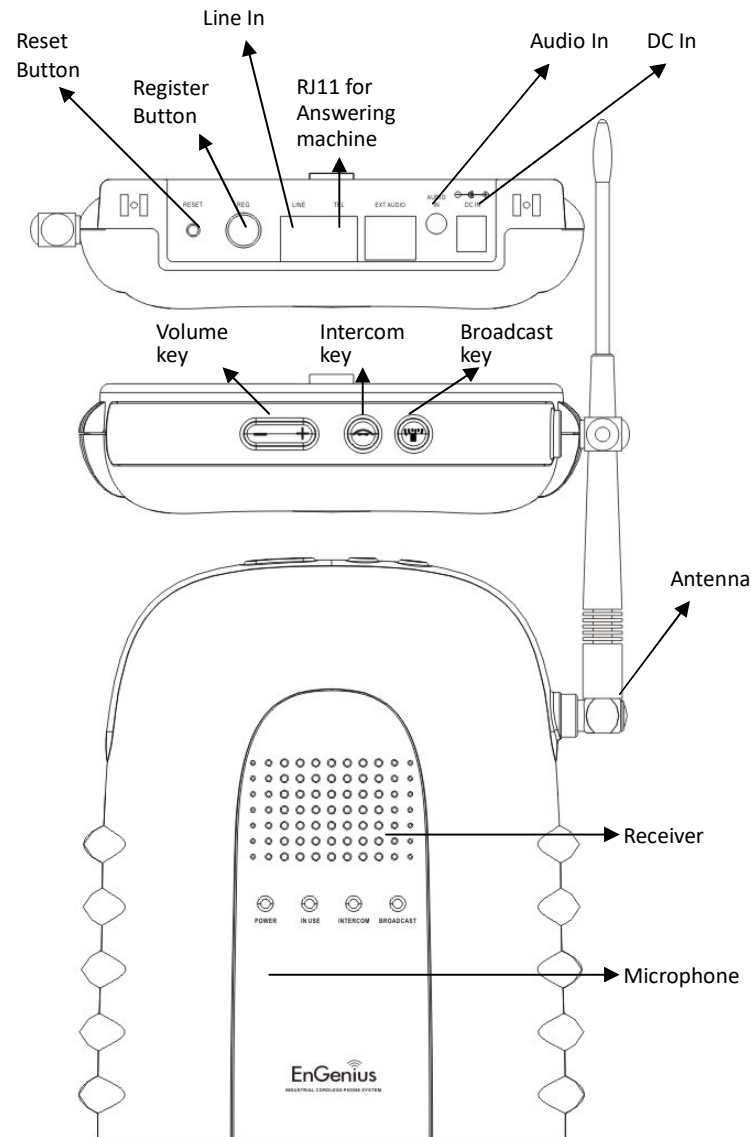

Base Features

Basic Base Station Features

1. Antenna
 - a. The antenna port has a **reverse thread connector**; to remove antenna or cable, turn clockwise; to install, turn counterclockwise. Improper installation may damage the connector
 - b. When using an outdoor antenna, locate the antenna (not the base station itself) as high as possible for a clear transmission path.
2. LED
 - a. Power: it indicates base station has power.
 - b. In-Use: it indicates an active telephone line.
 - c. Intercom: it indicates "Intercom" taking place.
 - d. Broadcast: it indicates "Broadcast" taking place.
3. Reset Button
 - a. Restores base station to factory settings
 - b. Reset button is indented to prevent accidental system reset.
 - c. All handsets (including administrator) and additional base(s) need to be re-registered after a base station reset.
4. Registration Key (REG)

Enters registration mode along with handset, assigns handset ID (10-90).
5. Line



Standard RJ11/CA11A connector to plug in the telephone line
6. Telephone:


Another RJ11 to plug in the optional answering machine
7. Audio-in Jack (3.5mm)
8. DC In: to plug in the power adaptor
9. Voice Volume

Additional Base Station Features



Broadcast

A. Broadcasting from Base to Handset

1. Broadcast to all handsets
 - a. Press  key on the base station to intercom all registered handsets.
 - b. Hear bi-bi-beep while the initiating handset broadcast all handsets within communication coverage.
 - c. The Broadcast LED will light up
 - d. Press the  key again and return to IDLE mode

 11
From BASE 00
Volume: 2
SILENT


B. Broadcasting from Handset to Base


1. Broadcast to all Bases (DuraFon PSL-BU)
 - a. Press and hold the  key on the handset to broadcast all handsets and bases.
 - b. Start to speak the message to be broadcasted once you hear the “beep” sound; the speakerphone of the base will be opened up.
 - c. The Broadcast LED on the bases will light up
 - d. Press the  key again and return to IDLE mode


 11
From BASE 00
Volume: 2
SILENT

Intercom Call

A. Intercom/2-Way from Base to Handset

1. Press  key on the base station to intercom all registered handsets. The first handset to answer will establish a voice link with the base.
2. The INTERCOM LED will flash until a handset responds.
3. The base unit will page for 15 seconds, then terminate the page if no handset responds.
4. Before a handset answers, the INTERCOM can be cancelled from the

 11
Incoming page
From Ext#90
SILENT

base by pressing  again. However, once a handset answers, only the answering handset can end the call.

Notes:

1. Due to for comply with existing DuraFon-HC, the display does not match the behavior. For example, the intercom call from base to handset, it displays “from Ext #90” instead of “from Base xx”.
2. No support line detection feature in DuraFon PSL-BU base. Even you set “Line Det” from an administrator handset (Handset 10 or 11) via pressing **MENU-9-1**—enter base ID(00–07)-**3** to enable Line Det.
3. In DuraFon PSL-BU base, no support “Auto Attendant”.
4. In DuraFon PSL-BU base, no support “3-way Conference”.
5. In DuraFon PSL-BU base, no support “Announced call transfer”
6. In DuraFon PSL-BU base, no support “ call waiting” from other telephone lines, due to it is only single line.
7. In DuraFon PSL-BU base, no support “Broadcast through PBX”

Administrator Features


Handsets 10 and 11 are designated administrators. Both have the same authority to perform base station administrative functions from their handset menu selections. No password is required.

1. Supports both DTMF and Pulse dialing(For DuraFon PRO only)
 - a. From an administrator handset (Handset 10 or 11), press **MENU-9-1**—enter base ID(00–07)-**1** to select Tone or Pulse dialing mode.
 - b. Default is Tone dialing.
2. Administrator programmable Flash key timing(For DuraFon PRO only)
 - a. From an administrator handset (Handset 10 or 11), press **MENU-9-1-2** to select flash key timing
 - b. 9-level (100 ms - 900 ms) timing selections, default= **600 ms**.
 - c. The default value (**600 ms**) works in most areas. Changing this setting may result in Flash function not working. Change only when you are certain the new value will work.

3. Call Transfer to PBX Extension(For DuraFon PRO only)
 - a. When the DuraFon PRO is installed behind a PBX system, you can pre-program the feature code of call transfer function.
 - b. Need to adjust the Flash time to match your PBX setting.

Re: If losing administrator handsets (handset 10 and 11), all settings must be reset (reset the base and re-register all handsets).

Charger Illustration

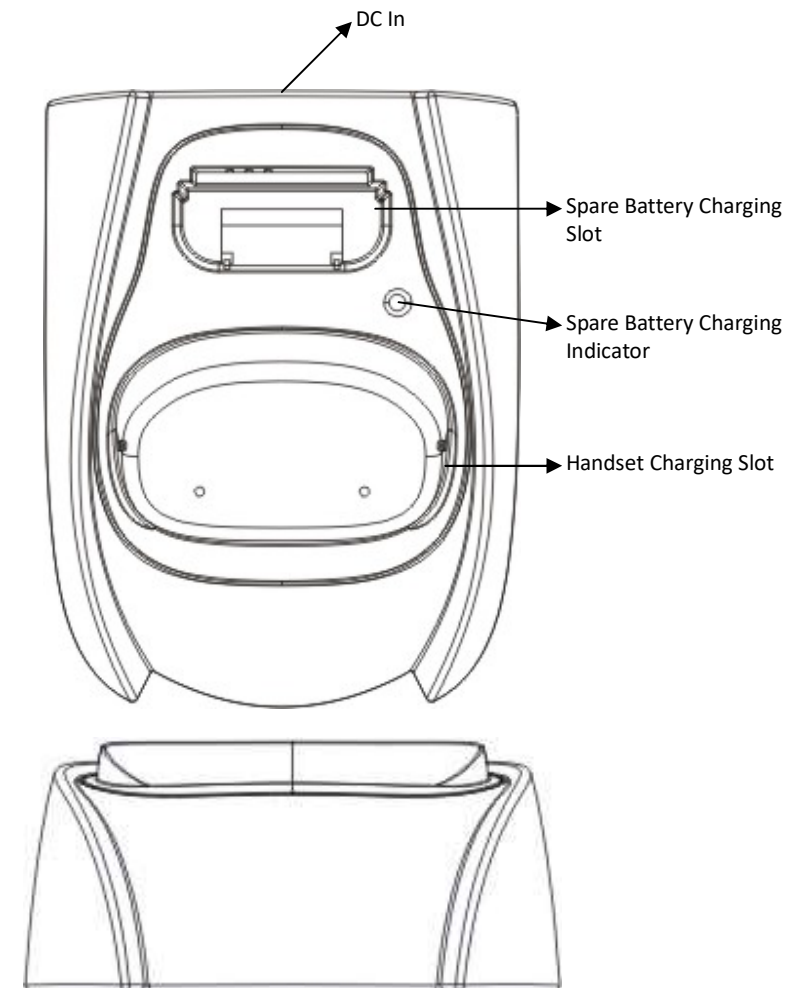

Charger Features

1. DC In
Connects to Charger AC Adaptor.
2. Handset Charging Slot
 - a. Charge handset battery when handset is placed in cradle.
 - b. Refer to the handset LCD for charging status
 - (1) Charging: LCD screen showed "Charging"
 - (2) Fully Charged: battery status bar stands still and the LCD screen would display "Fully Charged"
 - (3) Charge Fail: Should an error occur during charging mode, the LCD screen would display "Charge Fail"
3. Spare Battery Charging Slot
 - a. Charge spare battery when battery is placed in slot.
 - b. LED as the spare battery charging indicator
 - (1) Slot is empty and the power is on: LED is Green light
 - (2) Charging: LED is Orange light
 - (3) Fully Charged: LED returns to Green light
4. It is impossible to overcharge the battery using this charger.
5. The adaptor for charging station can be used as travel charger as well. However, you cannot turn off the power while charging with the travel charger. A Warning message: "Unplug Travel Chgr then OFF" will be shown on the LCD display.

Notes:

- I. Fully charge battery packs before first use.
- II. Both handset and spare batteries can be charged at the same time.
- III. Handset will be "power on" automatically when placing on the charging slot.
- IV. However, if you run down the battery, it will take around one minute for handset to auto power on.

Getting Started

Base Station Installation

For best performance, maintain a distance of at least 1 meter (about 3 feet) between the base station and other electronic devices (e.g., TV, computer, stereo, fax machine, answer machine, cordless phone, etc.)

1. Install base station antenna.
The base station's antenna port has a **reverse-thread connector**; to install antenna or cable, turn counter-clockwise; to remove, turn clockwise. Improper installation may damage the connector.
2. Plug the transformer end of the base station AC/DC adaptor into a standard AC electrical power outlet, plug the other end into the "DC In" jack on the back of the base station.
 - a. The base adaptor's DC plug is larger in dimension than the charger's DC plug. The charger adaptor's DC plug will not fit into the base's DC In jack.
 - b. The base station's power supply (DC Adaptor) and telephone line should be plugged into a surge protector with phone line protection.
3. Plug phone cord into the "LINE" Jack
4. A standard telephone or answering machine can be plugged into the adjacent receptacle on the bottom of the base station marked TEL
5. To use the Music/Message-On-Hold feature: Connect one end of a standard audio cable into a radio or audio player, and plug the other (3.5 mm) end into the MOH jack on back of the base.


Multi-base setups:

EnGenius DuraFon PRO has the capability to expand the coverage or capacity.

Re: For best performance, maintain a distance of at least 10 meters (about 30 feet) between any two base stations.

- Expanding coverage
Parallel connects the telephone lines in each base as below schematic(i.e. for 4-line base, up to 8 bases), the use coverage will be several times increased.

Note: Telephone calls cannot be handed off between base units.

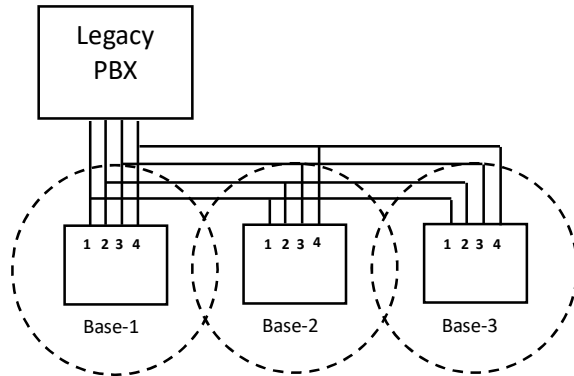

Re : when a call is coming in from L1, all handsets can pick up the call, as long as the handsets are in the coverage of base1~3.

1. Handset Registration.
 - a. Press **REG** button on Base 00(default), four LEDs will light up in setting mode
 - b. Handset operation: Press **MENU**→**6**→**1**. (It will complete the registration process)
 - c. Repeat, as needed, to add handsets

Note: Additional handsets should be added to the system before adding additional base units.

2. Establishing additional Base Units:
 - a. Press REG button on new Base.
 - b. Use Handset 10 or 11 to Add base :
Press **MENU**→**8**→**1**
 - c. Enter 01~07 (base ID)
 - d. Repeat, as needed, to add base units

☎ 10
Select Mode:
1. Add Base


☎ 10
Added Base
Number : **
CANCEL

Notes:

1. Only Handset 10, 11 can assign Base ID.
2. Base 00 is a primary base. All handsets must register only on Base 00.

- Expanding capacity

User capacity can be increased by adding additional base units.
Up to 8 base units can be supported.

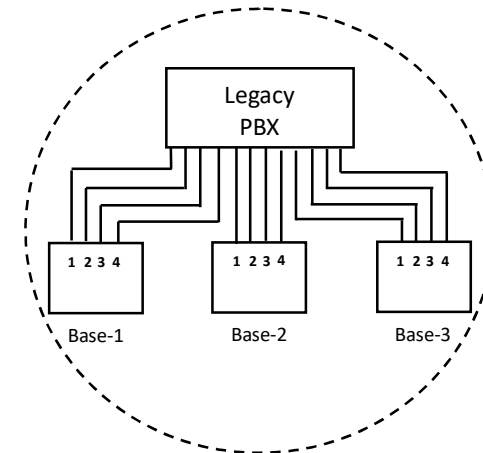

Re : Handsets can answer calls from any port or line, unless port is dedicated to a specific handset or group.

1. Handset Registration.
 - a. Press **REG** button on Base 00(default), four LEDs will light up in setting mode
 - b. Handset operation: Press **MENU**→**6**→**1**. (It will complete the registration process)
 - c. Repeat, as needed, to add handsets

2. Establishing additional Base Units:
 - a. Press REG button on new Base.
 - b. Use Handset 10 or 11 to Add base :
Press **MENU**→**8**→**1**
Enter 01~07 (base ID)
 - c. Repeat, as needed, to add base units

☎ 10
Select Mode:
1. Add Base

☎ 10
Added Base
Number : **
CANCEL

Notes:

1. Only Handset 10, 11 can assign Base ID.
2. Base 00 is a primary base. All handset must register only on Base 00.
3. To avoid interference, the interval between any two bases should be at least 10 meters.

Handset and Charger Installation

1. Plug the transformer end of the Charger AC/DC adaptor into a standard AC electric power outlet, plug the other end into the “DC In” jack on the back of the Charger.
2. Install battery pack onto the handset.
3. Install handset antenna.
4. Place handset onto the charger front slot.
5. The phone system is now ready to perform basic functions such as making and receiving phone calls and intercom calls. No base station or handset programming is needed for basic operations.
6. Charging cradle may be wall mounted, but an “L” bracket should be used for support under the cradle to avoid breaking mounting slots. An “L” bracket is not included, but can be purchased from a local home center.

Note:

1. The handset packaged along with a Base Station is pre-registered at the factory. If you have a new handset, you will need to register the handset with the base station in order to be recognized as a member handset by the base and by other handsets. See Handset Registration.
2. Fully charge battery packs before the first usage.

Basic Operations

Operation Modes

Both the base station and handset have levels of operation at which time only certain procedures of functions can be performed.

Re: The main difference between DuraFon PRO and DuraWalkie is the handset of DuraFon PRO has the capability to make telephone calls, and the handset of DuraWalkie does not.

A. Base Operation Modes


1. **IDLE mode**- this is the default mode. The intercom, broadcast, and volume keys are active in IDLE mode.
2. **TALK mode**- the base operates in this mode during a phone call, intercom use, and broadcast operation. The “In Use”, “Intercom”, and “Broadcast” LED will light up respectively.
3. **REGISTRATION mode**- the base enters this mode by pressing the **REG** button for three seconds. There are no active base unit keys once this mode has been entered. Four LEDs will light up in Registration mode.

B. Handset Operation Modes


1. **IDLE mode**- this is the default mode.
 - a. If there is no on-going activity, the handset automatically goes into SLEEP/IDLE mode to save battery power.
 - b. The handset can be turned off completely by holding down the **END** key for 3 seconds.
 - c. The idle screen display (custom name) can be edited.
 - d. The 2-digit number represents the handset ID.
2. **MENU mode**
 - a. Press the Right soft function key to activate MENU mode.
 - b. In MENU mode, the handset settings and information contained in memory can be changed.
 - c. The functions available through the MENU selection are covered in greater detail from page 52.
 - d. The MENU structure display as below:

Menu Tree



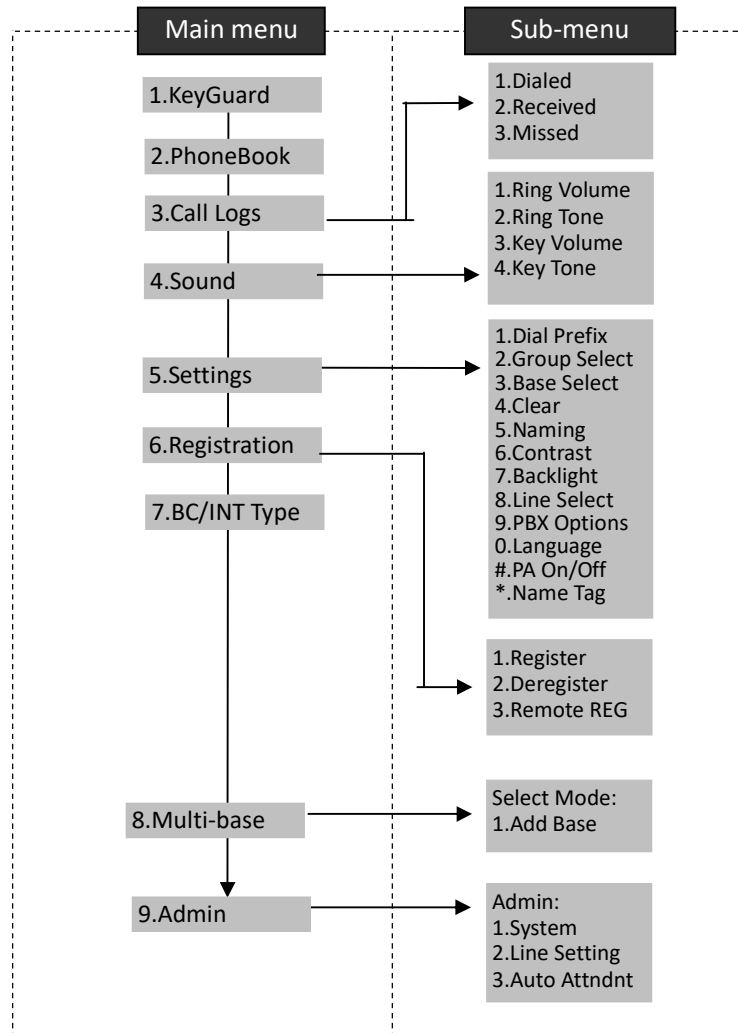

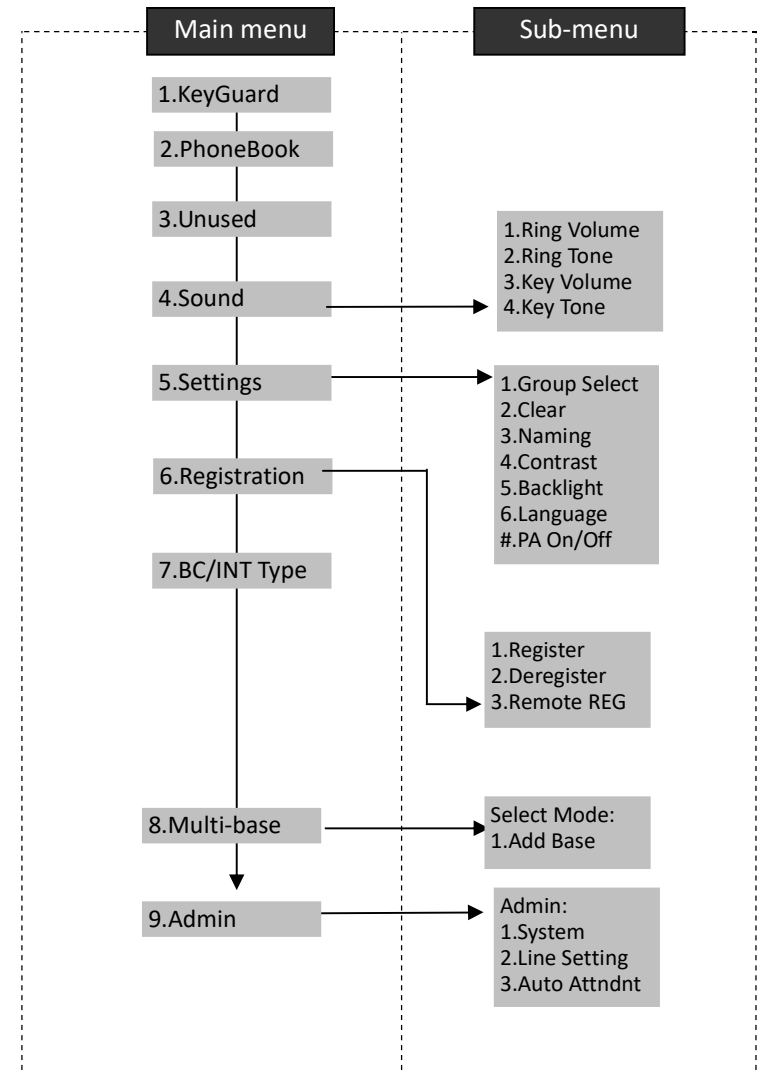


DuraFon PRO



DuraWalkie



Making a Telephone Call (For DuraFon PRO only)

1. Press , wait for dial tone, and then enter phone number.
2. Alternatively, you can enter phone number first then press  key. When using this method, you can use the **CLEAR** (Left) and **DELETE** (Right) soft keys to edit the number entered. "Delete" erases the last digit entered. "Clear" erases the entire line but remains in the dialing mode.
3. **Speed dial** by access the entries in the phone book
 - a. Press  or  scrolling key to enter the phone book
 - b. Press  to dial the number.
4. To abort dialing, press  key.
5. During the call, press and hold the  key to activate the speakerphone.

Notes:






1. After a link is established, the Base ID will appear on the upper-right corner. If no Base ID shows up, it implies that you are approaching the boundary of the coverage.
2. If the line is occupied, the LCD shows "No Line Available" and handset returns to standby mode.
3. If a link cannot be established, the LCD will show "No Base" after a 12-second time out.
4. A call duration timer will start displaying the length of the call after link is established.

Making a 2-Way/ Intercom Call

The EnGenius Industrial Cordless Phone System offers private, Intercom/ 2-way radio calls independent of the base station. Intercom/ 2-way communication can be placed from handset to handset.

Handset to Handset Calls






1. Press  key followed by a two-digit handset ID or Group ID.





2. Press  key to end the call.
3. During the call, press and hold the  key, the speakerphone is active.
4. **Speed dial** by access the entries(2-digit ID) in the phone book
 - a. Press  or  scrolling key to enter the phone book
 - b. Press  to dial the 2-digit number.

Notes:


8. Intercom calls can be made regardless if the Base Station is present.
9. If a Group ID is entered, the first handset (belonging to that group) that answers will establish a link with the caller. See Handset Group Subscription.
10. If a link cannot be established, the LCD shows "No Connection" after a 12-second time out.

Making a Broadcast



1. Broadcasting all handsets
 - a. Press & hold  key from one handset
 - b. A series of beeps will indicate initiation of handset broadcast to all handsets within communication coverage
 - c. Begin speaking after the series of beeps has ended.
 - d. Release  key to end the broadcasting
2. Broadcasting a group of handsets
 - a. Enter the Group ID and then press & hold  key
 - b. A series of beeps will indicate initiation of handset broadcast to all handsets within communication coverage
 - c. Begin speaking after the series of beeps has ended.
 - d. Release  key to end the broadcasting
3. Broadcasting an individual handset
 - a. Enter the Handset ID and then press & hold  key
 - b. A series of beeps will indicate initiation of handset broadcast to all handsets within communication coverage

- c. Begin speaking after the series of beeps has ended.
 - d. Release  key to end the broadcasting
4. **Speed dial** by access the entries(2-digit ID) in the phone book
 - a. Press  or  scrolling key to enter the phone book
 - b. Press  to dial the 2-digit number.

Notes:



1. You need to continuously press  key when doing broadcast. The broadcast will be over once user release the key.
2. You need to notice that there is no bi-bi-beep sound when receiving a broadcast.
3. You can press the **SILENT** (Left) soft key if you choose to ignore the call. The **SILENT** key operation is valid only for the current call. You can silent all broadcast by turning off the ringer to set auto-silence from the handset menu.

Redial (For DuraFon PRO only)

1. Press **REDIAL** (Left) soft key.
2. The LCD shows the last phone number dialed. To dial this number, press **DIAL** (Left) soft key.
3. Use  or  Key to scroll through the last 10 phone numbers dialed. Select and press **DIAL** key.
Note: Intercom numbers (Handset ID) are not stored in the last 10 numbers dialed log.

Receiving a Telephone Call (For DuraFon PRO only)




1. When an incoming call arrives, the handset will ring or vibrate unless the ringer has been turned off.
2. If the handset is on the charger cradle (ringer will be temporarily switched to "Ring" if it has been set to "Vibrate"), lift the handset and start the conversation.

3. If the handset is not on the cradle, press any key (except , and the **SILENT** soft key) to answer.
4. During the call, press and hold the  key, the speakerphone is active.

Notes:

1. You can press **SILENT** (Left) soft key if you choose to ignore the call. Unlike turning off the ringer (from the handset menu), the **SILENT** key operation is valid only for the current call.
2. If Caller ID service is available, the LCD will display the incoming call information. If the LCD shows "Private" or "Unknown", the caller's information may have been blocked by the caller or the originating phone company.


Receiving an Intercom Call

1. When an intercom call arrives, the handset will ring or vibrate unless the ringer has been turned off. Press  to answer the intercom call.
2. If the handset is on the charger cradle (ringer will be temporarily switched to "Ring" if it has been set to "Vibrate"), lift the handset and start the conversation.
3. If the handset is not on the cradle, press any key (except , and the **SILENT** soft key) to answer.
4. During the call, press and hold the  key, the speakerphone is active.



Notes:

1. The LCD displays the caller's Handset ID.
2. You can press the **SILENT** if you choose to ignore the call. Unlike turning off the ringer the **SILENT** key operation is valid only for the current call.

Ending a Call

To end a telephone or intercom call, press  key or place handset into charging cradle.

Adjusting Receiver (Earpiece) Voice Volume

1. Voice volume can only be adjusted during a call.
2. There are 6 levels of volume selections. Default as volume 2. Use  and  scrolling key to adjust.
3. The new setting remains effective for all future calls until changed.

Placing a Call On Hold (For DuraFon PRO only)

1. When a call is in progress, it can be put on hold by pressing the **HOLD** (Right) soft key.
2. To return to the conversation, press **UNHOLD**

Notes:

1. The call being placed on hold can only be removed from **HOLD** by the handset that puts it on hold.
2. Handset LCD displays a call is being on hold. An alert tone (double beep) every 30 seconds will remind the handset that a call is being on hold.
3. If the operation (e.g., call transfer) after putting a call on-hold fails, the held call may be dropped.
4. You can power off the handset (e.g., change battery) while call is on hold. After power on again, you can continue the call by pressing **UNHOLD** (Left) soft key or select "3" from the Option menu to terminate the hold state.
5. You can only unhold the call when within the coverage area of the base. Once you're out of the base coverage, you can return to stand-by using "Clear hold" function in the OPTION list item #3.

Mute

1. After a link is established, you can press **OPTION** (Left) soft key and

press **0** to mute the handset microphone.

2. When mute is active, the other party will not hear your voice, but you can still hear the other party.
3. To end the mute, press **OPTION** (Left) soft key and press **0** to unmute the handset microphone.

Re: If established an intercom call, when end the mute, press **UNMUTE** (Left) soft key.

Do Not Disturb (Silent Ring)

1. Enter the key sequence **MENU** → 4.Sounds → 1.Ring Volume, then select "Off". Press **SAVE** to confirm your choice. This will turn off the ringer until it is turned on again from the menu.
2. For temporary silencing the ringer when an incoming call arrives, press **SILENT** (Left) soft key.



Key Guard

1. To prevent accidental dialing, you can press **MENU** (Right) soft key, then press **1** to select KeyGuard option. The handset keypad is locked. No key entry is accepted except the power on/off key.
2. To unlock the keypad, press **UNLOCK** (Left) soft key, then, within 2 seconds, press the digit "1" to unlock.
3. Key Guard is in effect until unlocked or powered off.

To View Missed Call(s) (For DuraFon PRO only)

1. Whenever you have missed incoming call(s), you can press **VIEW** soft key to enter the call logs information.
2. You need to subscribe the caller ID service from local telephone company to retrieve this data.

To Call back from Call Log (For DuraFon PRO only)

1. When you review missed incoming call(s), you can directly call back by pressing  key.
2. The displayed CID number in most cases will be a 10-digit number with the 3-digit area code followed by the 7-digit telephone number. If the area code is unnecessary for calling back, you can follow below rule to adjust the calling back number:
 - a. Press **FORMAT** key once, the 3-digit area code will be removed.
 - b. Press **FORMAT** key twice, "1" will be added in front of the displayed number.
 - c. Press **FORMAT** key three times, it will loop back original displayed number.Re: The CID default is 10 digits, when press **FORMAT** key, it will be 7-digit → 11-digit → 10-digit in circle.
3. After the displayed number chosen, press the  key to call back.

Battery Recharge and Replacement

1. Charge the battery when one or several of the following happen:
 - a. Phone beeps twice every two seconds.
 - b. Battery icon is empty.
 - c. Phone does not respond when a key is pressed.
 - d. LCD and backlighting become dim.
 - e. A decrease in coverage is experienced.
2. You can replace the handset battery after placing the call-in-progress on hold.
3. Battery talk time and standby time vary depending on the talk/standby pattern and the operating distance. Returning the handset back to the charging cradle as often as possible is recommended for best performance. **Use only manufacturer provided battery and charger!**

Advanced Operations

Handset Registration

1. If your handset is purchased as part of a system, it has been pre-registered with the base station at the factory.
2. If the Handset ID reads "00," that means it is a new handset or the ID has been erased. You need to register the handset with the base station. In certain situations, you may want to change a handset's ID. For example, you want to change a particular handset from a user to an administrator (ID 10 or 11), or vice versa. Or in some rare occasions, you find another handset having the same Handset ID.
3. Registration:
 - a. Press MENU-6 to enter the registration mode
 - b. Press and hold the base's Registration (REG) button for 2 seconds until 4 LEDs light up.
 - c. Press handset key "1", this completes the registration process. The base station will assign a handset ID between 10 and 99. The assigned ID will be displayed on the handset LCD, indicating successful registration.
 - d. Repeat above steps for all additional handsets.
 - e. The first two handsets registered will be given ID 10 and 11, which gives them administrator privileges.Re : Base 00 is a primary base. All handsets must register to Base 00.
4. De-registration:
 - a. You can de-register a handset from a base. De-registration will reset the Handset ID to 00, erase the system security code, and free up the old ID for future registration.
 - b. After deregistration, the handset will not be able to use the base to make or receive phone calls, nor can it use the intercom to reach other handsets.
 - c. Press handset **MENU** (Right) soft key.
 - d. Press the handset number key **6**, this will enter the handset registration menu.
 - e. Press and hold the base's **REG** button for 2 seconds until 4 LEDs come on
 - f. Press the handset number key **2**, this completes the de-registration process. Upon successful de-registration, the

handset will show ID "00".

Notes:

1. The base has a 30 second registration timeout starting from pressing the **REG** button. The handset has a 12 second registration timeout starting from the time registration or de-registration option has been selected. The base and handset will automatically exit registration mode after timeout.
2. Repeat registration or de-registration process if unsuccessful.

Advanced Registration:

1. Advanced registration functions can be performed by administrator handsets (ID 10 and 11) only.
2. Administrator handsets can perform advanced registration function as long as it is within range with the base station. The base station does not need to be in registration mode.
3. De-register a Handset ID by administrator:
 - a. Make sure that the administrator handset is within the coverage range of the base station.
 - b. Press administrator handset **MENU** (Right) soft key
 - c. Press the number **9**, this will enter the handset administration menu.
 - d. Press number **1**, handset enters system setting menu.
 - e. Press number **4**, and enter the two-digit Handset ID to be cleared.
 - f. Upon successful operation, the handset LCD will display "Done", otherwise it will show "Message not received, try again".
4. Obtain a Specific Handset ID:
 - a. If a particular Handset ID is preferred over sequentially assigned ID, the administrator can "tell" the base in advance what the next ID assignment should be.
 - b. Press administrator handset **MENU** (Right) soft key.
 - c. Press the number **9**, this will enter the handset administration menu.
 - d. Press number **1**, handset enters system setting menu.
 - e. Press number **5**, and enter the two-digit Handset ID to be assigned next by the base.
 - f. Upon successful operation, the handset LCD will display "Done,"

otherwise it will show "Message not received, try again."

- g. If the handset ID is already in use by another handset, the administrator will be alerted. In that case, the administrator can choose another ID or asks the handset having the desired ID to vacate by de-registering with the base.
 - h. Perform registration immediately afterward for the handset desiring a specific ID to ensure that the ID is not taken by another handset.
5. Remotely register Handset :
 - a. If base install in ceil or higher location, administrator handsets can perform remote registration.
 - b. Press administrator handset **MENU** (Right) soft key
 - c. Press the number **6**, this will enter registration mode.
 - d. Press number **3**, this will replace the procedures to press & hold the base **REG** button until the 4 LEDs come on.
 - e. Proceeding the handset registration process for new handsets.

Notes:

1. De-registration by the administrator will disable a handset's ability to use the base station to make or receive phone calls. This also frees up the ID for future registration.
2. Handsets de-registered by the administrator can still perform intercom to other handsets.

Handset Group Subscription

1. Up to nine handset groups (01-07) can be defined and handsets can decide which group(s) they want to be in.
2. For example, Group 1 represents the Customer Service Group, Group 2 represents the Sales Group, and Group 3 is the Marketing Group. Suppose that Handset 11 wants to receive incoming rings for all Sales and Marketing related calls. Then handset 11 will need to "subscribe" to Group 2 and Group 3.
3. Group Selections:
 - a. Press handset **MENU** → **5** to enter the handset setting menu
 - b. Press number **2**, handset enters group select menu.
 - c. Press **ADD** soft key and enter two-digit group number (01~07) to add membership in a group.

- d. Repeat for all desired groups.
- e. Delete group selections by pressing **DELETE** (Right) soft key and enter group number.

Notes:

1. The handset can change group affiliations at any time.
2. The base (administrator) is not responsible for group assignments. Consequently, it cannot unsubscribe a handset from a group.

Call Transfer (Register to PRO base only)




1. While a telephone call is in progress, you can place the call on hold and transfer the call.
2. Press **HOLD** soft key to put call on hold.
3. Press **OPTION** soft key to enter feature list for selection.
4. Press number **2** and enter a two-digit Handset ID to call another handset extension.
 - a. Un-announced Call Transfer:
Press **END** before the destination handset answers, the call is automatically transferred to the destination handset.
 - b. No support Announced Call Transfer in DuraFon PSL-BU

Notes:

1. If the destination handset does not answer after handset paging timeout, the call is routed back to the originating handset.
2. Above described "Call Transfer" is for DuraFon PRO handset-to-handset call transfers.

Base Select (Register to PRO base only)

1. A handset can manually select the desired base station before access outbound line.
2. Press handset **MENU** (Right) soft key.
3. Press the number **5**, this will enter the handset setting menu.

4. Press number **3**, handset enters Base Select setting mode.
5. Use  or  arrow to scroll up and down the selection on/Off.
6. Make a selection (default =off), and press **SAVE** (Left soft key).
Re: When turns on the Base Select, you must enter 2-digit Base ID after press  key.

Notes:

1. Because this setting allows handset manually select the base station, the handset must be in range with the direct base station.

Visual Message Waiting Indicator (VMWI)

VMWI feature is supported via FSK message signaling when received from the phone company telephone line or PBX system; It will activate a message icon on the handset display and flash the VOICE MESSAGE LED on the base.

Notes:

1. A subscription to the telephone company voice mail service is required.
2. If the handset still indicates the icon even after you have listened to all messages, turn it off by pressing and holding the "Caller ID" key on the handset.

Line Dedication (Register to PRO base only)





1. Line dedication function can be performed by administrator handsets (ID 10 and 11) only.
2. By default all incoming calls will ring all handsets.
3. With the administrative handset, press **MENU- 9 - 2 - 2** for Line Dedication setting.
4. It will first show Line 1 and line status. If you wish to dedicate line 1 to a specific handset or group, you need to press **CHANGE**. For DuraFon PSL-BU base, you don't need to set line2-4 related setting.

5. After choosing a line, it will show **YES** and **NO**, when choosing **YES**, you need to enter the handset ID or group ID for extension number. If you choose **NO**, it will go back to Line Setting menu.

Notes:

1. When entering Line Dedication setting, it will show line and status. If line is already dedicated to a specific handset or group, it will show the handset or group ID behind the line. If line isn't dedicated to a specific handset yet, it will show "ALL HS" behind the line.
2. When setting Line Dedication, make sure the handset or group ID is correct to avoid losing calls sent to an DuraWalkie handset or invalid ID.
3. Handsets dedicated to a port will also receive calls from non-dedicated line as well as the handset's dedicated line. Use Line Dedication for a group on other lines to further manage calls

Line Selection (Register to PRO base only)

1. Press **MENU** - **5** - **8** while the phone is in standby to enter Line Select menu.
2. Use  or  to switch between **On** and **Off**, default = Off.
3. If set to On, when pressing  or entering a phone number followed by pressing  key, the handset LCD display will show "Select Line" followed by available lines (1~4). Select from one of the available lines i.e. press **1** to select line 1 and press **2** to select line 2. For DuraFon PSL-BU base, you should press **1** only.

Change System and Line Settings by Administrator (Register to PRO base only)

1. There are two system parameters that can be changed by the administrator: clear (de-register) handset ID and set the next handset ID to be assigned by the base.
2. From an administrator handset (Handset 10 or 11), press **MENU**(Right) soft key.

3. Press number **9**, this will enter the administration menu.
4. Press number **1**, handset enters System setting menu.
 - a. Dial tone:
Press **1** to set up the dial tone to be either "Tone" or "Pulse."
Press **1** to choose "Tone" or press **2** to choose "Pulse."
 - b. Flash time:
Press **2** to set up the flash time from 100ms, 200ms, to 900 ms (9 levels to choose from.) For example, press **2** if the desired flash time is 200ms.
 - c. Line Detect:
Press **3** to set up the line detect to be either "On" or "Off."
Press **1** to choose "On" or press **2** to choose "Off". Default is "Off". For DuraFon PSL-BU base, no support Line Detect. The setting is invalid.
 - d. Clear Handset ID:
Press **4** and enter a two-digit Handset ID when prompted to clear this ID for later assignment.
 - e. Set next Handset ID to be assigned:
Press **5** and enter a two-digit Handset ID when prompted. This is the ID that will be given out by the base to the next handset registering with the base.
5. Press number **2**, handset enters Line Setting menu.
 - a. Enter Base ID(00~07) to access base.
 - b. Press **1** to enter Broadcast setting
 - i. Press handset **OFF**(Right soft key) to disable broadcasting function;
 - ii. Or press handset **ON**(Left soft key) to enable broadcasting function
 - c. Press **2** to enter Line dedication setting
 - i. Select base's line and press handset **OK**(Right soft key)
 - ii. Line Dedicate confirm:
Press **NO**(Right soft key) to go back Line Setting Menu.
Press **YES**(Left soft key) then enter extension number.

Note:

De-registration by the administrator will disable a handset's ability to use the base station to make or receive phone calls. This also frees up the ID for future registration

Phonebook Operations

1. You can store up to 90 entries in the phonebook. Each entry can contain a phone number or handset ID (up to 28 digits) and a name (up to 14 characters).
Re: For DuraWalkie, each entry can store 2 digits handset ID or Group ID.
2. To access phonebook, press **MENU** followed by **2** or **▲** or **▼** scrolling key when handset in standby mode.
3. To add a new entry:
 - a. Press **ADD** soft key.
 - b. Enter a phone number when LCD prompts "Number?" Use **DELETE** soft key to delete the last digit entered. Press **SAVE** when completed.
 - c. You will then be prompted to enter a name for the phone number just entered.
 - (1) Press **SAVE** key to enter a phone number without a name. All records without a name will be placed on top of the list, in the order they are entered.
 - (2) To enter the name, press the corresponding keypad number one or more times according to the order of the character on the key.
 - (3) Use **DELETE** soft key to delete the last character entered. When completed, press **SAVE** soft key to confirm your selection.

Notes:

When entering a phone number, the cursor automatically advances to the next digit field. Use **▲** or **▼** scrolling key to move the cursor backward or forward to insert or delete.

When entering a name, the cursor automatically advances to the next character field if you press a different key for the next character. If you need to enter consecutive characters from the same key, you can wait for the cursor to advance or use **▲** or **▼** scrolling key to move the cursor backward or forward manually. Also use **▲** or **▼** to move the cursor to insert or delete.

By default, all letters are entered in the upper case. Use the ***** key to toggle between upper and lower cases.

A "Pause" entry represents a 0.5 second delay in dialing the following digits, which is useful when calling a sequence of segmented numbers (e.g., access code, credit card number, auto-attendant entries, etc.)

Pause is entered by pressing the ***** key twice (LCD displays P). Entering pause twice (PP) will result in 5.6 seconds pause in the dialing.

4. The entries are alphabetically sorted and stored as a list in an ascending order (A to Z) from the top of the list.
 - a. If the phonebook is entered from the menu, the first entry displayed is from the top of the list.
 - b. If the phonebook is entered using the **▼**, the first entry displayed is from the top of the list.
 - c. If the phonebook is entered using the **▲**, the first entry displayed is from the bottom of the list.
5. The first line of LCD display shows name and the 2nd line shows the phone number. If the phone number is longer than 14 digits, press **OPTION** soft key and select Option 3 to view the complete number.
6. To search for a record:
 - a. Use **▲** or **▼** scrolling key to enter the Phone Book mode.
 - b. Press a key that corresponds to the first character of the name you are looking for.
 - c. For example, you are looking for "EnGenius", and then press the number **3** once.
 - d. Use **▲** or **▼** scrolling key to locate the exact record you are looking for.
7. To erase phonebook entry:
 - a. Use **▲** or **▼** scrolling key or the alphabetical search method to locate the record to be erased.
 - b. Press **OPTION** soft key to enter editing menu.
 - c. Press **1** to erase the designated phone entry.
 - d. LCD shown "Are you sure?" Press **YES** to double confirm your change.

8. To edit phonebook entry:
 - a. Use **▲** or **▼** scrolling key or the alphabetical search method to locate the record to be edited.
 - b. Press **OPTION** soft key to enter editing menu.
 - c. Press **2** to edit the designated phone entry.
9. Dial from display:
 - a. Press **TALK** or Intercom to dial the phone number or Handset ID displayed.
10. To transfer phonebook:

To transfer phonebook, both parties have to enter the phonebook transfer mode firstly by following below:

 - a. Press **OPTION** follow by **4** or **▲** or **▼** scrolling key when handset in phonebook mode.
 - b. For phone sending party, press **1** to enter sending mode. Either press **TX ALL** (left soft key) to transfer all phonebook entries to another handset(s). Or press **TX ONE** (right soft key) to transfer one entry to another handset(s). Press 2-digit handset ID or group ID, then select all phonebook entries or one entry to be transferred.
Re : "00" means all handsets
During phonebook transferring, LCD shows "Sending" and 2-digit countdown on the LCD to indicate the phonebook numbers which are waiting for sending.
 - c. For phonebook receiving party, press **2** to enter receiving mode.
When entering the receiving mode, LCD shows "Ready".
Start to receive phonebook, LCD shows "Get phonebook from Ext. # : xx".
A beep emitted when receiving each phonebook.
When the phonebook receiving, 2-digit countdown on the LCD to indicate the phonebook numbers which are waiting for receiving.

Re: The phonebook transfer through the wireless interface, it may partially miss transmission by interference.

Notes:

Character Table:



Key	Characters and Orders
1	' + , . * () & 1
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
7	P Q R S 7
8	T U V 8
9	W X Y Z 9
0	0
*	Toggle case when in character editing * P (Pause) when in number editing
#	Space – when in character editing # when in number editing

Repeater Operation


1. Due to the range performance of handset to handset calls (intercom or broadcast) isn't as good as line calls, in order to get better range performance for handset to handset calls, install a repeater and make the calls via repeater is the solution.
2. The procedure of repeater's registration is same as the multi-base which can be performed by administrator handset (Handset 10 and 11).
3. From an administrator handset (Handset 10 or 11), press **MENU** – **7** to enter the "BC/INT Type" menu setting.
4. Press **▲** or **▼** key to select "Repeater Mode", then press **SAVE** (Left soft key) to confirm the selection.
Re : When setting to "Repeater" mode, the handset to handset calls will always via repeater.
5. Enter the base number (00~07) which assigned the base to be a repeater.
6. The default of "BC/INT Type" is "P2P Mode".





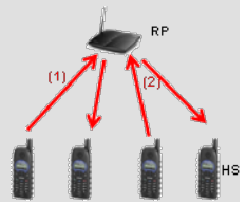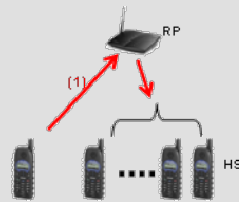

Notes:

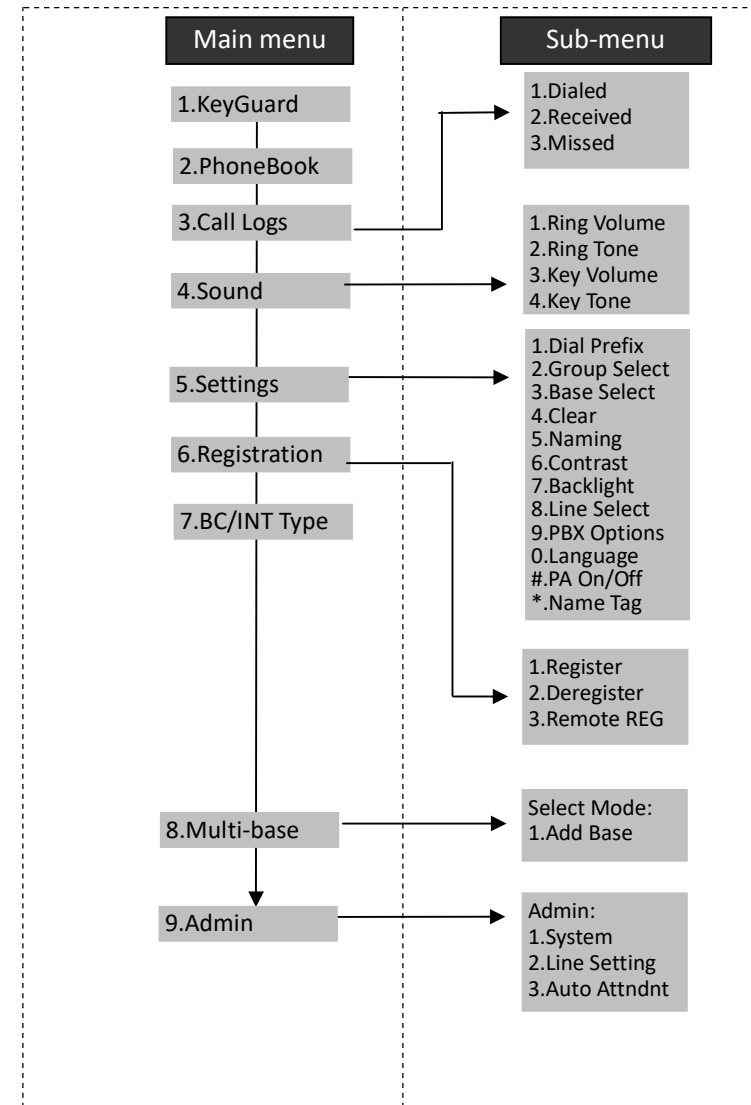- a. The repeater must work with PRO system.
- b. A repeater can only support 2 simultaneous intercom calls (2 pairs handsets).
Or can only support 1 broadcast call.

• Intercom**• Broadcast (PA)**














- c. In order to operate with a PRO system, the repeater must be assigned a base ID from the PRO system, please refer to the multi-base setup to add the repeater as a multi-base.
- d. The handsets which intend to work with the repeater require enabling a “Repeater Mode”.
- e. When enabling the “Repeater Mode”, both intercom and broadcast calls will go via the repeater, instead of the original direct handset to handset (P2P mode).
- f. A repeater will no longer support any PSTN call.
- g. No support put the repeaters in cascade.
- h. When using a repeater, if the repeater is busy or not available, after time out period (broadcast: 8 sec, intercom : 40 sec) the call will be convert to “P to P” instead.

Menu Operations**DuraFon PRO**

1. Press **MENU** (Right) soft key while the phone is in standby.
2. Press **1** (KeyGuard) to lock keypad (see Key Guard).
3. Press **2** (PhoneBook) to view, search, erase, edit and transfer the phonebook (see Phonebook).
4. Press **3** (Call Logs) to view the last 10 numbers called, received, or missed. Records can be erased or edit/save into the phonebook.
 - a. Press **1** (Dialed) to view the last 10 phone numbers dialed, starting from the most recent one. Use  or  to scroll through the list.
 - i. Press **OPTION** (Right) soft key for options.
 - Press **1** and confirm to erase the current record.
 - Press **2** to edit and save or save without editing into the phonebook.
 - Press **3** to view the complete number if the phone number is longer than 14 digits.
 - b. Press **2** (Received) to view the last 10 phone numbers received, starting from the most recent one. Use  or  to scroll through the list.
 - i. Press **OPTION** (Right) soft key for options.
 - Press **1** and confirm to erase current record.
 - Press **2** to view the arrival date and time of the call.
 - Press **3** to edit and save or save without editing into the phonebook.
 - c. Press **3** (Missed) to view the last 10 phone numbers received but not answered, starting from the most recent one. Use  or  to scroll through the list.
 - i. Press **OPTION** (Right) soft key for options.
 - Press **1** and confirm to erase current record.
 - Press **2** to view the arrival date and time of the call.
 - Press **3** to edit and save or save without editing into the phonebook.
 - d. The two-digit index on the upper right corner of the LCD display shows the location in ascending order, with 01 being the most recent call.
 - e. While viewing any of the three call logs, press **DIAL** (Left) soft key to dial the phone number.

Notes:

1. Only phone numbers are stored in the three call logs. Intercom calls are not recorded.
2. Caller ID service is required from your local phone company in order to receive phone numbers, names and time stamps on incoming calls. The Received and Missed Call Logs will register no incoming calls if Caller ID service is not available.
3. The Caller ID feature may not be supported by all PBX or Key systems' analog ports, check with your equipment provider

5. Press **4** (Sound) to set sound-related settings:
 - a. Press **1** to select ringer volume: Use  or  to scroll through 6 options: Low, Medium, High, Vibrate, Vib and Ring, Off. Press **SAVE** (Left) soft key to save selection. Default = High.
 - b. Press **2** to select ringer tone: Use  or  to scroll through 4 options: 0, 1, 2, and 3. Press **SAVE** (Left) soft key to save selection. Default = 0.
 - c. Press **3** to select key volume when a key is pressed: Use  or  to scroll through 3 options: High, Low, and Off. Press **SAVE** (Left) soft key to save selection. Default = Low.
 - d. Press **4** to select key tone: Use  or  to scroll through 4 options: 0, 1, 2, and 3. Press **SAVE** (Left) soft key to save selection. Default = 0.
6. Press **5** (Settings) to change handset settings:
 - a. Press **1** (Dial Prefix) to set dialing prefix:
 - i. Use  or  to scroll and select to turn on or off the dialing prefix feature. Default = Off.
 - ii. If "On" is selected, the handset is prompted to enter a prefix, up to 14 digits.
 - iii. Use **DELETE** (Right) soft key and  or  to edit prefix.
 - iv. When this feature is turned on, the LCD will prompt the user on each outgoing phone call except during redial or dialing by pressing the  key first whether to use the dialing prefix. The current prefix is also displayed. Press **"YES"** (Left) or **"NO"** (Right) soft key to add the prefix to the beginning of the number.

- v. This feature is useful for access code, calling card, and credit card calls, etc.
- b. Press **2** (Group Select) to Group Select: see Handset Group Subscription.
- c. Press **3** (Base Select) to set or turn Base Select on or off. Default = Off. See Base Select.
- d. Press **4** (Clear) to clear call logs and phonebook:
 - i. Press **1** and confirm to delete the entire phonebook.
 - ii. Press **2** and confirm to clear the three call logs (Called, Received, and Missed).
- e. Press **5** (Naming) to edit the name of Custom or Line:
 - e-1. Press **1** to change the power-up LCD display to show, e.g., customer name or other greeting message:
 - e-2. Press **2** (Naming line) to change the name of line, when calls coming, it will indicate the calls came from which line.
 - i. Use **▲** or **▼** to move the cursor backward or forward to insert (to the left of the cursor) or delete (the character above the cursor, or left of the cursor if cursor is on the right of the last character).
 - ii. Enter characters using the Character Table and method discussed in the Phonebook section.
 - iii. When finished, press **SAVE** (Left) soft key to save change.
- f. Press **6** (Contrast) to change LCD display contrast:
 - i. Use **▲** or **▼** to scroll through values **1 to 8**. Pick one that is most suitable to you. Default = **6**.
 - ii. Press **SAVE** (Left) soft key to save setting.
- g. Press **7** (Backlight) to change the LCD backlight:
 - i. Use **▲** or **▼** to scroll through options: On, Off, and 20 Seconds. Default = 20 seconds, meaning that the backlight on, will turn off after 20 seconds of inactivity.
 - ii. Press **SAVE** (Left) soft key to save setting.
- h. Press **8** (Line Select) to change the Line selection:
 - i. Use **▲** or **▼** to scroll through options: On or Off. Default = Off, meaning that you can not select the other available lines to dial.
 - ii. Press **SAVE** (Left) soft key to save setting.
- i. Press **9** (PBX Options) to change the PBX options:
 - i. Press **ADD** soft key to edit a PBX feature to be memorized and key in the name of the PBX features just like editing a phonebook entry.

- ii. Press **SAVE** (Left) soft key to save setting.
- iii. Press **OPTION** and **1** following by entering PBX options mode, you can erase the PBX option.
- iv. Press **OPTION** and **2** following by entering PBX options mode, you can edit the PBX option.
- v. Press **OPTION** and **3** following by entering PBX options mode, you can transfer the PBX options to other handset(s).

Re: To transfer PBX Options, both parties have to enter the PBX Option mode firstly by following below:

For sending party, press **1** to enter sending mode.

- Either press **TX ALL** (left soft key) to transfer all PBX options to another handset(s).
- Or press **TX ONE** (right soft key) to transfer a specific entry to another handset(s).
- Press 2-digit handset ID or group ID, then select all PBX options or a specific entry to be transferred ("00" means all handsets)
- During PBX options transferring, LCD shows "Sending", and 2-digit countdown on the LCD to indicate the numbers of PBX options which are waiting for sending.

For receiving party, press **2** to enter receiving mode.

- When entering the receiving mode, LCD shows "Ready".
- Start to receive PBX options, LCD shows "Get PBX options from Ext. # : x mmm x".
- When the PBX options is receiving, 2-digit countdown on the LCD indicates the number of PBX options which are waiting to be received.


Note:

1. Different PBX makers use different analog codes to control PBX function, like call transfer, call park, etc.; Please refer to your PBX maker's manual for this information.
2. Errors may occur in PBX options and phonebook entries transferred wirelessly due to interference. Please re-enter entry manually if problems occur with a entry.

- j. Press **0** (Language) to change Language:

- i. Use **▲** or **▼** to scroll through options: English, Spanish and French. Default = English, meaning the LCD display shows in English.
 - ii. Press **SAVE** (Left) soft key to save setting.
- K. Press **#** (PA On/Off) to turn Broadcast On/Off.
 - i. Press **On** (Left soft key) to turn on the broadcast function (including the broadcast of handset to handset and base to handset).
 - ii. Press **Off** (Left soft key) to turn off the broadcast function
Re: When broadcast setting "Off", there is an icon indicated in the display, side of the battery icon.
- L. Press ***** (Name Tag) to turn Name Tag On/Off.
 - i. Press **On** (Left soft key) to turn on the name tag function, when receiving the incoming calls, the LCD will show the name which stored in phonebook.
 - ii. Press **Off** (Left soft key) to turn off the name tag function.
7. Press **6** (Registration) to register or de-register handset: See Handset Registration.
8. Press **7** (BC/INT Type) to set up the intercom or broadcast via repeater (see Repeater Setup).
9. Item **8** (Multi-base) is to add new bases.
From an administrator handset (Handset 10 or 11) to set new Base 01~07. Maximum additional bases is up to 8. Before adding a new base, the Handset must be registered in master base (Base ID = 00).
 - a. Press **REG** button on new Base.
 - b. Use Handset 10 or 11 to Add base: Press **MENU** → **8** → **1**
 - c. Enter 01~07 (base ID)
10. Press **9** (Admin) to change system and Line setting: See System and Line Setting.

DuraWalkie

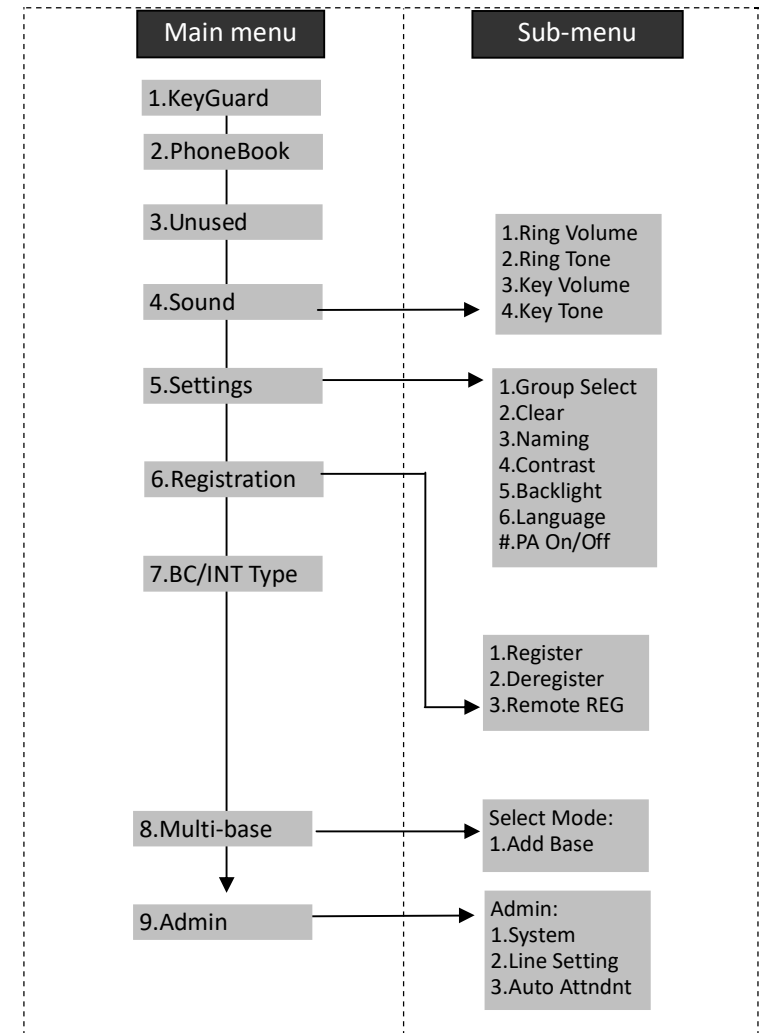

1. Press **MENU** (Right) soft key while the phone is in standby.

2. Press **1** (KeyGuard) to lock keypad (see Key Guard).

3. Press **2** (PhoneBook) to view, search, erase, edit and transfer the phonebook (see Phonebook).
4. Press **4** (Sound) to set sound-related settings:
 - a. Press **1** to select ringer volume: Use **▲** or **▼** to scroll through 6 options: Low, Medium, High, Vibrate, Vib and Ring, Off. Press **SAVE** (Left) soft key to save selection. Default = High.
 - b. Press **2** to select ringer tone: Use **▲** or **▼** to scroll through 4 options: 0, 1, 2, and 3. Press **SAVE** (Left) soft key to save selection. Default = 0.
 - c. Press **3** to select key volume when a key is pressed: Use **▲** or **▼** to scroll through 3 options: High, Low, and Off. Press **SAVE** (Left) soft key to save selection. Default = Low.
 - d. Press **4** to select key tone: Use **▲** or **▼** to scroll through 4 options: 0, 1, 2, and 3. Press **SAVE** (Left) soft key to save selection. Default = 0.
5. Press **5** (Settings) to change handset settings:
 - a. Press **1** (Group Select) to Group Select: see Handset Group Subscription.
 - b. Press **2** (Clear) to clear phonebook:
 - i. Press **1** and confirm to delete the entire phonebook.
 - c. Press **3** (Naming) to change the power-up LCD display to show, e.g., customer name or other greeting message:
 - i. Use **▲** or **▼** to move the cursor backward or forward to insert (to the left of the cursor) or delete (the character above the cursor, or left of the cursor if cursor is on the right of the last character).
 - ii. Enter characters using the Character Table and method discussed in the Phonebook section.
 - iii. When finished, press **SAVE** (Left) soft key to save change.
 - d. Press **4** (Contrast) to change LCD display contrast:
 - i. Use **▲** or **▼** to scroll through values **1 to 8**. Pick one that is most suitable to you. Default = 6.
 - ii. Press **SAVE** (Left) soft key to save setting.
 - e. Press **5** (Backlight) to change the LCD backlight:
 - i. Use **▲** or **▼** to scroll through options: On, Off, and 20 Seconds. Default = 20 seconds, meaning that the

- backlight is always on. The 20-second option will turn off the backlight after 20 seconds of inactivity.
- ii. Press **SAVE** (Left) soft key to save setting.
- f. Press **6** (Language) to change Language:
 - i. Use **▲** or **▼** to scroll through options: English, Spanish and French. Default = English, meaning the LCD display shows in English.
 - ii. Press **SAVE** (Left) soft key to save setting.
6. Press **6** (Registration) to register or de-register handset: See Handset Registration.
7. Press **7** (BC/INT Type) to set up the intercom or broadcast via repeater(see Repeater Setup).
8. Item **8** (Multi-base) is to add new bases.

From an administrator handset (Handset 10 or 11) to set new Base 01~07. Maximum additional bases is up to 8. Before adding a new base, the Handset must be registered in master base(Base ID =00).

 - a. Press **REG** button on new Base.
 - b. Use Handset 10 or 11 to Add base: Press **MENU**→**8**→**1**
 - c. Enter 01~07 (base ID)
9. Press **9** (Admin) to change system and Line setting: See system setting and Line Setting.

Technical Specifications

Electrical Specifications	Base Station	Portable Handset
Frequency	902-928 MHz	902-928 MHz
RF Power	Peak: 708 mW Average: 304 mW	Peak: 708 mW Average: 76 mW
Channel Spacing	400 kHz	400 kHz
Number of Channels	50	50
Modulation	MSK	MSK
Multiple Access	Frequency Hopping TDMA	Frequency Hopping TDMA
Frequency Hopping Rate	100 per second	100 per second
TDMA Frame Length	10 ms	10 ms
Number of Slots/Frame	8	8
Number of Users/Carrier	4	4
Receiver Sensitivity	< -108 dBm (@ BER 10 ⁻²)	< -108 dBm (@ BER 10 ⁻²)
Antenna Connector	Reverse TNC	Non-standard
Antenna Gain	2 dBi 5 dBi External (optional)	2 dBi (Long) 0.5 dBi (Short)
TX Power Control Range	NA	100-708 mW
Telephone Interface	RJ11 x 1	NA
Speech Coding	8 kbps G.729A	8 kbps G.729A
Channel Coding	8 kbps Convolutional + CRC	8 kbps Convolutional + CRC
Transmission Data Rate	170.667 kbps	170.667 kbps
User Data Rate	128 kbps duplex	128 kbps duplex
Duplex	Time Division Duplex (TDD)	Time Division Duplex (TDD)
Voice Quality	TIA/EIA-470B	TIA/EIA-470B
No. of System ID	65,536	65,536
Ring Signal	20-50 Hz, 15-90 Vrms	NA
Auto-Attendant Coding	8 kbps G.729	8 kbps G.729
Flash Time	100-900 ms programmable	NA
Power Source	100~240V/12V AC/DC Adapter	3.7V, 1700 mAh Li-ion Battery
Charger Current	NA	500 mA
Charge Time	NA	4 hours (from empty)
Regulation Compliance	FCC Part 15, Part 68	FCC Part 15, Part 68
Operating Temperature	0 – 50 °C	-10 – 60 °C
Storage Temperature	-10 – 70 °C	-10 – 70 °C
Humidity	20 – 75 %	20 – 75 %
Dimension without antenna	188 x 161 x 42 mm	161 x 58 x 31 mm
Weight	424 g	175 g

Notes:

1. NA = Not Applicable.
2. The manufacturer reserves the right to change designs and specifications without notice.

2
2-WAY/INTERCOM, 16

A
Administrator Features, 20
Adjusting Receiver (Earpiece)
Voice Volume, 39
Administrator Features, 24

B
Base Station Features, 23
Base Station Installation, 28
battery, 15, 16, 19, 27, 31,
32, 39, 41
Battery Recharge and
Replacement, 41
Battery Strength, 15
BROADCAST, 17, 36, 37
Broadcast through PBX, 52
Broadcasting a group of
handsets, 36
Broadcasting all handsets, 36
Broadcasting an individual
handset, 36

C
Call Transfer, 20
Call Forwarding, 45
Call Hold, 19
Call in-progress, 15
Call Timer, 19
Call Transfer, 19, 25, 45
Call Waiting, 18

Call Waiting with Caller ID,
18
Caller ID, 17, 18, 38, 56
Charger Features, 27

D
DTMF, 20
De-registration, 42, 44, 48
Dialing Prefix, 18
DND, 18
Do Not Disturb (Silent Ring),
40

E
Ending a Call, 39
Equipment Checklist, 12
Expanding coverage, 28

F
Flash time, 20
FCC, 8, 63

H
Handset and Charger
Installation, 31
Handset Charging Slot, 27
Handset Features, 15
Handset Group Subscription,
36, 44, 57, 61
Handset ID, 15, 36, 37, 38,
42, 43, 44, 45, 48, 51
Handset Registration, 29, 30,
31, 42, 59, 62
Handset to Handset Calls,

I**IC**, 8**IDLE mode**, 32Intercom, 2, 3, 15, 16, 22, 23,
32, 35, 36, 37, 38, 51, 56**Intercom in-progress**, 15
interference, 8, 30, 51**K**

Key Guard, 40, 55, 60

Key-guard, 18

L

Line Dedication, 46, 47

Line Indicator, 15

Line Selection, 47

MMaking a 2-Way/ Intercom
Call, 35

Making a Broadcast, 36

Making a Telephone Call, 35

MENU mode, 32**Multi-base setups**, 28Multiple handsets
registration, 17

Mute, 19, 39

N

Name Tagging, 18

Naming, 57

Naming line, 57

P

PBX option transfer, 19

Phonebook, 19, 49, 55, 57,
61

Placing a Call On Hold, 39

RReceiving a Telephone Call,
37Receiving an Intercom Call,
38

Redial, 37

Registration, 32, 42, 43

REGISTRATION mode, 32

Regulatory Information, 8

Ringer / Vibrator, 17

RSSI, 15**S**Spare Battery Charging Slot,
27**Speaker phone**, 15**Speed dial**, 35, 36, 37**T****TALK mode**, 32

TALK/FLASH, 16

Technical Specifications, 63

Three Call Logs, 18

To Call back from Call Log, 41

To View Missed Call(s), 40

transformer, 28, 31

Two-Digit Address Index, 15**W**

wall mounted, 31

Telecom

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the [EUT](#) of this equipment is a label that contains, among other information, a product identifier in the format **US: SNIW402A922PSLBU**. If requested, this number must be provided to the telephone company.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format **US: SNIW402A922PSLBU**. The digits represented by **02** are the REN without a decimal point (e.g., 02 is a REN of 0.2). For earlier products, the REN is separately shown on the label.

If your equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact the following address and phone number for information on obtaining service or repairs.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

Company: EnGenius Technologies

Address: 1580 Scenic Avenue, Costa Mesa, CA92626

Tel no.: 888.735.7888 ext. 827

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part

68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

"NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment."

"NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is [0.2](#). The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five."

« AVIS : Le présent matériel est conforme aux spécifications techniques d'Industrie Canada applicables au matériel terminal. Cette conformité est confirmée par le numéro d'enregistrement. Le sigle IC, placé devant le numéro d'enregistrement, signifie que l'enregistrement s'est effectué conformément à une déclaration de conformité et indique que les spécifications techniques d'Industrie Canada ont été respectées. Il n'implique pas qu'Industrie Canada a approuvé le matériel. »

« AVIS : L'indice d'équivalence de la sonnerie (IES) du présent matériel est de [0.2](#). L'IES assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5. »

USER MANUAL INFORMATION AGREEMENT

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the Bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

USOC Jack: RJ11

REN: 0.2A

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.

A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 02 is a REN of

0.2). For earlier products, the REN is separately shown on the label.

If this equipment SP-922PRO SL-BU, DuraFon PSL-BU causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in

order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact EnGenius

Technologies, Inc. ; 1580 Scenic Ave, Costa Mesa, CA 92626 USA ; 1-714-432-8668 ;

<https://www.engeniustech.com/>. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

The SP-922PRO SL-BU, DuraFon PSL-BU is not intended to be repaired by the customer.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this

equipment does not disable your alarm equipment. If you have questions about what will disable alarm

equipment, consult your telephone company or a qualified installer.

It is recommended that the customer install an AC surge arrester in the AC outlet to which this device is

connected. This is to avoid damaging the equipment caused by local lightening strikes and other electrical

surges.